



Illustrated Parts List

Model Series

128T00

TYPE NUMBERS
0110 through 5352.

TABLE OF CONTENTS

Air Cleaner	4
Blower Housing	7
Blower Housing-Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	7
Electrical	5
Engine Sump	2
Exhaust System	4
Flywheel	7
Flywheel Brake	5
Fuel Supply	3
Governor Spring	4
Ignition	5
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	7
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL




REQUIRED when replacing parts with warning labels affixed.


1058 OPERATOR'S MANUAL




1330 REPAIR MANUAL

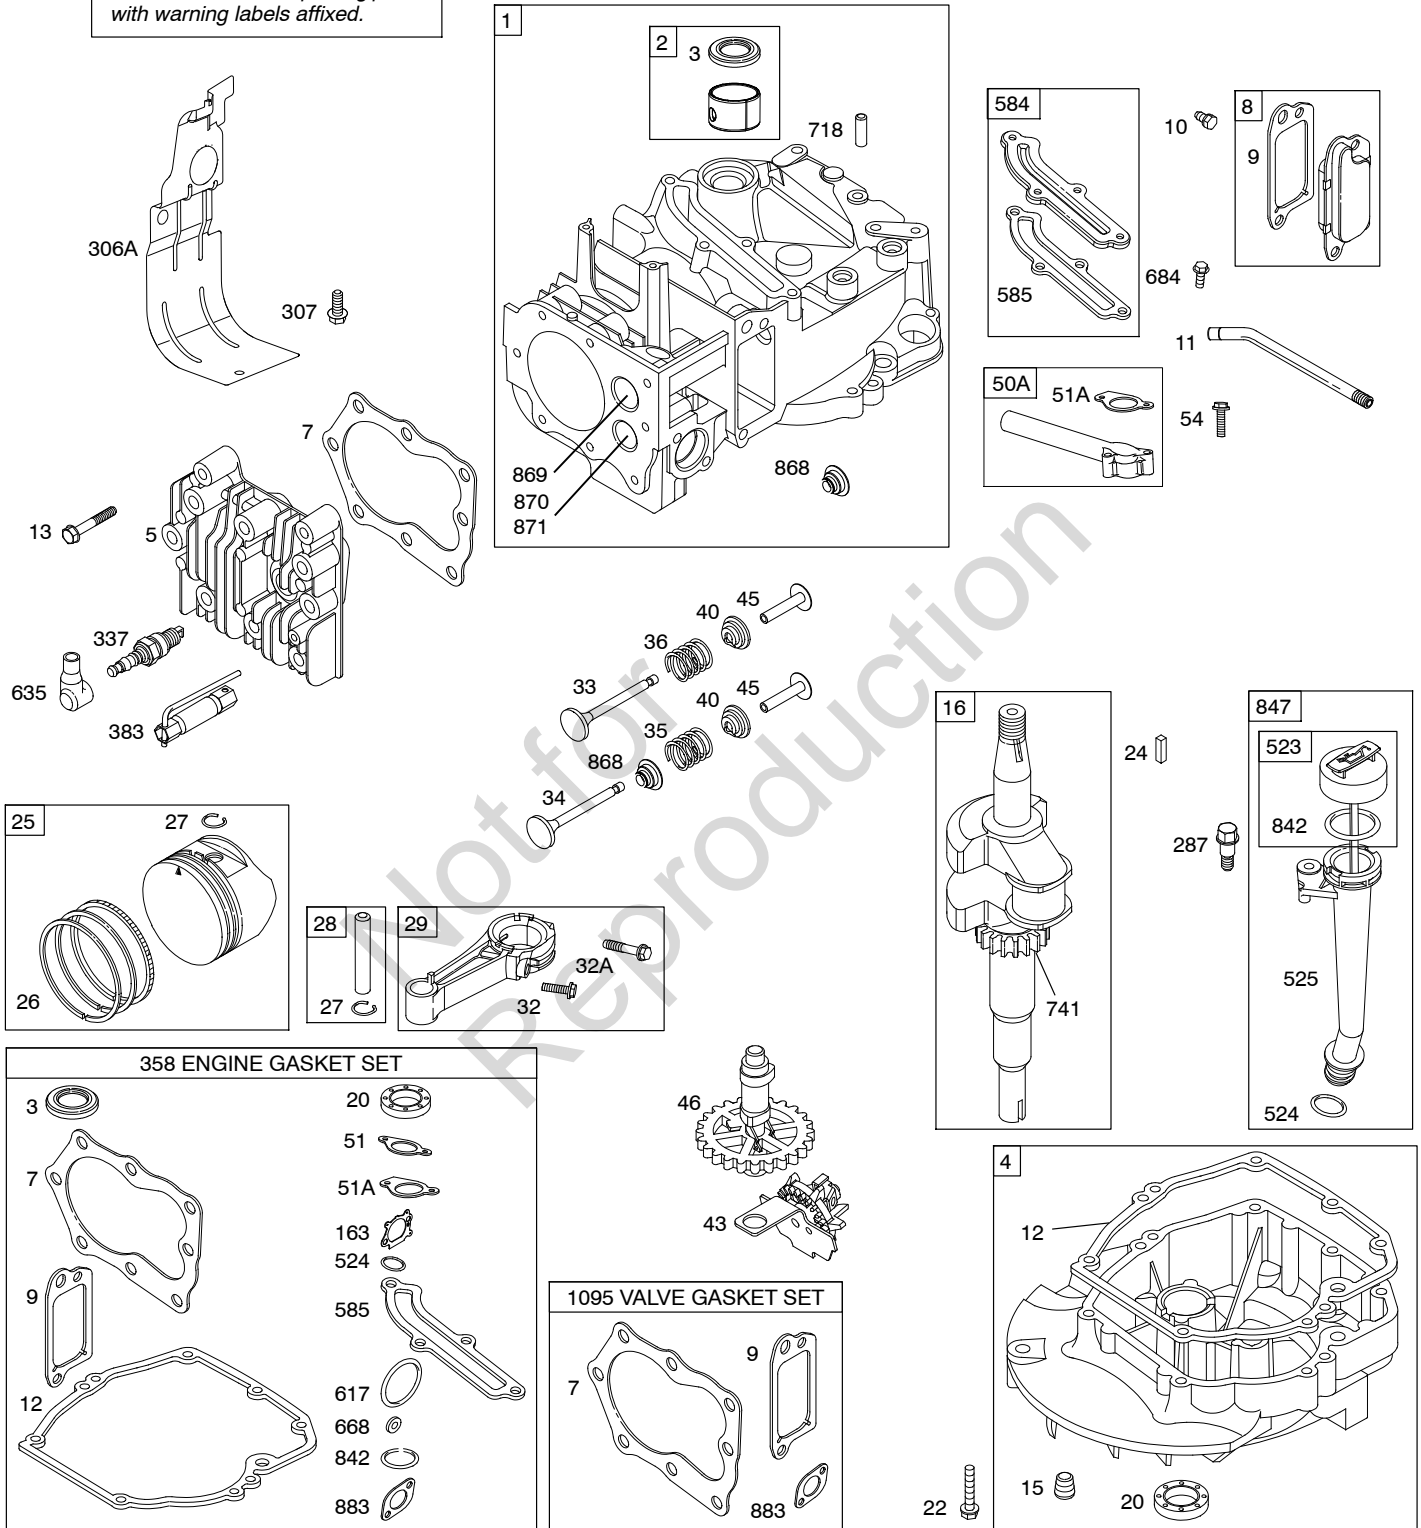







358 ENGINE GASKET SET

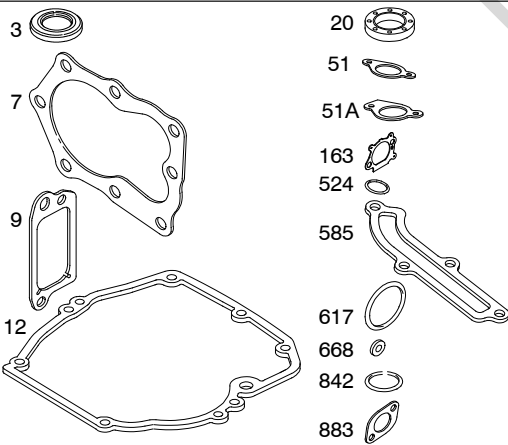


1095 VALVE GASKET SET










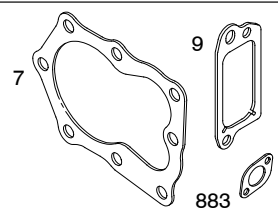


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10081-2 Assemblies include all parts shown in frames. 05/17/2013

  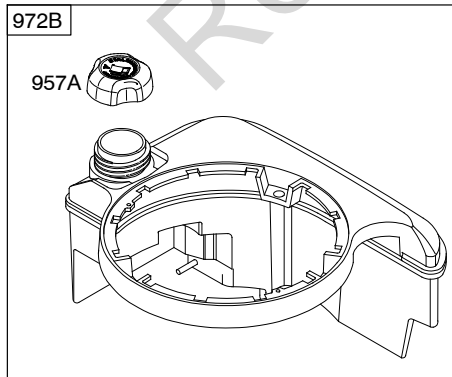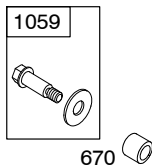 
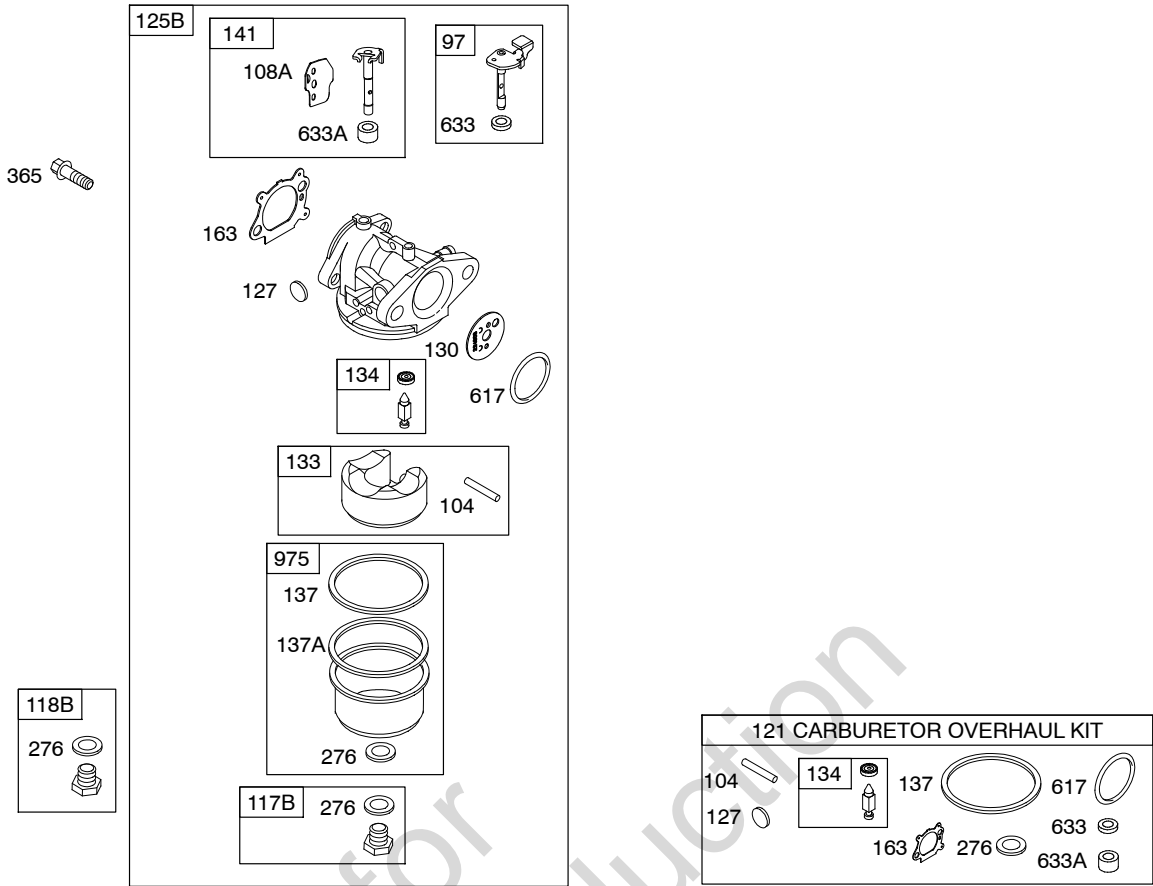


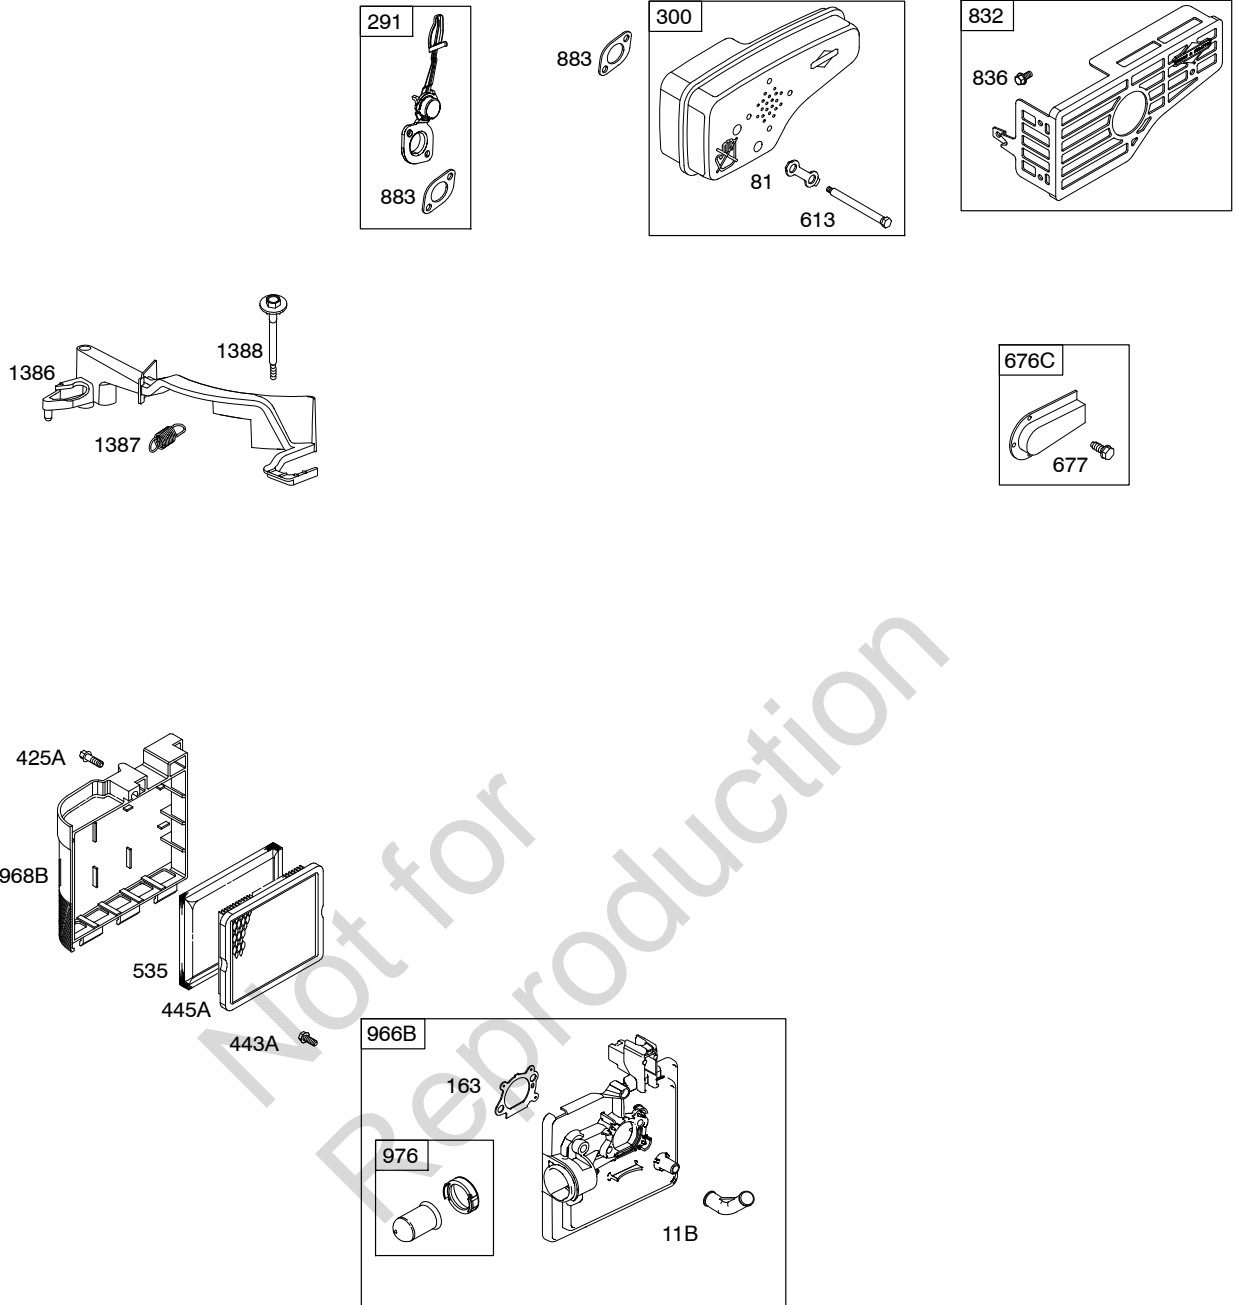


188 

   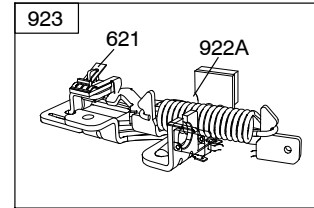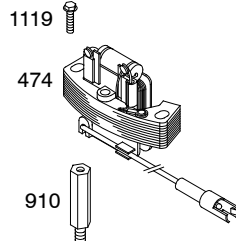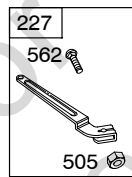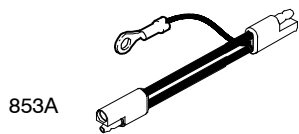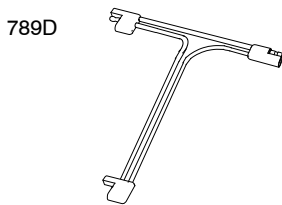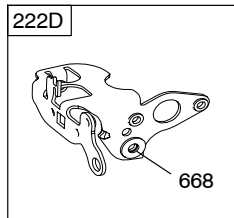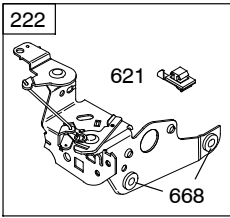











745 

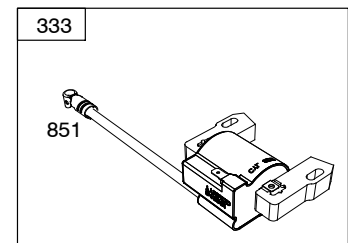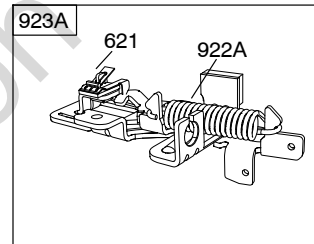






334 

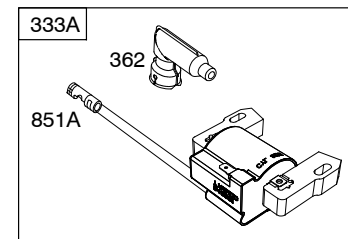




128T00

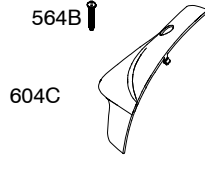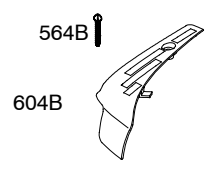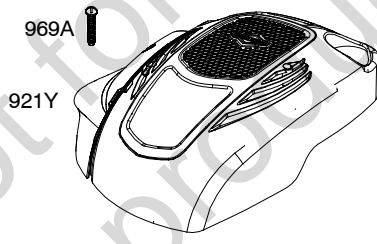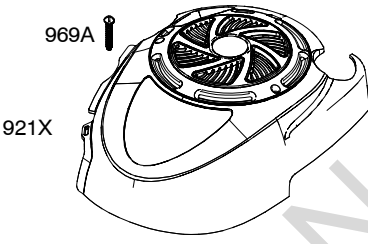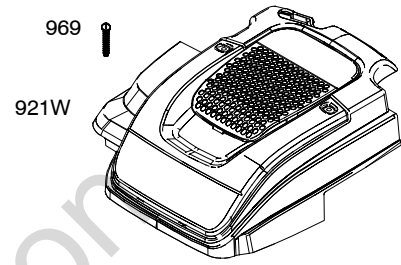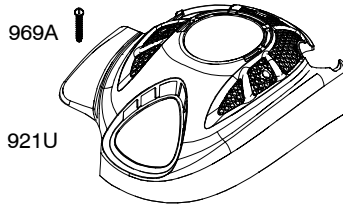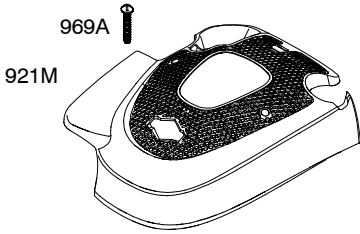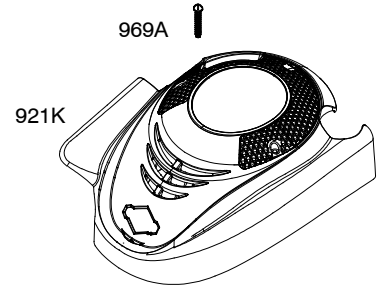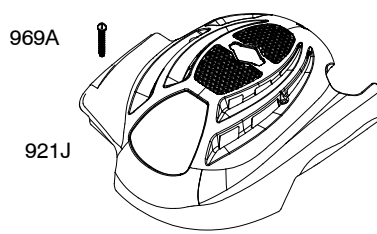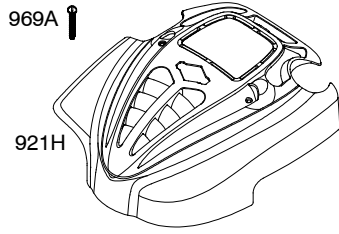

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10081-6 Assemblies include all parts shown in frames. 05/17/2013

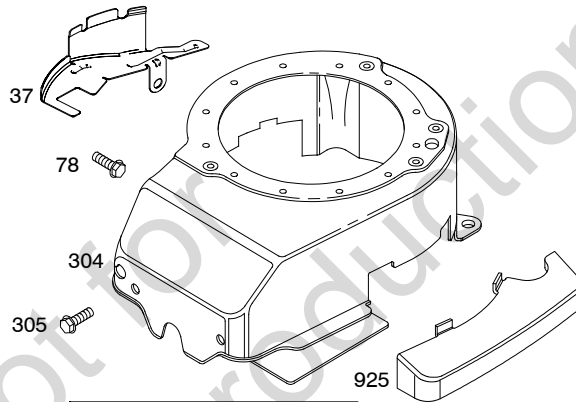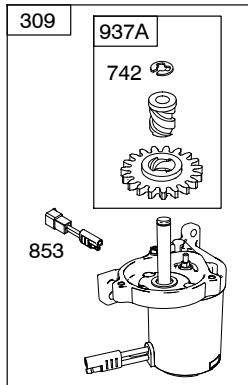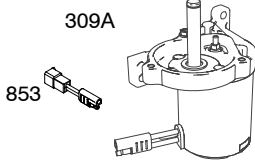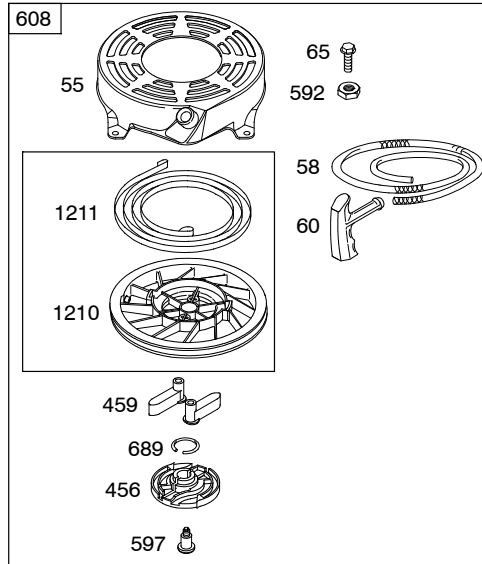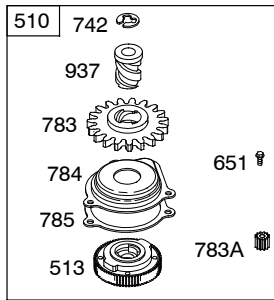

1036 EMISSIONS LABEL

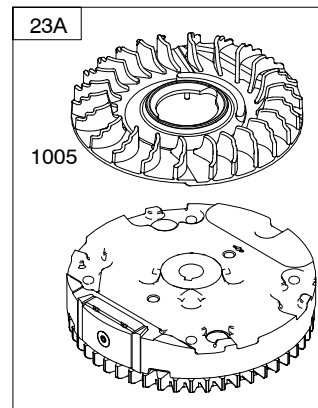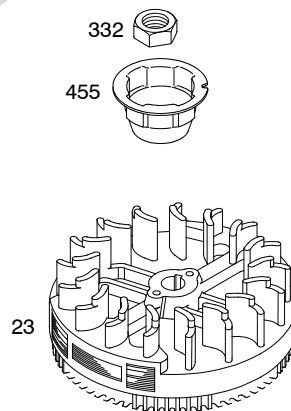 

128T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	590401	Cylinder Assembly			(Used Before Code Date 11070100).			797303 Piston Assembly (.020" Oversize) (Used After Code Date 09041600 and Before Code Date 11070100).
2	796961	Kit-Bushing/Seal (Magneto Side)	15	691680	Plug-Oil Drain (Square Socket)			799064 Piston Assembly (.020" Oversize) (Used Before Code Date 09041700).
3	299819s	Seal-Oil (Magneto Side)	16	797017	Crankshaft	26	590402	Ring Set (Standard) (Used After Code Date 11063000).
4	493279	Sump-Engine			----- Note -----			----- Note -----
5	590411	Head-Cylinder (Used After Code Date 11063000).			590807 Crankshaft Used on Type No(s). 3123, 3124, 3125, 3216, 3219, 3226, 3236, 3238, 5123, 5219, 5226, 5238.			797304 Ring Set (Standard) (Used After Code Date 09041600 and Before Code Date 11070100).
		----- Note -----			590808 Crankshaft Used on Type No(s). 0117, 3256.			795431 Ring Set (Standard) (Used Before Code Date 09041700).
7	799875	Gasket-Cylinder Head (Used After Code Date 11063000).			797019 Crankshaft Used on Type No(s). 0127, 2127.			590403 Ring Set (.020" Oversize) (Used After Code Date 11063000).
		----- Note -----	20	399781s	Sel-Oil (PTO Side)			797305 Ring Set (.020" Oversize) (Used After Code Date 09041600 and Before Code Date 11070100).
		691160 Head-Cylinder (Used Before Code Date 11070100).	22	691092	Screw (Crankcase Cover/Sump)			795432 Ring Set (.020" Oversize) (Used Before Code Date 09041700).
		692249 Gasket-Cylinder Head (Used Before Code Date 11070100).			----- Note -----			795433 Ring Set (.020" Oversize) (Used Before Code Date 09041700).
		----- Note -----	23	691987	Flywheel			797305 Ring Set (.020" Oversize) (Used After Code Date 09041600 and Before Code Date 11070100).
		799874 Gasket-Cylinder Head Used on Type No(s). 0126, 0129, 1607, 1608, 2125, 2127.	23A	591282	Flywheel Used on Type No(s). 0117, 3256.			795432 Ring Set (.020" Oversize) (Used Before Code Date 09041700).
8	590395	Breather Assembly	24	222698s	Key-Flywheel	27	691588	Lock-Piston Pin (Used After Code Date 09041600).
9	699833	Gasket-Breather	25	590404	Piston Assembly (Standard) (Used After Code Date 07090300).			----- Note -----
10	691125	Screw (Breather Assembly)			----- Note -----			691866 Lock-Piston Pin (Used Before Code Date 09041700).
11	691781	Tube-Breather			795429 Piston Assembly (Standard) (Used Before Code Date 07090400).			797305 Ring Set (.020" Oversize) (Used After Code Date 09041600).
11B	691923	Tube-Breather			590405 Piston Assembly (.020" Oversize) (Used After Code Date 11063000).			----- Note -----
12	692232	Gasket-Crankcase						499423 Pin-Piston (Used Before Code Date 09041700).
13	590422	Screw (Cylinder Head) (Used After Code Date 11063000).				28	298909	Pin-Piston (Used After Code Date 09041600).
		----- Note -----						----- Note -----
		690912 Screw (Cylinder Head)						

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
29	797306	Rod-Connecting (Used After Code Date 09041600). ----- Note ----- 499424 Rod-Connecting (Used Before Code Date 09041700).			(Used Before Code Date 11051700). 795935 Valve-Choke Used on Type No(s). 1607, 1608, 1609, 2125, 2127.	137A	693981	Gasket-Float Bowl (1/16" Thick)
32	691664	Screw (Connecting Rod)	117B	498977	Jet-Main (Standard) (Used After Code Date 11051600).	141	796193	Shaft-Choke
32A	695759	Screw (Connecting Rod)			----- Note ----- 695042 Jet-Main (Standard) (Used Before Code Date 11051700).	163	795629	Gasket-Air Cleaner
33	590394	Valve-Exhaust			590440 Jet-Main (Standard) Used on Type No(s). 0126, 0129, 1607, 1608, 1609, 2125, 2127.	187	791766	Line-Fuel (Cut to Required Length)
34	590393	Valve-Intake				187A	791873	Line-Fuel (Molded)
35	691270	Spring-Valve (Intake)				188	693399	Screw (Control Bracket)
36	691270	Spring-Valve (Exhaust)				190	690940	Screw (Fuel Tank)
37	793756	Guard-Flywheel				202	691829	Link-Mechanical Governor
40	692194	Retainer-Valve				209B	699056	Spring-Governor ----- Note ----- 691851 Spring-Governor Used on Type No(s). 0112, 0113, 0125, 2125, 2127.
43	691997	Slinger-Governor/Oil	118B	694250	Jet-Main (High Altitude) (Used After Code Date 11051600).			691292 Spring-Governor Used on Type No(s). 0117, 3123, 3124, 3216, 3219, 3226, 3236, 3238, 3256, 5123, 5219, 5226, 5238.
45	690548	Tappet-Valve			----- Note ----- 498977 Jet-Main (High Altitude) (Used Before Code Date 11051700).			
46	590463	Camshaft (Used After Code Date 11051600). ----- Note ----- 691449 Camshaft (Used Before Code Date 11051700).			798661 Jet-Main (High Altitude) Used on Type No(s). 0126, 0129, 1607, 1608, 1609, 2125, 2127.	222	790143	Bracket-Control (Remote/Manual Friction)(Primer)
50A	796703	Manifold-Intake				222D	793754	Bracket-Control (Fixed Speed)
51	272199s	Gasket-Intake	121	498260	Kit-Carburetor Overhaul	227	690783	Lever-Governor Control
51A	796704	Gasket-Intake	125B	799866	Carburetor (Autochoke System)	265	690798	Clamp-Casing
54	691650	Screw (Intake Manifold)	127	694468	Plug-Welch	265A	691024	Clamp-Casing
55	691421	Housing-Rewind Starter	130	696564	Valve-Throttle	265B	692179	Clamp-Casing
58	697316	Rope-Starter (Cut To Required Length)	133	398187	Float-Carburetor	267	691044	Screw (Casing Clamp)
60	281434s	Grip-Starter Rope	134	398188	Kit-Needle/Seat	268	691025	Casing-Control Wire (Cut to Required Length)
60C	799716	Grip-Starter Rope	137	796610	Gasket-Float Bowl (1/8" Thick)	269	691026	Wire-Control (Cut to Required Length)
65	690837	Screw (Rewind Starter)				270	691027	Nut (Control Wire Casing)
78	691108	Screw (Flywheel Guard)				271	691028	Lever-Control
81	691740	Lock-Muffler Screw				276	271716	Washer-Sealing
97	696565	Shaft-Throttle (Plastic)				287	690940	Screw (Dipstick Tube)
104	797622	Pin-Float Hinge						
108A	795935	Valve-Choke (Used After Code Date 11051600). ----- Note ----- 796708 Valve-Choke						

128T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
291	790830	Thermostat			Date 11070100).	615	690340	Retainer-Governor Shaft
300	790828	Muffler			----- Note -----	616	698801	Crank-Governor
304	790826	Housing-Blower			591910 Plug-Spark	617	270344	Seal-O Ring (Intake Manifold)
		----- Note -----			Used on Type No(s). 1607, 1608, 1609.	621	692310	Switch-Stop
		791291	356	692390	Wire-Stop	633	691321	Seal-Choke/Throttle Shaft
		Housing-Blower	356H	690791	Wire-Stop	633A	693867	Seal-Choke/Throttle Shaft
		Used on Type No(s). 0117, 0125, 0127, 2125, 2127, 3256.	358	590508	Gasket Set-Engine	635	66538s	Boot-Spark Plug
305	691108	Screw (Blower Housing)	362	793351	Boot-Spark Plug	651	691660	Screw (Starter Gear Cover)
306A	790836	Shield-Cylinder	363	19069	Flywheel Puller	668	493823	Spacer
307	690345	Screw (Cylinder Shield)	365	691688	Screw (Carburetor)	670	692294	Spacer-Fuel Tank
309	799045	Motor-Starter	383	89838s	Wrench-Spark Plug	676C	493871	Deflector-Muffler
309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)	404	690272	Washer (Governor Crank)	677	690661	Screw (Muffler Deflector)
			425A	690670	Screw (Air Cleaner Cover)	684	690345	Screw (Breather Passage Cover)
			443A	692523	Screw Air Cleaner Primer Base)	689	691855	Spring-Friction
332	690662	Nut (Flywheel)	445A	491588s	Filter-Air Cleaner Cartridge	697	691127	Screw (Drive Cap)
333	590454	Armature-Magneto Used on Type No(s). 0110, 0112, 0114, 0118, 0120, 0123, 0126, 0127, 0129, 0740, 0866, 0889, 1268, 1270, 1608, 3123, 3124, 3125, 3226, 3256, 5110, 5123, 5226, 5268.	455	791960	Cup-Flywheel	718	690959	Pin-Locating
			456	692299	Plate-Pawl Friction	741	797521	Gear-Timing (Metal) (Used After Code Date 08021700).
			459	281505s	Plate-Ratchet			----- Note -----
			474	691991	Alternator			794388 Gear-Timing (Use Without Woodruff Key)
			505	691251	Nut (Governor Control Lever)			(Used Before Code Date 08021800).
			510	795093	Drive-Starter	742	93941	Retainer-E Ring
			513	795100	Clutch-Drive	745	691648	Screw (Brake)
333A	590455	Armature-Magneto Used on Type No(s). 0111, 0113, 0116, 0117, 0119, 0124, 0125, 0239, 0262, 1337, 1352, 1547, 1548, 1587, 1607, 2125, 2127, 3216, 3219, 3236, 3238, 5219, 5238, 5352.	523	499621	Dipstick	783	795099	Gear-Pinion
			524	692296	Seal-Dipstick Tube	783A	795096	Gear-Pinion
			525	495265	Tube-Dipstick	784	795095	Cover-Starter Gear
			535	493537s	Filter-Pre Cleaner	785	692352	Gasket-Starter Cover
			562	691119	Bolt (Gov Control Lever)	789D	796574	Harness-Wiring
			564B	698589	Screw (Control Cover)	832	590486	Guard-Muffler
			578	695283	Wire-Stop	836	690664	Screw (Muffler Guard)
334	691061	Screw (Magneto Armature)	584	697734	Cover-Breather Passage	842	691031	Seal-O Ring (Dipstick Tube)
337	591868	Plug-Spark (Used After Code Date 11063000).	585	691879	Gasket-Breather Passage	847	692047	Dipstick/Tube Assembly
		----- Note -----	592	690800	Nut (Rewind Starter)	851	493880s	Terminal-Spark Plug
		796112s Plug-Spark (Resistor) (Used Before Code Date 11070100).	597	691696	Screw (Pawl Friction Plate)			
		697451 Plug-Spark (EMS) (Used Before Code	601	791850	Clamp-Hose			
			604B	790703	Cover-Control			
			604C	792418	Cover-Control			
			608	497680	Starter-Rewind			
			613	790833	Screw (Muffler)			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
851A	692424	Terminal-Spark Plug	957A	692046	Cap-Fuel Tank (Plastic)	1210	498144	Pulley/Spring Assembly (Pulley)
853	695268	Adapter-Wire	957B	796577	Cap-Fuel Tank (Plastic)	1211	498144	Pulley/Spring Assembly (Spring)
853A	695897	Adapter-Wire	966B	795259	Base-Air Cleaner Primer	1319	794467	Label-Warning
868	590410	Seal-Valve (Used After Code Date 11063000). ----- Note ----- 697338 Seal-Valve (Used Before Code Date 11070100).	968B	692298	Cover-Air Cleaner	1330	270962	Manual-Repair
869	691155	Seat-Valve (Intake)	969	690700	Screw (Blower Housing Cover)	1386	790848	Vane-Air (Autochoke System)
870	690380	Seat-Valve (Exhaust)	969A	691138	Screw (Blower Housing Cover)	1387	790849	Spring-Air Vane
871	590409	Bushing-Valve Guide (Exhaust) (Used After Code Date 11063000). ----- Note ----- 590409 Bushing-Valve Guide (Intake) (Used After Code Date 11063000). 262001 Bushing-Valve Guide (Exhaust) (Used Before Code Date 11070100). 63709 Bushing-Valve Guide (Intake) (Used Before Code Date 11070100).	972B	699374	Tank-Fuel (Plastic)	1388	790850	Screw (Air Vane)
883	691881	Gasket-Exhaust	975	796611	Bowl-Float			
910	691094	Stud (Alternator)	976	694395	Primer-Carburetor			
921H	790037	Cover-Blower Housing	1005	691346	Fan-Flywheel			
921J	790036	Cover-Blower Housing	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)			
921K	699984	Cover-Blower Housing	1058	380567	Operator's Manual (Used After Code Date 11063000). ----- Note ----- 277039 Operator's Manual (Used Before Code Date 11070100).			
921M	792652	Cover-Blower Housing	1059	692311	Kit-Screw/Washer			
921U	794355	Cover-Blower Housing	1095	590507	Gasket Set-Valve			
921W	796921	Cover-Blower Housing	1119	692979	Screw (Alternator)			
921X	796706	Cover-Blower Housing						
921Y	591955	Cover-Blower Housing						
922A	692135	Spring-Brake						
923	796387	Brake (Electric Starter)						
923A	796136	Brake (Rewind Starter)						
925	795403	Cover-Linkage						
937	795098	Spline-Starter						
937A	799420	Spline-Starter						

Not for
Reproduction

