

Multi Channel AV Receiver

Operating Instructions

STR-DH800

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

Excessive sound pressure from earphones and headphones can cause hearing loss.

For customers in the United States and Canada



This symbol is intended to alert the user to the presence of the Hot Surface that may be hot if it is touched during the normal operation.



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

For customers in the United States

Owner's Record

The model and serial numbers are located on the rear of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.

- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

The following FCC statement applies only to the version of this model manufactured for sale in the U.S.A. Other versions may not comply with FCC technical regulations.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

To reduce the risk of electric shock, the speaker cord should be connected to the apparatus and the speakers in accordance with the following instructions.


- 1) Disconnect the AC power cord from the MAINS.
- 2) Strip 10 to 15 mm of the wire insulation of the speaker cord.
- 3) Connect the speaker cord to the apparatus and the speakers carefully so as not to touch the core of speaker cord by hand. Also disconnect the AC power cord from the MAINS before disconnecting the speaker cord from the apparatus and the speakers.

About This Manual

- The instructions in this manual are for model STR-DH800. Check your model number by looking at the lower right corner of the front panel. In this manual, models of area code U is used for illustration purposes unless stated otherwise. Any difference in operation is clearly indicated in the text, for example, “Models of area code CA only”.
- The instructions in this manual describe the controls on the supplied remote. You can also use the controls on the receiver if they have the same or similar names as those on the remote.

About area codes

The area code of the receiver you purchased is shown on the lower right portion of the rear panel (see the illustration below).

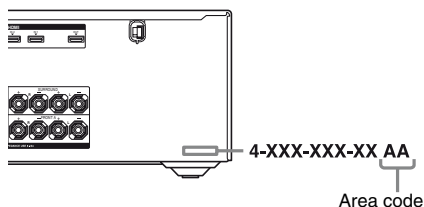

Any differences in operation, according to the area code, are clearly indicated in the text, for example, “Models of area code AA only”.

On Copyright

This receiver incorporates Dolby* Digital and Pro Logic Surround and the DTS** Digital Surround System.

- * Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- ** Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

This receiver incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

This product is manufactured under license from Neural Audio Corporation and THX Ltd. Sony Corporation hereby grants the user a non-exclusive, non-transferable, limited right of use to this product under USA and foreign patent, patent pending and other technology or trademarks owned by Neural Audio Corporation and THX Ltd. “Neural Surround”, “Neural Audio”, “Neural” and “NRL” are trademarks and logos owned by Neural Audio Corporation, THX is a trademark of THX Ltd., which may be registered in some jurisdictions. All rights reserved.

SIRIUS, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All rights reserved.

“x.v.Color (x.v.Colour)” and “x.v.Color (x.v.Colour)” logo are trademarks of Sony Corporation.

“BRAVIA” is a trademark of Sony Corporation.

“S-AIR” and its logo are trademarks of Sony Corporation.

Table of Contents

Description and location of parts	7
---	---

Getting Started

1: Installing the speakers	17
2: Connecting the speakers	18
3: Connecting the TV	21
4a: Connecting the audio components	23
4b: Connecting the video components	24
5: Connecting the antennas (aerials)	31
6: Preparing the receiver and the remote.....	31
7: Selecting the speaker system	33
8: Calibrating the appropriate settings automatically (AUTO CALIBRATION)	33
9: Adjusting the speaker levels and balance (TEST TONE).....	40

Playback

Selecting a component	41
Listening/Watching a component.....	43

Amplifier Operations

Navigating through menus	45
Adjusting the level (LEVEL menu)	50
Settings for the speakers (SPEAKER menu)	51
Settings for the surround sound (SURROUND menu)	54
Adjusting the equalizer (EQ menu)	55
Settings for the tuner (TUNER menu)	55
Settings for the audio (AUDIO menu)	56
Settings for the video (VIDEO menu)	57
Settings for the HDMI (HDMI menu)	58
Settings for the system (SYSTEM menu)	59
Settings for the S-AIR (S-AIR menu).....	59

Enjoying Surround Sound

Enjoying a pre-programmed sound field.....	60
Enjoying the surround effect at low volume levels (NIGHT MODE)	65
Using only the front speakers (2CH STEREO).....	66
Listening to the sound without any adjustment (ANALOG DIRECT).....	66
Resetting sound fields to the initial settings.....	67

Tuner Operations

Listening to FM/AM radio	67
Presetting FM/AM radio stations	69
Listening to Satellite Radio	71
Connecting the SIRIUS Satellite Radio	72
Preparing to listen to the SIRIUS Satellite Radio	73
Selecting a channel of the SIRIUS Satellite Radio	74
Presetting SIRIUS Satellite Radio channels	76
Restricting access to specific channels (Parental Lock) (SIRIUS only).....	77

“BRAVIA” Sync Features

What is “BRAVIA” Sync?.....	81
Preparing for the “BRAVIA” Sync.....	82
Watching a DVD/Blu-ray disc (One-Touch Play)	83
Enjoying the TV sound from the speakers connected to the receiver (System Audio Control)	84
Turning off the receiver with the TV (System Power Off).....	84

S-AIR Operations

About S-AIR products	85
Setting up an S-AIR product	86
Enjoying the system's sound in another room.....	90
Changing the channel for better sound transmission.....	91
Enjoying the S-AIR receiver while the S-AIR main unit is in standby mode	92

Other Operations

Switching between digital and analog audio (INPUT MODE)	93
Enjoying the sound/images from other inputs	94
Enjoying the DIGITAL MEDIA PORT (DMPORT)	96
Changing the display	98
Using the Sleep Timer	99
Recording using the receiver	99
Using a bi-amplifier connection	100

Using the Remote


Operating each component using the remote	102
Programming the remote	104

Additional Information

Glossary	108
Precautions	111
Troubleshooting	113
Specifications.....	119
Index	121

Description and location of parts

Front panel

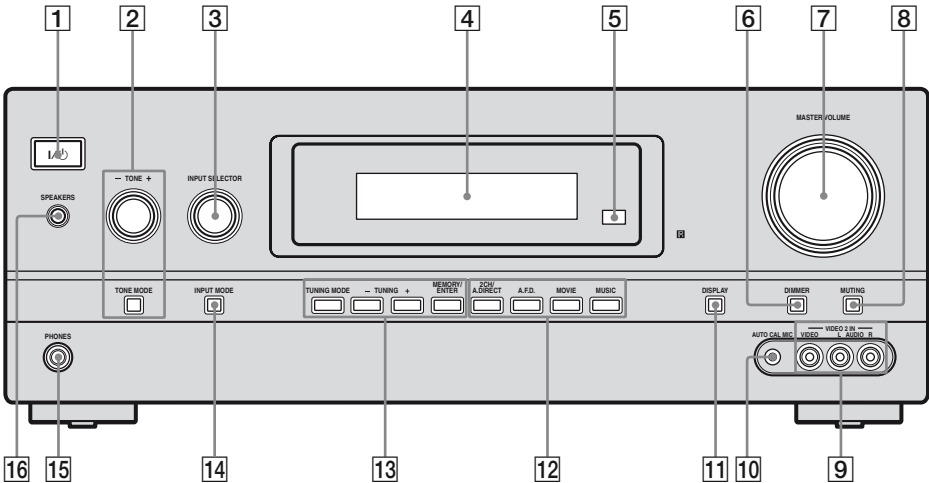


Name	Function
1 I/O (on/standby)	Press to turn the receiver on or off (page 32, 43, 44, 67, 69).
2 TONE +/- TONE MODE	Adjust the bass and treble for the front channels. Press TONE MODE repeatedly to select BASS or TREBLE, then turn TONE +/- to adjust the level (page 55).
3 INPUT SELECTOR	Turn to select the input source to play back (page 41, 42, 43, 44, 66, 68, 70, 93, 98, 100).
4 Display	The current status of the selected component or a list of selectable items appears here (page 9).
5 Remote sensor	Receives signals from remote commander.
6 DIMMER	Press repeatedly to adjust the brightness of the display (page 59).

Name	Function
7 MASTER VOLUME	Turn to adjust the volume level of all speakers at the same time (page 40, 41, 43, 44).
8 MUTING	Press to turn off the sound temporarily. Press MUTING again to restore the sound (page 42).
9 VIDEO 2 IN jacks	Connects to a portable audio/video component such as a camcorder or video game (page 30, 41).
10 AUTO CAL MIC jack	Connects to the supplied optimizer microphone for the Auto Calibration function (page 34).
11 DISPLAY	Press to select information displayed on the display (page 98).

Name	Function
12 2CH/A.DIRECT A.F.D. MOVIE MUSIC	Press to select a sound field (page 60).
13 TUNING MODE TUNING +/- MEMORY/ ENTER	Press to operate a tuner (FM/AM) and satellite radio (SIRIUS) (page 67, 73).
14 INPUT MODE	Press to select the input mode when the same components are connected to both digital and analog jacks (page 93).
15 PHONES jack	Connects to headphones (page 113).
16 SPEAKERS	Press to select the front speaker system (page 33).

About the indicators on the display

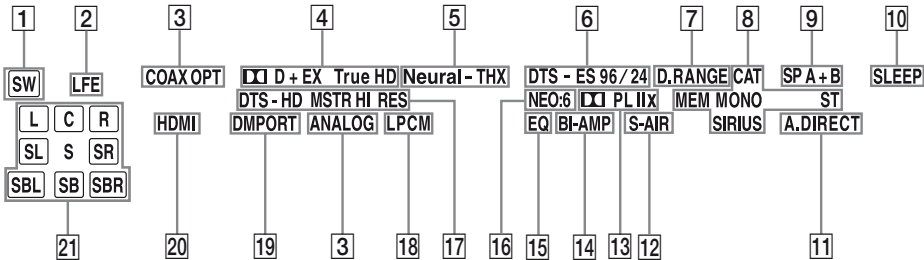


Name	Function
1 SW	Lights up when the audio signal is output from the SUBWOOFER jacks.
2 LFE	Lights up when the disc being played back contains an LFE (Low Frequency Effect) channel and the LFE channel signal is actually being reproduced.
3 Input indicators	Light up to indicate the current input.
COAX	Lights up when INPUT MODE is set to "AUTO" and the source signal is a digital signal being input through the COAXIAL jack (page 93).
OPT	Lights up when INPUT MODE is set to "AUTO" and the source signal is a digital signal being input through the OPTICAL jack (page 93).
ANALOG	Lights up when INPUT MODE is set to "ANALOG" or no digital signals are detected when INPUT MODE is set to "AUTO" (page 93).

Name	Function
4 Dolby Digital Surround indicators	Lights up one of the respective indicators when the receiver is decoding the corresponding Dolby Digital format signals. D D EX D+ TrueHD Note When playing a Dolby Digital format disc, be sure that you have made digital connections and that INPUT MODE is set to "AUTO" (page 93).
5 Neural - THX	Lights up when the receiver applies Neural - THX processing to input signals.
6 DTS(-ES) indicators	Light up when DTS or DTS-ES signals are input. DTS DTS-ES DTS 96/24 Note When playing a DTS format disc, be sure that you have made digital connections and that INPUT MODE is set to "AUTO" (page 93).
7 D.RANGE	Lights up when dynamic range compression is activated (page 51).

Name	Function
8 Tuning indicators	Lights up when the receiver tunes in radio stations, or satellite radio stations.
CAT	The category mode is set to “ONE CAT” during the satellite radio operation (page 75).
MEM	Lights up when a memory function, such as Preset Memory (page 69), etc., is activated.
MONO	Monaural broadcast
ST	Stereo broadcast
SIRIUS	The SiriusConnect Home tuner is connected and “SIRIUS” is selected.
9 SP A/SP B/ SP A+B	Lights up according to the speaker system used (page 33). However, these indicators do not light up if the speaker output is turned off or if headphones are connected.
10 SLEEP	Lights up when the sleep timer is activated (page 99).
11 A.DIRECT	Lights up when the receiver is processing Analog Direct signals.
12 S-AIR	Lights up when the S-AIR transmitter (not supplied) is connected.
13 Dolby Pro Logic indicators	Lights up one of the respective indicators when the receiver applies Dolby Pro Logic processing to 2 channel signals in order to output the center and surround channel signals.
ⓧ PL	Dolby Pro Logic
ⓧ PL II	Dolby Pro Logic II
ⓧ PL IIX	Dolby Pro Logic IIX
	Note These indicators do not light up when either the center speaker and surround speaker is not connected.
14 BI-AMP	Lights up when surround back speakers selection is set to “BI-AMP” (page 100).
15 EQ	Lights up when the equalizer is activated.


Name	Function
16 NEO:6	Lights up when DTS Neo:6 Cinema/Music decoder is activated (page 63).
17 DTS-HD indicators	Lights up one of the respective indicators when the receiver is decoding the corresponding DTS-HD format signals.
DTS-HD MSTR	DTS-HD Master Audio
DTS-HD HI RES	DTS-HD High Resolution Audio
18 LPCM	Lights up when Linear PCM signals are detected.
19 DMPORT	Lights up when DIGITAL MEDIA PORT adapter is connected and “DMPORT” is selected.
20 HDMI	Lights up when the receiver recognizes a component connected via an HDMI IN jack (page 25).
21 Playback channel indicators	The letters (L, C, R, etc.) indicate the channels being played back. The boxes around the letters vary to show how the receiver downmixes or upmixes the source sound (based on the speaker settings).
L	Front Left
R	Front Right
C	Center (monaural)
SL	Surround Left
SR	Surround Right
S	Surround (monaural or the surround components obtained by Pro Logic processing)
SBL	Surround Back Left
SBR	Surround Back Right
SB	Surround Back (the surround back components obtained by 6.1 channel decoding)
	Example: Speaker pattern: 3/0.1 Recording format: 3/2.1 Sound Field: A.F.D. AUTO
	SW
	L C R
	SL SR

Rear panel

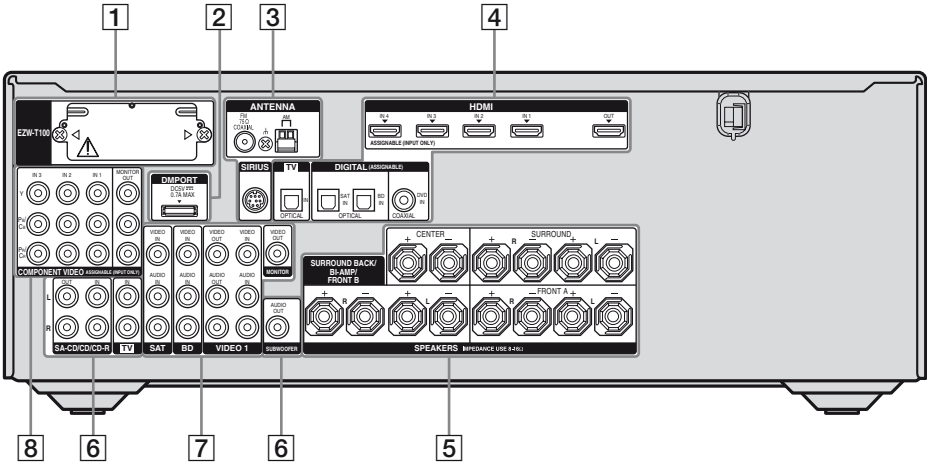


1 S-AIR (EZW-T100)

With slot cover



slot



CAUTION
Please do not remove the slot cover until you want to install the wireless transmitter.

Connects to a wireless transmitter (not supplied) (page 86).

2 DMPORT section



DMPORT jack

Connects to a DIGITAL MEDIA PORT adapter (page 97).

3 ANTENNA section



FM ANTENNA jack

Connects to the supplied FM wire antenna (page 31).



AM ANTENNA terminals

Connects to the supplied AM loop antenna (page 31).



SIRIUS jack

Connects to a SiriusConnect Home tuner (not supplied) (page 72).

4 DIGITAL INPUT/OUTPUT section



OPTICAL IN jacks

Connects to a DVD player, etc. The COAXIAL jack provides a better sound quality (page 21, 27, 28, 29).




COAXIAL IN jack



HDMI IN/OUT* jacks

Connects to a DVD player, satellite tuner, or a Blu-ray disc player, etc. The image is output to a TV or a projector while the sound can be output from a TV or/and speakers connected to this receiver (page 25).

5 SPEAKERS section



Connects to speakers (page 18).

continued

6 AUDIO INPUT/OUTPUT section

White (L) AUDIO IN/ OUT jacks Connects to a Super Audio CD player, etc. (page 21, 23).

Red (R)

Black AUDIO OUT jack Connects to a subwoofer (page 18).

7 VIDEO/AUDIO INPUT/OUTPUT section

White (L) AUDIO IN/ OUT jacks Connects to a VCR, Blu-ray disc player, etc. (page 28 – 30).

Red (R)

Yellow VIDEO IN/ OUT* jacks

8 COMPONENT VIDEO INPUT/ OUTPUT section

Green (Y) Y, Pb/Cb, Pr/Cr IN/ OUT* jacks Connects to a DVD player, TV, satellite tuner, etc. (page 21, 27, 28, 29).

Blue (Pb/Cb)

Red (Pr/Cr)


* You can watch the selected input image when you connect the HDMI OUT or MONITOR OUT jack to a TV (page 21, 25).

Remote commander

You can use the supplied remote to operate the receiver and to control the Sony audio/video components that the remote is assigned to operate.

You can also program the remote to control non-Sony audio/video components. For details, see “Programming the remote” (page 104).



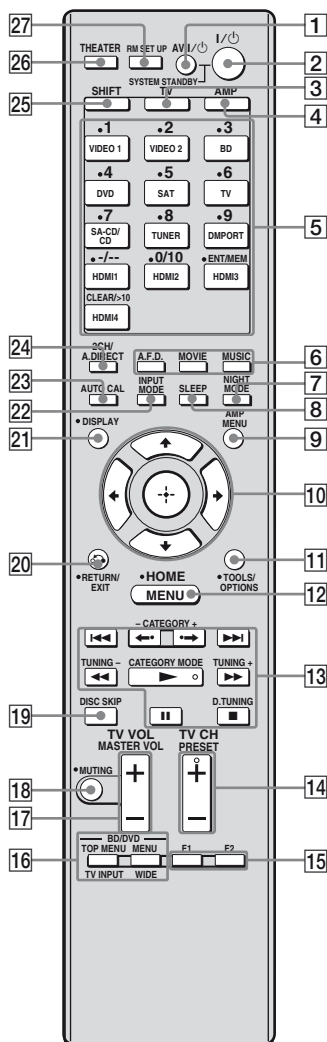





RM-AAP043



















Name	Function
1 AV I/⏻ (on/standby)	<p>Press to turn on or off the audio/video components that the remote is programmed to operate.</p> <p>To turn the TV on or off, press TV (3) and then press AV I/⏻.</p> <p>If you press I/⏻ (2) at the same time, it will turn off the receiver and other components (SYSTEM STANDBY).</p> <p>Note The function of the AV I/⏻ switch changes automatically each time you press the input buttons (5).</p>
2 I/⏻ (on/standby)	<p>Press to turn the receiver on or set it to standby mode.</p> <p>To turn off all components, press I/⏻ and AV I/⏻ (1) at the same time (SYSTEM STANDBY).</p> <p>Saving the power in standby mode When “CTRL:HDMI” is set to “CTRL OFF” (page 49) and “S-AIR STBY” is set to “STBY OFF” (page 49).</p>
3 TV	<p>Press to light up the button. It changes the remote key function to activate the buttons with yellow printing. It also activate the + (10), ↕/↔/↔ (10), TOOLS/OPTIONS (11), MENU/HOME (12), RETURN/EXIT ↶ (20), and DISPLAY (21) buttons to perform menu operations for Sony TVs only.</p>
4 AMP	<p>Press to light up the button to activate the receiver operation (page 36).</p>
5 Input buttons	<p>Press one of the buttons to select the component you want to use. When you press any of the input buttons, the receiver turns on. The buttons are factory assigned to control Sony components.</p> <p>You can program the remote to control non-Sony components following the steps in “Programming the remote” on page 104.</p>



Name	Function
Numeric buttons (number 5^a)	<p>Press SHIFT (25) and then press numeric buttons to</p> <ul style="list-style-type: none"> – preset/tune to preset stations. – select track numbers of the CD player, VCD player, LD player, DVD player, MD deck, DAT deck, or tape deck. Press 0/10 to select track number 10. – select channel numbers of the VCR, satellite tuner, Blu-ray disc player, PSX, DVD/VHS COMBO, or DVD/HDD COMBO. <p>Press TV (3) and then press the numeric buttons to select the TV channels.</p>
-/--	<p>Press SHIFT (25) and then press -/-- to select the channel entry mode, either one or two digit of the VCR or satellite tuner.</p> <p>To select the channel entry mode of the TV, press TV (3) and then press -/--.</p>
ENT/MEM	<p>Press SHIFT (25) and then press ENT/MEM to enter the value after selecting a channel, disc or track using the numeric buttons of the VCR, CD player, VCD player, LD player, MD deck, DAT deck, tape deck, satellite tuner, Blu-ray disc player, or PSX.</p> <p>To enter the value of Sony TV, press TV (3) and then press ENT/MEM.</p> <p>Press SHIFT (25) and then press ENT/MEM to store a station during tuner operation.</p>
CLEAR/>10	<p>Press SHIFT (25) and then press CLEAR/>10 to clear a mistake when you press the incorrect numeric button of the DVD player, Blu-ray disc player, PSX, satellite tuner, DVD/VHS COMBO, or DVD/HDD COMBO.</p> <p>Press SHIFT (25) and then press CLEAR/>10 to select track numbers over 10 of the CD player, VCD player, LD player, MD deck, tape deck, TV, VCR, or satellite tuner.</p>

continued

Name	Function
6 A.F.D. MOVIE MUSIC	Press to select a sound field (page 61, 63).
7 NIGHT MODE	Press to activate the Night Mode function (page 65).
8 SLEEP	Press to activate the Sleep Timer function and the duration which the receiver turns off automatically.
9 AMP MENU	Press to display the menu to operate the receiver.
10  , 	After pressing AMP (4), press MENU/HOME (12) for receiver operation, then press  to select the settings. After pressing BD/DVD TOP MENU (16) or BD/DVD MENU (16), press  to select the settings, and then press  to enter the selection. Press  also to enter the selection of the receiver, VCR, satellite tuner, DVD player, Blu-ray disc player, PSX, DVD/VHS COMBO, or DVD/HDD COMBO.
11 TOOLS/ OPTIONS	Press to display and select items from the options menus for DVD player or Blu-ray disc player. To display the options of Sony TV, press TV (3) and then press TOOLS/ OPTIONS.
12 MENU/HOME	Press to display the menus of the receiver, VCR, DVD player, satellite tuner, Blu-ray disc player, PSX, DVD/VHS COMBO, or DVD/HDD COMBO on the TV screen. Then, use  and  to perform menu operations. To display the menus of Sony TV, press TV (3) and then press MENU/HOME.

Name	Function
13  ^{b)}	Press to skip tracks of the VCR, CD player, VCD player, LD player, DVD player, MD deck, DAT deck, tape deck, Blu-ray disc player, PSX, DVD/VHS COMBO, or DVD/HDD COMBO.
	Press to replay the previous scene or fast forward the current scene of the DVD player, Blu-ray disc player, DVD/VHS COMBO, or DVD/HDD COMBO.
 ^{b)}	Press to – search tracks in the forward/backward direction of the CD player, VCD player, DVD player, LD player, MD deck, Blu-ray disc player, PSX, DVD/VHS COMBO, or DVD/HDD COMBO. – fast forward/rewind of the VCR, DAT deck, or tape deck.
 ^{a)b)}	Press to start playback of the VCR, CD player, VCD player, LD player, DVD player, MD deck, DAT deck, tape deck, Blu-ray disc player, PSX, DVD/VHS COMBO, or DVD/HDD COMBO.
 ^{b)}	Press to pause playback or recording of the VCR, CD player, VCD player, LD player, DVD player, MD deck, DAT deck, tape deck, Blu-ray disc player, PSX, DVD/VHS COMBO, or DVD/HDD COMBO. (Also starts recording with components in recording standby.)
 ^{b)}	Press to stop playback of the VCR, CD player, VCD player, LD player, DVD player, MD deck, DAT deck, tape deck, Blu-ray disc player, PSX, DVD/VHS COMBO, or DVD/HDD COMBO.

Name	Function
CATEGORY +/-	Press to select the category for satellite tuner (page 75).
TUNING +/-	Press to scan a station.
CATEGORY MODE	Press to select the category mode for satellite tuner (page 75).
D.TUNING	Press to enter direct tuning mode.
14 TV CH +a)/-	Press TV ([3]) and then press TV CH +/- to select preset TV channels.
PRESET +a)/-	Press to <ul style="list-style-type: none"> – select preset stations. – select preset channels of the VCR, satellite tuner, Blu-ray disc player, DVD player, DVD/VHS COMBO, or DVD/HDD COMBO.
15 F1, F2	Press F1 or F2 to select a component. <ul style="list-style-type: none"> • DVD/HDD COMBO <ul style="list-style-type: none"> F1: HDD mode F2: DVD mode • DVD/VHS COMBO <ul style="list-style-type: none"> F1: DVD mode F2: VHS mode
16 BD/DVD TOP MENU	Press to display the menu or on-screen guide of the DVD or Blu-ray disc on the TV screen. Then, use  /  /  /  and  to perform menu operations.
BD/DVD MENU	Press to display the menu of the DVD or Blu-ray disc on the TV screen. Then, use  /  /  /  and  to perform menu operations.
TV INPUT	Press TV ([3]) and then press TV INPUT to select the input signal (TV input or video input).
WIDE	Press TV ([3]) and then press WIDE to select the wide picture mode.
17 TV VOL +/-	Press TV ([3]) and then press TV VOL +/- to adjust the TV volume level.
MASTER VOL +/-	Press to adjust the volume level of all speakers at the same time.

Name	Function
18 MUTING	Press to turn off the sound temporarily. Press MUTING again to restore the sound. Press TV ([3]) and then press MUTING to activate the TV's muting function.
19 DISC SKIP	Press to skip disc of the CD player, VCD player, DVD player, or MD deck (multi-disc changer only).
20 RETURN/EXIT 	Press to <ul style="list-style-type: none"> – return to the previous menu. – exit the menu while the menu or on-screen guide of the VCD player, LD player, DVD player, Blu-ray disc player, PSX, DVD/VHS COMBO, or satellite tuner is displayed on the TV screen. <p>To return to the previous menu of Sony TV, press TV ([3]) and then press RETURN/EXIT .</p>
21 DISPLAY	Press to select information displayed on the display window or TV screen of the VCR, VCD player, LD player, DVD player, CD player, MD deck, Blu-ray disc player, PSX, satellite tuner, DVD/VHS COMBO, or DVD/HDD COMBO. To select information of Sony TV, press TV ([3]) and then press DISPLAY.
22 INPUT MODE	Press AMP ([4]), then press INPUT MODE to select the input mode when the same components are connected to both digital and analog jacks (page 93).
23 AUTO CAL	Press to activate the Digital Cinema Auto Calibration function.
24 2CH/A.DIRECT	Press to select sound field or to switch the audio of the selected input to analog signal without any adjustment (page 66).

continued

Name	Function
25 SHIFT	Press to light up the buttons. It changes the remote button function to activate the buttons with pink printing.
26 THEATER	Press to turn the Theater mode on and off when connecting the receiver to products featuring "BRAVIA" Sync.
27 RM SET UP	Press to set up the remote.

a) The number 5/SAT, TV CH +/-PRESET + and ► buttons have tactile dots. Use the tactile dots as references when operating the receiver.

b) This button is also available for DIGITAL MEDIA PORT adapter operation. For details on the function of the button, refer to the operating instructions supplied with the DIGITAL MEDIA PORT adapter.

Notes

- Some functions explained in this section may not work depending on the model.
- The above explanation is intended to serve as an example only. Therefore, depending on the component, the above operation may not be possible or may operate differently than described.


1: Installing the speakers

This receiver allows you to use a 7.1 channel system (7 speakers and one subwoofer).

Enjoying a 5.1/7.1 channel system

To fully enjoy theater-like multi channel surround sound requires five speakers (two front speakers, a center speaker, and two surround speakers) and a subwoofer (5.1 channel).


Example of a 5.1 channel speaker system configuration

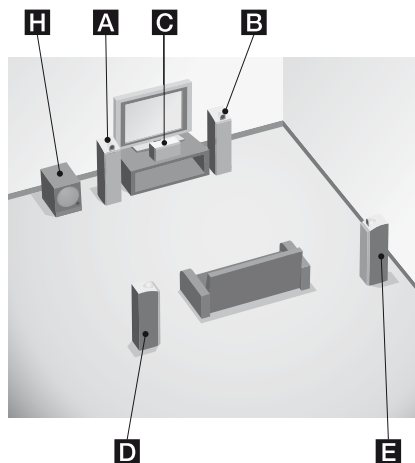

- A** Front speaker (Left)
- B** Front speaker (Right)
- C** Center speaker
- D** Surround speaker (Left)
- E** Surround speaker (Right)
- H** Subwoofer

You can enjoy high fidelity reproduction of DVD software recorded sound in the Surround EX format if you connect one additional surround back speaker (6.1 channel) or two surround back speakers (7.1 channel).

Example of a 7.1 channel speaker system configuration

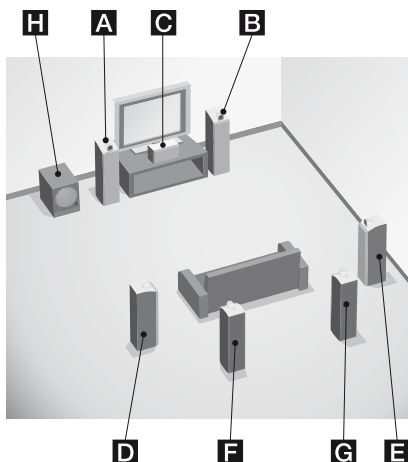


- A** Front speaker (Left)
- B** Front speaker (Right)
- C** Center speaker
- D** Surround speaker (Left)
- E** Surround speaker (Right)
- F** Surround back speaker (Left)
- G** Surround back speaker (Right)
- H** Subwoofer

Tips

- When you connect a 6.1 channel speaker system, place the surround back speaker behind the listening position (page 53).
- Since the subwoofer does not emit highly directional signals, you can place it wherever you want.

2: Connecting the speakers


Before connecting the cords, be sure to disconnect the AC power cord (mains lead).

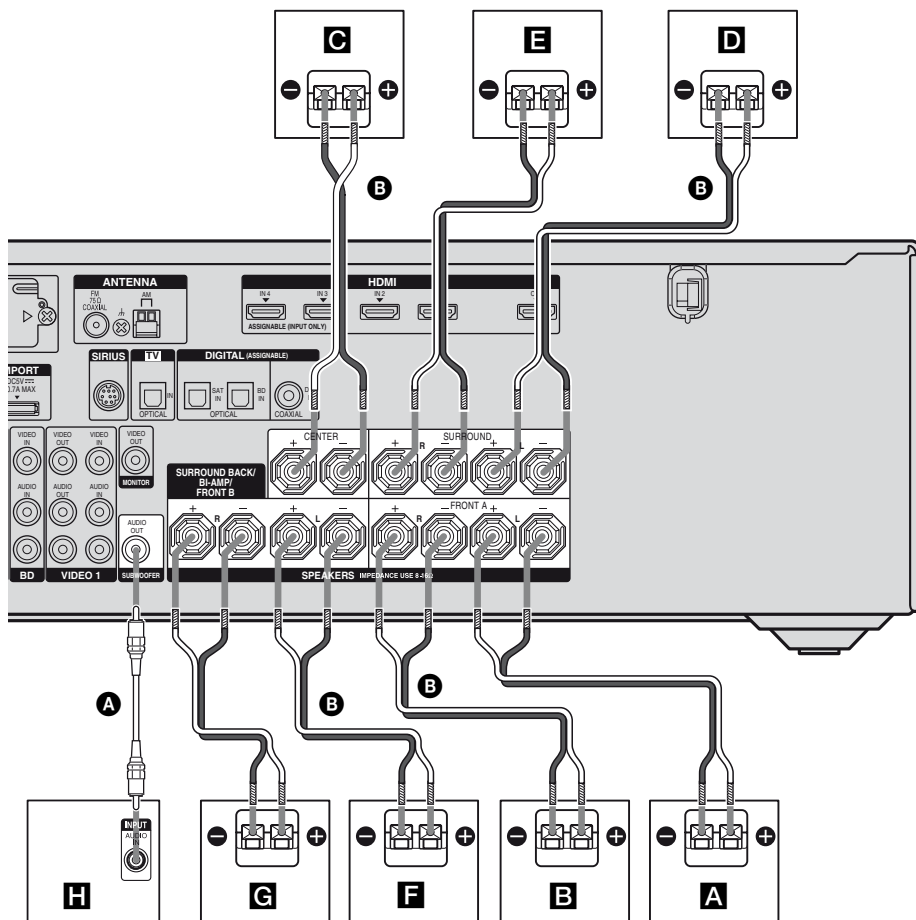

- A** Monaural audio cord (not supplied)
- B** Speaker cord (not supplied)

- A** Front speaker A (Left)
- B** Front speaker A (Right)
- C** Center speaker
- D** Surround speaker (Left)

- E** Surround speaker (Right)
- F** Surround back speaker (Left)^{a)b)c)}
- G** Surround back speaker (Right)^{a)b)c)}
- H** Subwoofer^{d)}

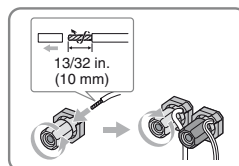

- a) If you connect only one surround back speaker, connect it to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B L terminals.
- b) If you are not using surround back speaker, and you have an additional front speaker system, connect the additional front speaker system to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals. Set “SB ASSIGN” to “SPK B” in the SPEAKER menu (page 52). You can select the front speaker system you want to use with SPEAKERS on the front panel (page 33).
- c) If you are not using surround back speakers, you can connect the front speakers to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals using a bi-amplifier connection (page 100). Set “SB ASSIGN” to “BI-AMP” in the SPEAKER menu (page 52).
- d) When you connect a subwoofer with an auto standby function, turn off the function when watching movies. If the auto standby function is set to on, it turns to standby mode automatically based on the level of the input signal to a subwoofer, then sound may not be output.

Note

Before connecting the AC power cord (mains lead), make sure that metallic wires of the speaker cords are not touching each other between the SPEAKERS terminals.

Selecting a speaker pattern

After you have install and connect your speaker, be sure to select the speaker pattern from SPEAKER menu (page 47).
Select the speaker pattern according to your speaker setting. For details of each parameter, see the table as follows.


Speaker pattern	Speaker connected					
	Front left/right	Center	Surround left/right	Surround back left	Surround back right	Subwoofer
3/4.1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
3/4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
3/3.1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
3/3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
2/4.1	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
2/4	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
3/2.1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			<input type="radio"/>
3/2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
2/3.1	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
2/3	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>		
2/2.1	<input type="radio"/>		<input type="radio"/>			<input type="radio"/>
2/2	<input type="radio"/>		<input type="radio"/>			
3/0.1	<input type="radio"/>	<input type="radio"/>				<input type="radio"/>
3/0	<input type="radio"/>	<input type="radio"/>				
2/0.1	<input type="radio"/>					<input type="radio"/>
2/0	<input type="radio"/>					

3: Connecting the TV

You can watch the selected input image when you connect the HDMI OUT or MONITOR OUT jack to a TV.

It is not necessary to connect all the cords. Connect audio and video cords according to the jacks of your components.

Before connecting cords, be sure to disconnect the AC power cord.

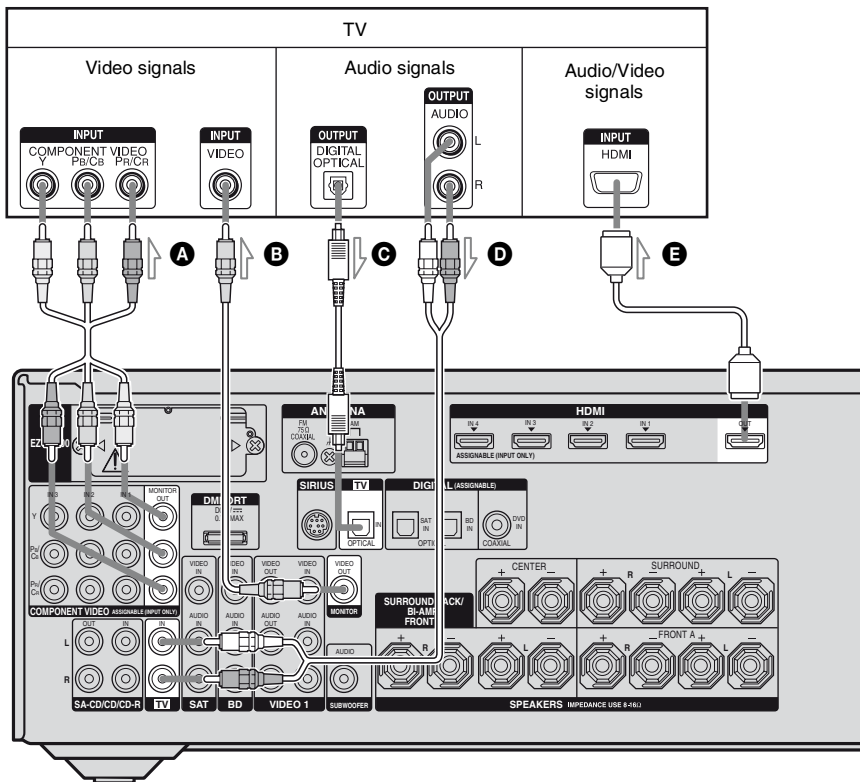

- A** Component video cord (not supplied)
- B** Video cord (not supplied)
- C** Optical digital cord (not supplied)
- D** Audio cord (not supplied)
- E** HDMI cable (not supplied)

We recommend that you use a Sony HDMI cable.

Notes

- Be sure to turn on the receiver when the video and audio signals of a playback component are being output to a TV via the receiver. Unless the power is turned on, neither video nor audio signals will be transmitted.
- Connect image display components such as a TV monitor or a projector to the HDMI OUT or MONITOR OUT jack on the receiver. You may not be able to record, even if you connect recording components.
- Depending on the status of the connection between the TV and the antenna (aerial), the image on the TV screen may be distorted. In this case, place the antenna (aerial) farther away from the receiver.
- When connecting optical digital cords, insert the plugs straight in until they click into place.
- Do not bend or tie optical digital cords.


Tips

- To output the sound of the TV from the speakers connected to the receiver, be sure to
 - connect the audio output jacks of the TV to the TV IN jacks of the receiver.
 - turn off the TV's volume or activate the TV's muting function.
- All the digital audio jacks are compatible with 32 kHz, 44.1 kHz, 48 kHz, and 96 kHz sampling frequencies.

4a: Connecting the audio components

Connecting a Super Audio CD/CD player or CD recorder

The following illustration shows how to connect a Super Audio CD player, CD player or CD recorder. Before connecting cords, be sure to disconnect the AC power cord. After connecting your audio component, proceed to “4b: Connecting the video components” (page 24).

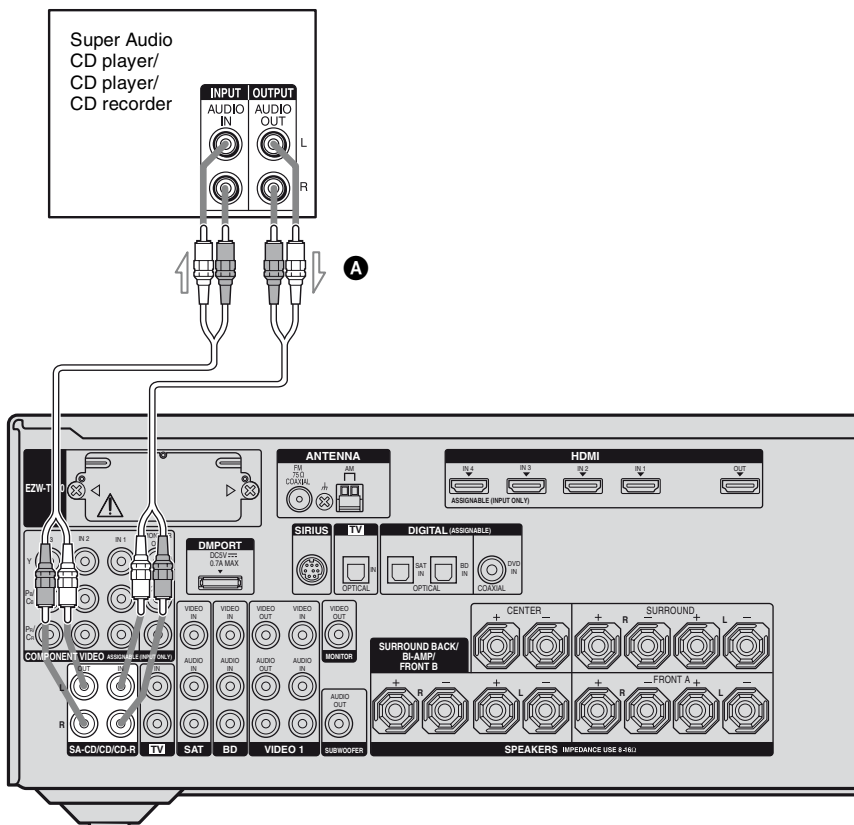

A Audio cord (not supplied)

4b: Connecting the video components

How to connect your components

This section describes how to connect your video components to this receiver. Before you begin, see “Component to be connected” below for the pages which describe how to connect each component. After connecting all your components, proceed to “5: Connecting the antennas (aerials)” (page 31).

Component to be connected


Component	Page
TV	21
With HDMI jack	25
DVD player	27
Blu-ray disc player	28
Satellite tuner/Set-top box	29
VCR, DVD recorder	30
Camcorder, video game, etc.	30

If you want to connect several digital components, but cannot find an unused input

See “Enjoying the sound/images from other inputs” (page 94).

Video input/output jack to be connected

The image quality depends on the connecting jack. See the illustration that follows. Select the connection according to the jacks on your components.

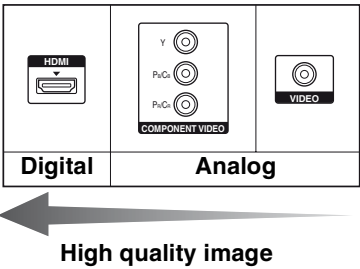

Notes

- Before connecting cords, be sure to disconnect the AC power cord.
- Be sure to turn on the receiver when the video and audio signals of a playback component are being output to a TV via the receiver. Unless the power is turned on, neither video nor audio signals will be transmitted.

Connecting components with HDMI jacks

HDMI is the abbreviated name for High-Definition Multimedia Interface. It is an interface which transmits video and audio signals in digital format.

Notes


- Be sure to change the factory setting of the HDMI 1–4 input button on the remote so that you can use the button to control your components. For details, see “Programming the remote” (page 104).

- You can also rename the HDMI input so that it can be displayed on the receiver's display. For details, see “Naming inputs” (page 42).

To enjoy TV multi channel surround sound broadcasting

You can listen to TV multi channel surround sound broadcasting from the speakers connected to the receiver.

Connect the OPTICAL output jack of the TV to the OPTICAL IN jack of the receiver.

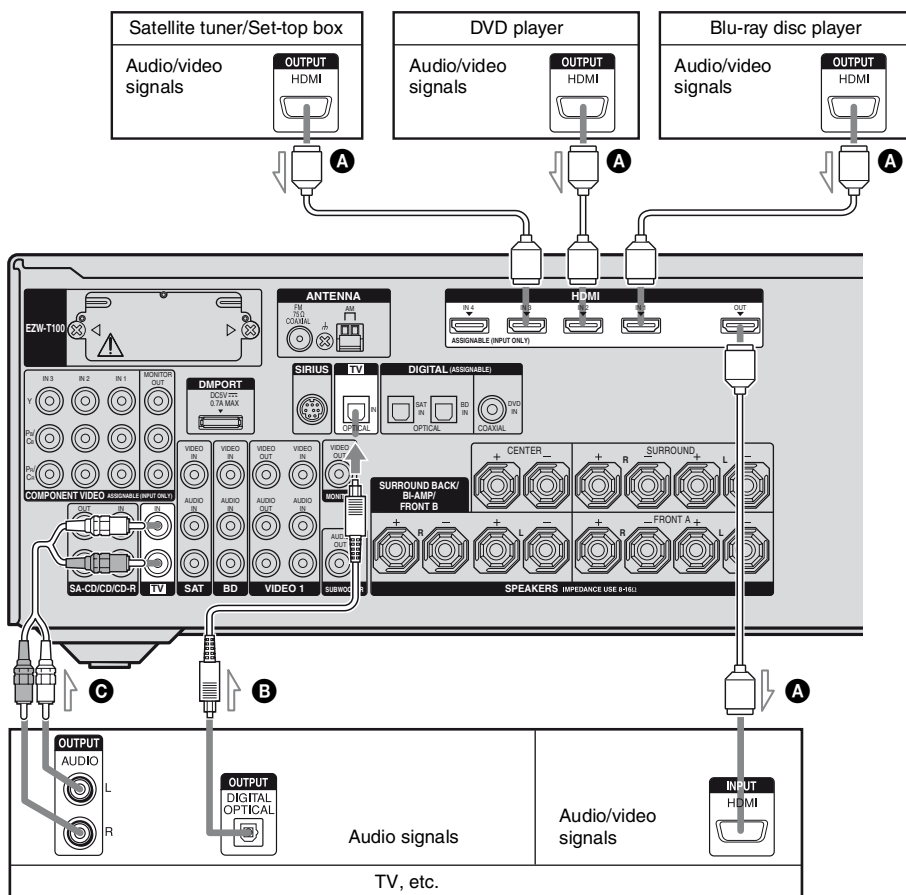

A HDMI cable (not supplied)

We recommend that you use a Sony HDMI cable.

B Optical digital cord (not supplied)^{a)}

C Audio cord (not supplied)^{a)}

^{a)} Connect at least one of the audio cords (**B** or **C**).

continued

HDMI features

- A digital audio signals transmitted by HDMI can be output from the speakers connected to the receiver. This signal supports Dolby Digital, DTS, and Linear PCM.
- This receiver can receive multi channel Linear PCM (up to 8 channels) with a sampling frequency of 192 kHz or less with an HDMI connection.
- This receiver supports High Bitrate Audio (DTS-HD Master Audio, Dolby TrueHD) and HDMI (Deep Color, x.v. Color).
- This receiver supports the Control for HDMI function. For details, see ““BRAVIA” Sync Features” (page 81).

Notes on connecting cables

- We recommend that you use a Sony HDMI cable.
- We recommend that you use an HDMI cable with the HDMI logo (made by Sony) for the HDMI jack corresponding to high speed (an HDMI version 1.3, category 2 cable) when you view images or listen to sound during a Deep Color transmission or when you watch a video image of 1080p or higher.
- We do not recommend using an HDMI-DVI conversion cable. When you connect an HDMI-DVI conversion cable to a DVI-D component, the sound and/or the image may not be output. Connect other audio cords or digital connecting cords, then set “A. ASSIGN” in AUDIO menu (page 57) when the sound is not output correctly.

Notes on HDMI connections

- An audio signal input to the HDMI IN jack is output from the SPEAKERS jacks and HDMI OUT jack. It is not output from any other audio jacks.
- Video signals input to the HDMI IN jack can only be output from the HDMI OUT jack. The video input signals cannot be output from the VIDEO OUT jacks or MONITOR OUT jacks.

- When you want to listen to the sound from the TV speaker, set “AUDIO OUT” to “TV+AMP” in the HDMI menu (page 58). If you cannot play back multi channel software, set to “AMP”. However, the sound will not output from the TV speaker.
- DSD signals of Super Audio CD are not input and output.
- The multi/stereo area audio signals of a Super Audio CD are not output.
- Audio signals (sampling frequency, bit length, etc.) transmitted from an HDMI jack may be suppressed by the connected component. Check the setup of the connected component if the image is poor or the sound does not come out of a component connected via the HDMI cable.
- Sound may be interrupted when the sampling frequency or the number of channels of audio output signals from the playback component is switched.
- When the connected component is not compatible with copyright protection technology (HDCP), the image and/or the sound from the HDMI OUT jack may be distorted or may not be output. In this case, check the specification of the connected component.
- You can enjoy High Bitrate Audio (DTS-HD Master Audio, Dolby TrueHD), multi-channel Linear PCM only with an HDMI connection.
- Set the image resolution of the player to more than 720p/1080i to enjoy High Bitrate Audio (DTS-HD Master Audio, Dolby TrueHD).
- The image resolution of player may need certain settings be made before you can enjoy multi channel Linear PCM. Refer to the operating instructions of the player.
- Not every HDMI component supports all functions that are defined by the specified HDMI version. For example, components that support HDMI, version 1.3, may not support Deep Color.
- Refer to the operating instructions of each connected component for details.

Connecting a DVD player

The following illustration shows how to connect a DVD player.

It is not necessary to connect all the cords. Connect audio and video cords according to the jacks of your components.


Notes

- The initial setting of the COMPONENT VIDEO IN 2 jacks are DVD player. If you want to connect your DVD player to the COMPONENT VIDEO IN 1 or IN 3 jacks, set “V. ASSIGN” in the VIDEO menu (page 57).

- When connecting optical digital cords, insert the plugs straight in until they click into place.
- Do not bend or tie optical digital cords.
- To input multi channel digital audio from the DVD player, set the digital audio output setting on the DVD player. Refer to the operating instructions supplied with the DVD player.

Tip

All the digital audio jacks are compatible with 32 kHz, 44.1 kHz, 48 kHz, and 96 kHz sampling frequencies.

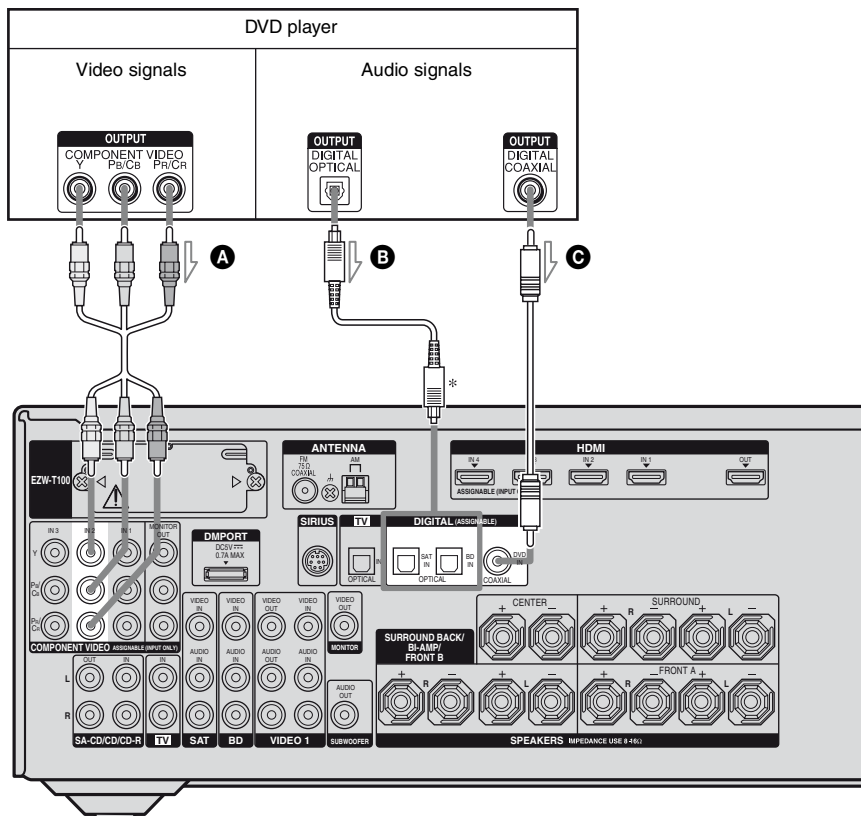

- A** Component video cord (not supplied)
- B** Optical digital cord (not supplied)
- C** Coaxial digital cord (not supplied)

* When you connect a component equipped with an OPTICAL jack, set “A. ASSIGN” in the AUDIO menu (page 57).

Connecting a Blu-ray disc player

The following illustration shows how to connect a Blu-ray disc player. It is not necessary to connect all the cords. Connect audio and video cords according to the jacks of your components.


Notes

- The initial setting of the COMPONENT VIDEO IN 1 jacks are Blu-ray disc player. If you want to connect your Blu-ray disc player to the COMPONENT VIDEO IN 2 or IN 3 jacks, set “V. ASSIGN” in the VIDEO menu (page 57).

- When connecting optical digital cords, insert the plugs straight in until they click into place.
- Do not bend or tie optical digital cords.
- To input multi channel digital audio from the Blu-ray disc player, set the digital audio output setting on the Blu-ray disc player. Refer to the operating instructions supplied with the Blu-ray disc player.

Tip

All the digital audio jacks are compatible with 32 kHz, 44.1 kHz, 48 kHz, and 96 kHz sampling frequencies.

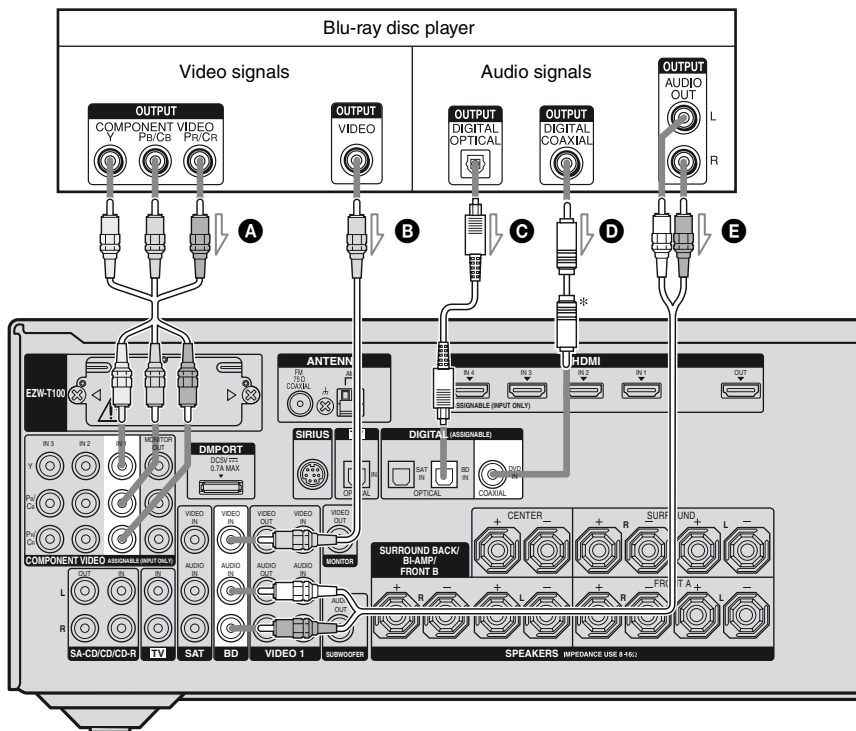

- A** Component video cord (not supplied)
- B** Video cord (not supplied)
- C** Optical digital cord (not supplied)
- D** Coaxial digital cord (not supplied)
- E** Audio cord (not supplied)

* When you connect a component equipped with a COAXIAL jack, set “A. ASSIGN” in the AUDIO menu (page 57).

Connecting a satellite tuner/set-top box


The following illustration shows how to connect a satellite tuner or set-top box. It is not necessary to connect all the cords. Connect audio and video cords according to the jacks of your components.

Notes

- The initial setting of the COMPONENT VIDEO IN 3 jacks are satellite tuner or set-top box. If you want to connect your satellite tuner or set-top box to the COMPONENT VIDEO IN 1 or IN 2 jacks, set “V. ASSIGN” in the VIDEO menu (page 57).
- When connecting optical digital cords, insert the plugs straight in until they click into place.
- Do not bend or tie optical digital cords.

Tip


All the digital audio jacks are compatible with 32 kHz, 44.1 kHz, 48 kHz, and 96 kHz sampling frequencies.

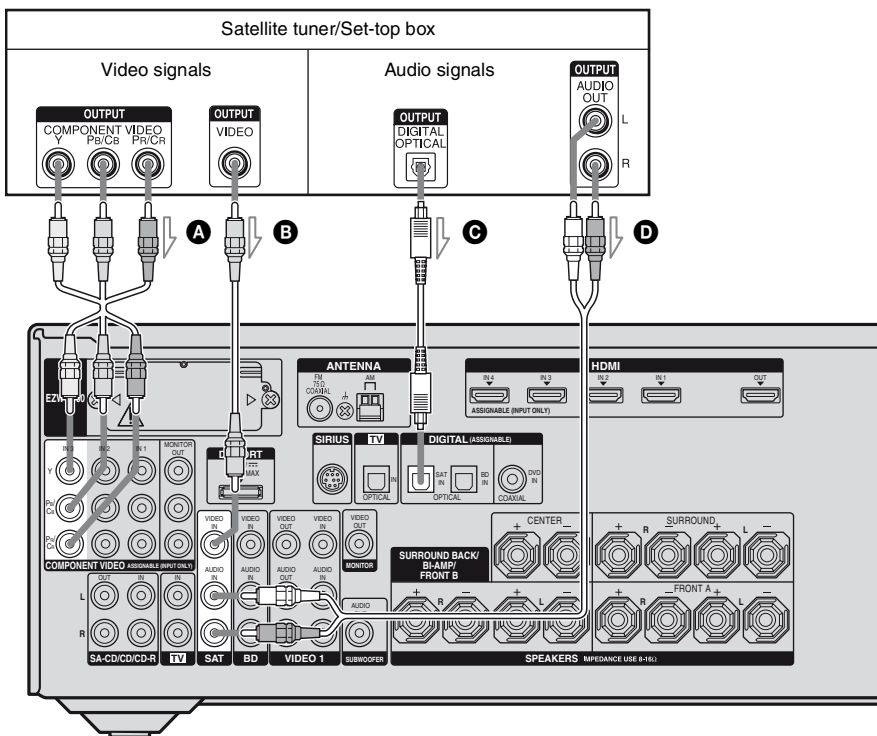

- Ⓐ Component video cord (not supplied)
- Ⓑ Video cord (not supplied)
- Ⓒ Optical digital cord (not supplied)
- Ⓓ Audio cord (not supplied)

5: Connecting the antennas (aerials)

Connect the supplied AM loop antenna (aerial) and FM wire antenna (aerial). Before connecting antennas (aerials), be sure to disconnect the power cord.

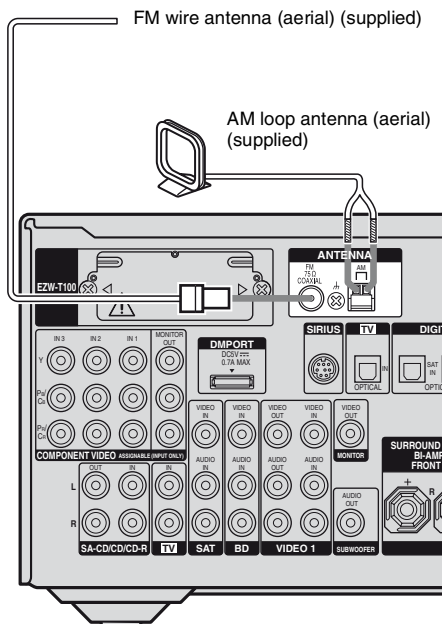


Notes

- To prevent noise pickup, keep the AM loop antenna (aerial) away from the receiver and other components.
- Be sure to fully extend the FM wire antenna (aerial).
- After connecting the FM wire antenna (aerial), keep it as horizontal as possible.

6: Preparing the receiver and the remote

Connecting the AC power cord (mains lead)


Connect the AC power cord (mains lead) to a wall outlet.

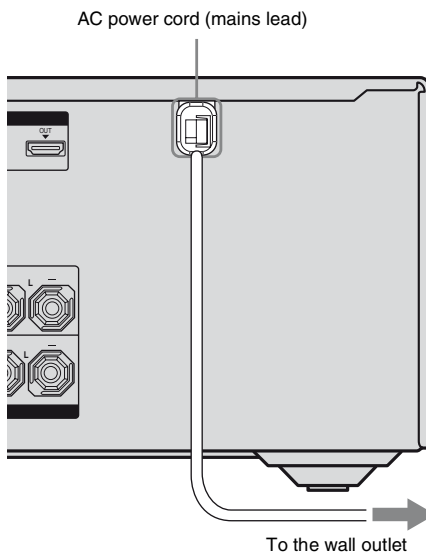

Performing initial setup operations

Before using the receiver for the first time, initialize the receiver by performing the following procedure. This procedure can also be used to return settings you have made to their factory defaults.

Be sure to use the buttons on the receiver for this operation.

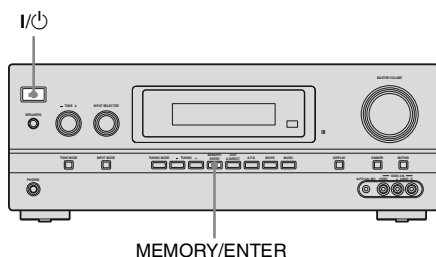

1 Press I/⏻ to turn off the receiver.

2 Hold down I/⏻ for 5 seconds.

After “Clear All” appears on the display for a while, “Press ENT” appears.


3 Press MEMORY/ENTER.

After “CLEARING” appears on the display for a while, “CLEARED” appears.

All the settings you have changed or adjusted are reset to the initial settings.

Inserting batteries into the remote

Insert two R6 (size-AA) batteries in the RM-AAP043 Remote Commander. Observe the correct polarity when installing batteries.

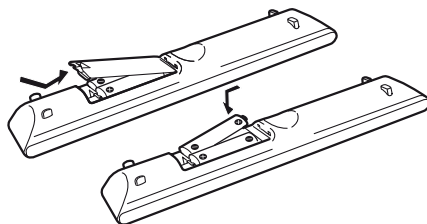


Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with old ones.
- Do not mix manganese batteries and other kinds of batteries.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you do not intend to use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.
- When you replace the batteries, the programmed remote codes may be cleared. If this happens, program the remote codes again (page 104).
- When the remote no longer operates the receiver, replace all the batteries with new ones.

7: Selecting the speaker system

You can select the front speakers you want to drive.

Be sure to use the buttons on the receiver for this operation.

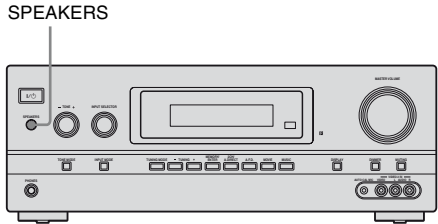

Press SPEAKERS repeatedly to select the front speaker system you want to drive.

To select	Light up
The front speakers connected to the SPEAKERS FRONT A terminals	SP A
The front speakers connected to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals	SP B*
The front speakers connected to both the SPEAKERS FRONT A and SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals (parallel connection)	SP A + B*

* To select “SP B” or “SP A + B”, set “SB ASSIGN” to “SPK B” in the SPEAKER menu (page 52).

To turn off the speaker output

Press SPEAKERS repeatedly until the “SP A”, “SP B” and “SP A+B” indicators on the display do not light up.
 “ALL OFF” appears on the display for a while.

Note

You cannot switch the front speaker system by pressing SPEAKERS when the headphones are connected.

8: Calibrating the appropriate settings automatically (AUTO CALIBRATION)

This receiver is equipped with DCAC (Digital Cinema Auto Calibration) Technology which allows you to perform automatic calibration as follows:

- Check the connection between each speaker and the receiver.^{a)}
- Adjust the speaker level.
- Measure the distance of each speaker from your listening position.^{a)}
- Measure the speaker size.^{a)}
- Measure the speaker polarity.
- Measure the frequency characteristics.^{a)b)}

^{a)}The measurement result is not utilized in the following cases.

- ANALOG DIRECT is selected.

^{b)}The measurement result is not utilized in the following cases.

- Dolby TrueHD signals with a sampling frequency of more than 96 kHz are being received.
- PCM signals with a sampling frequency of more than 96 kHz are being received.

The DCAC is designed to obtain proper sound balance in your room. However, you can adjust the speaker levels and balance manually according to your preference. For details, see “9: Adjusting the speaker levels and balance (TEST TONE)” (page 40).


Before you perform Auto Calibration

Before you perform the Auto Calibration, set up and connect the speakers (page 17, 18).

- The AUTO CAL MIC jack is used for the supplied optimizer microphone only. Do not connect other microphones to this jack. Doing so may damage the receiver and the microphone.
- During the calibration, the sound that comes out of the speakers is very loud. The volume of the sound cannot be adjusted. Pay attention to the presence of children or to the effect on your neighborhood.
- Perform the Auto Calibration in a quiet environment to avoid the effect of noise and get a more accurate measurement.
- If there are any obstacles in the path between the optimizer microphone and the speakers, the calibration cannot be performed correctly. Remove any obstacles from the measurement area to avoid measurement error.
- When you use a bi-amplifier connection, set “SB ASSIGN” to “BI-AMP” in the SPEAKER menu (page 52) before you perform Auto Calibration.
- When you use speakers front B connection, set “SB ASSIGN” to “SPK B” in the SPEAKER menu (page 52) before you perform Auto Calibration.
- If you want to use surround amplifier, be sure to pair the surround amplifier to S-AIR main unit before you perform Auto Calibration (page 88).
- Select the seating position as position 1, 2 or 3 to save the Auto Calibration result (page 38).

Notes

- The Auto Calibration function does not work in the following cases.
 - SPEAKERS is set to off.
 - Headphones are connected.
- If you activate the muting function during Auto Calibration, the muting function will automatically be set to off.

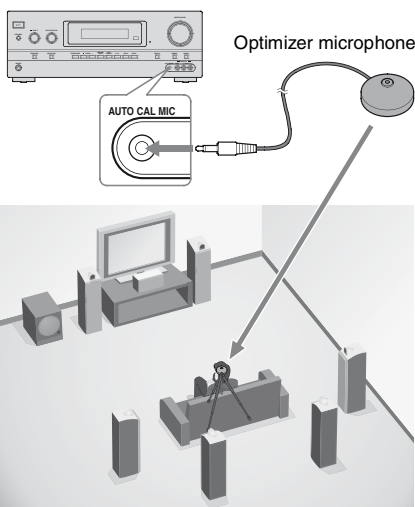


- 1 Connect the supplied optimizer microphone to the AUTO CAL MIC jack.**
- 2 Set up the optimizer microphone.**

Place the optimizer microphone at your listening position. Use a stool or tripod so that the optimizer microphone remains at the same height as your ears.

On setting up the active subwoofer


- When a subwoofer is connected, turn on the subwoofer and turn up the volume beforehand. Turn the MASTER VOLUME knob to just before the mid-point.
- If you connect a subwoofer with a crossover frequency function, set the value to the maximum.
- If you connect a subwoofer with an auto standby function, set this function to off (deactivated).

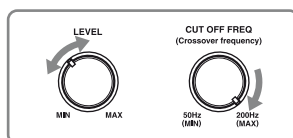

Note

Depending on the characteristics of the subwoofer you are using, the setup distance value may be further away from the actual position.

Performing Auto Calibration

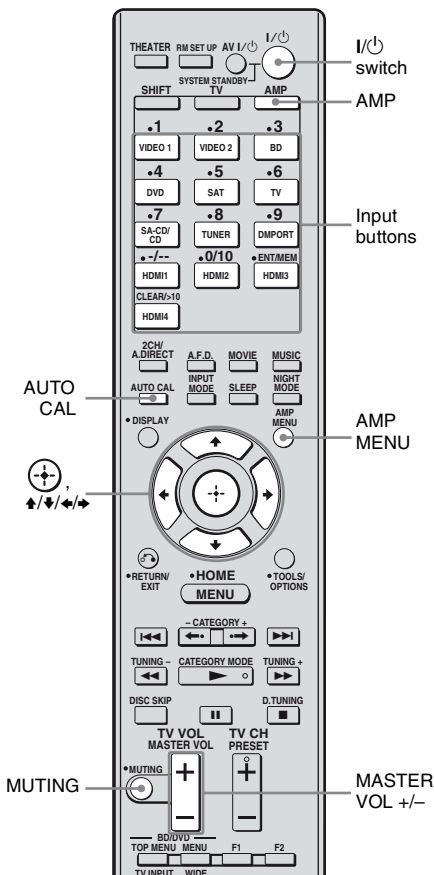

Press AUTO CAL.

Measurement starts in 5 seconds. A count down is displayed.

The measurement process will take approximately 30 seconds to complete. The table below shows the display when measurement starts.

Measurement for	Display
Speaker existence	TONE
Speaker gain, distance, frequency response	T.S.P.
Subwoofer gain and distance	WOOFER

Tips

- Operations other than turning the receiver on or off are deactivated during the measurement.
- The measurements may not be performed correctly or Auto Calibration cannot be performed when special speakers, such as dipole speakers are used.

To cancel Auto Calibration

The Auto Calibration function will be canceled when you do the following during the measurement process:

- Press I/⏻.
- Press the input buttons or turn the INPUT SELECTOR on the receiver.
- Change the volume level.
- Press MUTING.
- Change the setting of the SPEAKERS.
- Connect headphones.
- Press AUTO CAL again.

Confirming/saving the measurement results

1 Confirm the measurement result.

When the measurement ends, a beep sounds and the measurement result appears on the display.

Measurement result	Display	Explanation
When the measurement process completes properly	SAVE EXIT	Proceed to step 2.
When the measurement process fails	E - ■■■■:■■■	See “When error codes appear” (page 37).

2 Press AMP and then press \uparrow/\downarrow repeatedly to select the item. Then, press \oplus .

Item	Explanation
EXIT	Exits the setting process without saving the measurement results.
LEVEL INFO	Displays the measurement result for speaker level.
DIST. INFO	Displays the measurement result for speaker distance.
PHASE INFO	Displays the phase of each speaker (in phase/out of phase). See “When you select “PHASE INFO”” (page 37).
WARN CHECK	Displays warning concerning the measurement results. See “When you select “WARN CHECK”” (page 38).
SAVE EXIT	Saves the measurement results and exits the setting process.
RETRY	Performs the Auto Calibration again.

3 Select “SAVE EXIT” in step 2 to save the measurement result.

“COMPLETE” appears on the display and the settings are registered as selected position number.

4 Press \uparrow/\downarrow repeatedly to select CAL TYPE, then press \oplus .

Setting	Explanation
FULL FLAT	Makes the measurement of frequency from each speaker flat.
ENGINEER	Sets the frequency characteristics to a set that matches that of the Sony listening room standard.
FRONT REF	Adjusts the characteristics of all speakers to match the characteristics of the front speaker.
OFF	Sets the Auto Calibration equalizer level to off.

Tip
The size of a speaker (LARGE/SMALL) is determined by the low frequency characteristics.
The measurement results may vary, depending on the position of the optimizer microphone and speakers, and the shape of the room. It is recommended that you follow the measurement results. However, you can change those settings in the SPEAKER menu (page 51). Save the measurement results first, then try to change the settings if you want.

When error codes appear




Check the problem of the error and perform Auto Calibration again.

Display	Explanation
E - ■■■■* ¹ : 31	SPEAKERS is set to OFF. Set it to others (page 33) and perform the measurement again.
E - ■■■■* ¹ : 32	None of the speakers were detected. Make sure that the optimizer microphone is connected properly and perform the measurement again. If the optimizer microphone is connected properly but the error code appears, the optimizer microphone cable may be damaged or improperly connected.
E - ■■■■* ¹ : 33	<ul style="list-style-type: none"> None of the front speakers are connected or only one front speaker is connected. The optimizer microphone is not connected. Either the left or right surround speakers is not connected. Surround back speakers are connected even though surround speakers are not connected. Connect the surround speaker(s) to the SURROUND terminals. The surround back speaker is connected only to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B R terminals. When you connect only one surround back speaker, connect it to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B L terminals.

*1 ■■■■ represent a speaker channel



F	Front
S	Surround
SB	Surround back

To perform Auto Calibration again

- 1 Press .
- 2 Press  to select "RETRY? YES", then press .

When you select "PHASE INFO"

You can check the phase of each speaker (in phase/out of phase).

Press  repeatedly to select a speaker, then press  to return to step 2 of "Confirming/saving the measurement results" (page 36).


Display	Explanation
■■■■* ² : IN	The speaker is in phase.
■■■■* ² : OUT	The speaker is out of phase. The "+" and "-" terminals of the speaker may be connected the other way around. However, depending on the speakers, "■■■■ : OUT" appears on the display even though the speakers are connected properly. This is because of the speakers' specifications. In this case, you can continue to use the receiver.

*2 ■■■■ represent a speaker channel

FL	Front left
FR	Front right
CNT	Center
SL	Surround left
SR	Surround right
SB	Surround back
SBL	Surround back left
SBR	Surround back right
SW	Subwoofer

When you select “WARN CHECK”

If a warning on the measurement result is present, detailed information is displayed.

Press  to return to step 2 of “Confirming/saving the measurement results” (page 36).

Display	Explanation
W - ■■■■*3 : 40	The measurement has completed. However, the noise level is high. You may be able to perform the measurement properly if you try it again, even though the measurement cannot be performed in all environments. Try to perform the measurement in a quiet environment.
W - ■■■■*3 : 41	The sound input from the optimizer microphone is outside the acceptable range. It is louder than the loudest sound that can be measured. Try to perform the measurement when the environment is quiet enough to allow proper measurement.
W - ■■■■*3 : 42	The volume of the receiver is out of the acceptable range. Try to perform the measurement when the environment is quiet enough to allow proper measurement.
W - ■■■■*3 : 43	The distance and position of a subwoofer cannot be detected. This may be caused by noise. Try to perform the measurement in a quiet environment.
NO WARN	There is no warning information.

*3 ■■■■ represent a speaker channel

- FL Front left
- FR Front right
- CNT Center
- SL Surround left
- SR Surround right
- SBL Surround back left
- SBR Surround back right
- SW Subwoofer

Tip

Depending on the position of the subwoofer, the measurement results for polarity may vary. However, there will be no problems even if you continue to use the receiver with that value.

After you have finished

Disconnect the optimizer microphone from the receiver.

Note

If you have reposition your speaker, we recommend that you perform Auto Calibration again to enjoy the surround sound.

AUTO CAL menu parameters

You can use the AUTO CAL menu to make various adjustments for Auto Calibration settings and to name inputs. Select “AUTO CAL” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

■ A.CAL START (Auto Calibration)

■ CAL TYPE (Calibration type)*

Lets you select the Auto Calibration type for each seating position. For details, see step 4 of “Confirming/saving the measurement results” (page 36).

* You can select this parameter only when you have performed the Auto Calibration and saved the settings.

■ POSITION (Position)

You can register three patterns as position 1, 2, 3, depending on the seating positions, listening environment, and measurement conditions. If you do not select the position number, the Auto Calibration result will automatically save as POS. 1 (initial setting).

To register more than one set of settings for the listening environment

You can select the seating position you want and register the measurement results of the Auto Calibration for that seating position.

- 1 Press AMP MENU.
- 2 Press $\blacktriangle/\blacktriangledown$ repeatedly to select "AUTO CAL".
- 3 Press \odot or \blacktriangleright to enter the menu.
- 4 Press $\blacktriangle/\blacktriangledown$ repeatedly to select "POSITION".
- 5 Press \odot or \blacktriangleright to enter the parameter.
- 6 Press $\blacktriangle/\blacktriangledown$ repeatedly to select the position (POS. 1, 2, 3) for which you want to register the measurement results, then press \odot .
- 7 Press $\blacktriangle/\blacktriangledown$ repeatedly to select "A.CAL START", then press \odot to perform Auto Calibration.
You can also use AUTO CAL on the remote. For details, see "Performing Auto Calibration" (page 35).
The measurement results is registered as the position you selected in step 6.
- 8 Repeat step 1 to 7 to register another seating position.

To select the registered seating position

- 1 Press AMP MENU.
- 2 Press $\blacktriangle/\blacktriangledown$ repeatedly to select "AUTO CAL".
- 3 Press \odot or \blacktriangleright to enter the menu.
- 4 Press $\blacktriangle/\blacktriangledown$ repeatedly to select "POSITION".
- 5 Press \odot or \blacktriangleright to enter the parameter.
- 6 Press $\blacktriangle/\blacktriangledown$ repeatedly to select position (POS. 1, 2, 3) you want, then press \odot .
The registered seating position is selected.

To exit the menu

Press MENU/HOME or AMP MENU.

■ NAME IN (Naming inputs)

You can rename the position name.

To name the position

- 1 Select the position (POS. 1, 2, 3) for which you want to name.
- 2 Press $\blacktriangle/\blacktriangledown$ repeatedly to select "NAME IN".
- 3 Press \odot or \blacktriangleright to enter the parameter.
The cursor flashes and you can select a character.
- 4 Press $\blacktriangle/\blacktriangledown$ to select a character, then press $\blacktriangle/\blacktriangledown$ to move the cursor to the next position.

If you made a mistake

Press $\blacktriangle/\blacktriangledown$ until the character you want to change flashes, then press $\blacktriangle/\blacktriangledown$ to select the correct character.

Tips


- You can select the character type as follows by pressing $\blacktriangle/\blacktriangledown$.
Alphabet (upper case) → Numbers → Symbols
- To enter a blank space, press \blacktriangleright without selecting a character.

- 5 Press \odot .
The name you entered is registered.

9: Adjusting the speaker levels and balance

(TEST TONE)

You can adjust the speaker levels and balance while listening to the test tone from your listening position.

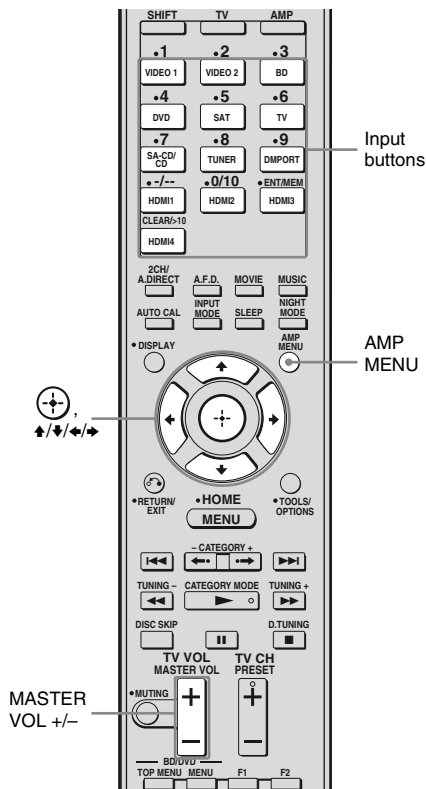

- 1** Press AMP MENU.
- 2** Press \uparrow/\downarrow repeatedly to select “LEVEL”, then press \odot or \rightarrow .
- 3** Press \uparrow/\downarrow repeatedly to select “TEST TONE” then press \odot .

- 4** Press \uparrow/\downarrow repeatedly to select the test tone type and the speaker you want to adjust.

You can select “FIX ■■■■” or “AUTO ■■■■”. For details, see “TEST TONE (Test tone)” (page 50).

Tips

- To adjust the level of all speakers at the same time, press MASTER VOL +/- . You can also use MASTER VOLUME on the receiver.
- The adjusted value are shown on the display during adjustment.

- 5** Repeat steps 1 to 4 to select “OFF”.

You can also press any input buttons. The test tone turns off.


When a test tone is not output from the speakers

- The speaker cords may not be connected securely.
- The speaker cords may have the short-circuit problem.

When a test tone is output from a different speaker than the speaker indicator showed in the front panel display

The speaker pattern to the connected speaker is not set up correctly. Make sure the speaker connection and the speaker pattern match.

Selecting a component

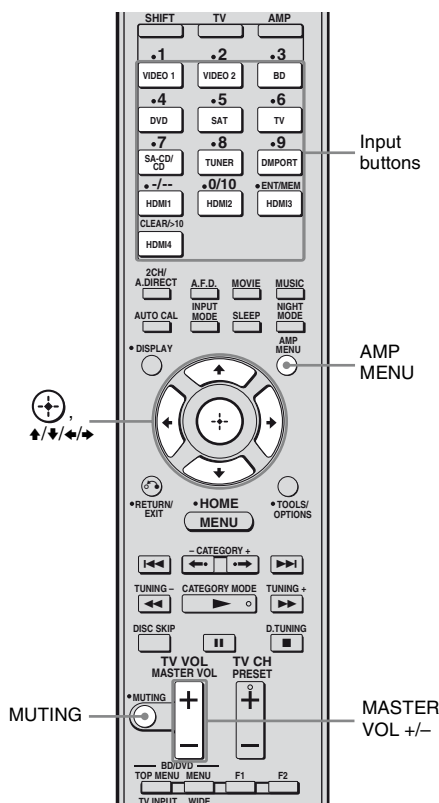

1 Press one of the input buttons to select the component you want.

You can also use INPUT SELECTOR on the receiver.

The selected input appears on the display.

Selected input [Display]	Components that can be played back
VIDEO 1 [VIDEO 1]	VCR, etc., connected to the VIDEO 1 jack
VIDEO 2 [VIDEO 2]	Camcorder, video game, etc., connected to the VIDEO 2/PORTABLE AV IN jack
BD [BD]	Blu-ray disc player, etc., connected to the BD jack
DVD [DVD]	DVD player, etc., connected to DVD jack
SAT [SAT]	Satellite tuner, set-top box, etc., connected to SAT jack
TV [TV]	TV, etc., connected to TV jack
SA-CD/CD [SA-CD/CD/CD-R]*	Super Audio CD player, CD player, etc., connected to the SA-CD/CD/CD-R jack
TUNER [FM TUNER/AM TUNER]	Built-in radio tuner
TUNER [SIRIUS]	SiriusConnect Home tuner connected to the SIRIUS jack.
DMPORT [DMPORT]	DIGITAL MEDIA PORT adapter connected to DMPORT jack
HDMI 1, 2, 3, 4 [HDMI1/HDMI2/HDMI3/HDMI4]	HDMI components connected to HDMI IN 1-4 jack

* "SA-CD/CD/CD-R" scrolls across the display, then "SA-CD/CD" appears.

2 Turn on the component and start playback.

3 Press MASTER VOL +/- to adjust the volume.

You can also use MASTER VOLUME on the receiver.

To activate the muting function

Press MUTING on the remote.

The muting function will be canceled when you do the following.

- Press MUTING again.
- Increase the volume.
- Turn off the receiver.

To avoid damaging your speakers

Before you turn off the receiver, be sure to turn down the volume level.

Naming inputs

You can enter a name of up to 8 characters for inputs and display it on the receiver's display. This is convenient for labeling the jacks with the names of the connected components.

1 Press one of the input buttons to select the input you want to create an index name for.

You can also use INPUT SELECTOR on the receiver.

2 Press AMP MENU.

3 Press \uparrow/\downarrow repeatedly to select "SYSTEM".

4 Press \oplus or \rightarrow to enter the menu.

5 Press \uparrow/\downarrow repeatedly to select "NAME IN".

6 Press \oplus or \rightarrow to enter the parameter.

The cursor flashes and you can select a character.

7 Press \uparrow/\downarrow to select a character, then press \leftarrow/\rightarrow to move the cursor to the next position.

If you made a mistake

Press \leftarrow/\rightarrow until the character you want to change flashes, then press \uparrow/\downarrow to select the correct character.

Tips


- You can select the character type as follows by pressing \uparrow/\downarrow .
Alphabet (upper case) \rightarrow Numbers \rightarrow Symbols
- To enter a blank space, press \rightarrow without selecting a character.

8 Press \oplus .

The name you entered is registered.

Listening/Watching a component

Listening to a Super Audio CD/CD

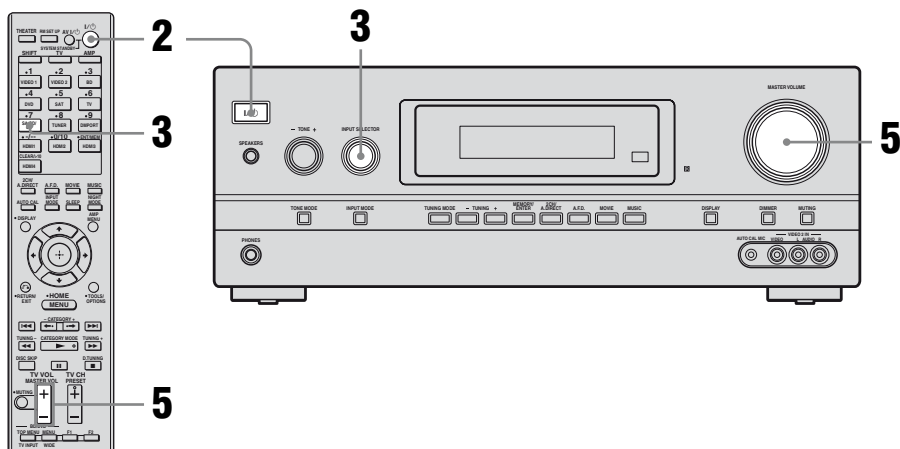

Notes

- The operation is described for a Sony Super Audio CD player.
- Refer to the operating instructions supplied with the Super Audio CD player or CD player.

Tips

- You can select the sound field to suit the music. See page 63 for details.
Recommended sound fields:
Classical: HALL
Jazz: JAZZ
Live concert: CONCERT
- You can listen to the sound that was recorded in the 2 channel format from all speakers (multi channel). See page 60 for details.

1 Turn on the Super Audio CD player or CD player, then place the disc on the tray.

2 Turn on the receiver.

3 Press SA-CD/CD.


You can also use INPUT SELECTOR on the receiver to select "SA-CD/CD/CD-R".

4 Play back the disc.

5 Adjust to a suitable volume.

6 After you have finished listening to the Super Audio CD/CD, eject the disc and turn off the receiver and Super Audio CD player or CD player.

Watching a DVD/Blu-ray Disc

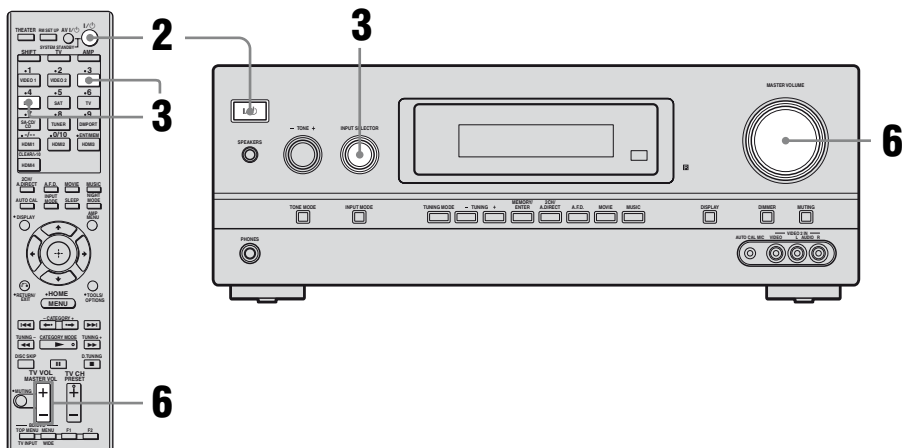

Notes

- Refer to the operating instructions supplied with the TV and DVD player/Blu-ray disc player.
- Check the following if you cannot listen to multi channel sound.
 - Be sure this receiver is connected to the DVD player/Blu-ray disc player via a digital connection.
 - Be sure the digital audio output of the DVD player/Blu-ray disc player is set up properly.

Tips


- Select the audio format of the disc to be played back, if necessary.
- You can select the sound field to suit the movie or music. See page 60 for details.
Recommended sound fields:
Movie: C.ST.EX
Music: CONCERT

- 1 Turn on the TV and DVD player/Blu-ray disc player.**
- 2 Turn on the receiver.**
- 3 Press DVD to watch a DVD or press BD to watch a Blu-ray disc.**
You can also use INPUT SELECTOR on the receiver to select “DVD” or “BD”.
- 4 Switch the input of the TV so that an image of the DVD/Blu-ray disc is displayed.**
- 5 Play back the disc.**
- 6 Adjust to a suitable volume.**
- 7 After you have finished watching the DVD/Blu-ray disc, eject the disc and turn off the receiver, TV and DVD player/Blu-ray disc player.**

Amplifier Operations

Navigating through menus

By using the amplifier menus, you can make various adjustments to customize the receiver.

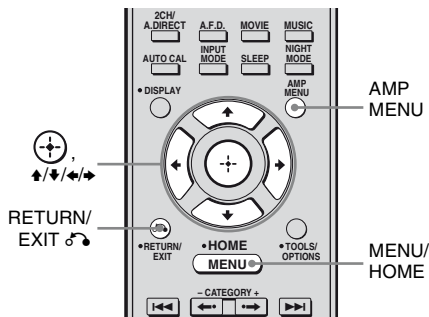

To return to the previous display



Press **←** or RETURN/EXIT .

To exit the menu

Press MENU/HOME or AMP MENU.

Note

Some parameters and settings may appear dimmed on the display. This means that they are either unavailable or fixed and unchangeable.

- 1** Press AMP MENU.
- 2** Press **↑/↓** repeatedly to select the menu you want.
- 3** Press  or **→** to enter the menu.
- 4** Press **↑/↓** repeatedly to select the parameter you want to adjust.
- 5** Press  or **→** to enter the parameter.
- 6** Press **↑/↓** repeatedly to select the setting you want.

The setting is entered automatically.

Overview of the menus

The following options are available in each menu. For details on navigating through menus, see page 45.

Menu [Display]	Parameters [Display]	Settings	Initial setting
AUTO CAL [AUTO CAL] (page 38)	Auto calibration [A.CAL START]		
	Calibration type ^{a)} [CAL TYPE]	FULL FLAT, ENGINEER FRONT REF, OFF	FULL FLAT
	Position ^{a)} [POSITION]	POS. 1, POS. 2, POS. 3	POS. 1
	Naming inputs ^{a)} [NAME IN]	For details, see “To name the position” (page 39).	
LEVEL [LEVEL] (page 50)	Test tone ^{a)c)} [TEST TONE]	OFF, FIX ■■■ ^{b)} , AUTO ■■■ ^{b)}	OFF
	Phase noise ^{a)c)} [P. NOISE]	OFF, FL/SR, SL/FL, SB/SL, SBL/SL, SBR/SBL, SR/SB, SR/SBR, SR/SL, FR/SR, FR/SL, FL/FR, CNT/FR, FL/CNT	OFF
	Phase audio ^{a)c)} [P. AUDIO]	OFF, FL/SR, SL/FL, SB/SL, SBL/SL, SBR/SBL, SR/SB, SR/SBR, SR/SL, FR/SR, FR/SL, FL/FR, CNT/FR, FL/CNT	OFF
	Front left speaker level ^{c)} [FL LEVEL]	FL –10 dB to FL +10 dB (0.5 dB per step)	0 dB
	Front right speaker level ^{c)} [FR LEVEL]	FR –10 dB to FR +10 dB (0.5 dB per step)	0 dB
	Center speaker level ^{c)} [CNT LEVEL]	CNT –20 dB to CNT +10 dB (0.5 dB per step)	0 dB
	Surround left speaker level ^{c)} [SL LEVEL]	SL –20 dB to SL +10 dB (0.5 dB per step)	0 dB
	Surround right speaker level ^{c)} [SR LEVEL]	SR –20 dB to SR +10 dB (0.5 dB per step)	0 dB
	Surround back speaker level ^{c)} [SB LEVEL]	SB –20 dB to SB +10 dB (0.5 dB per step)	0 dB
	Surround back left speaker level ^{c)} [SBL LEVEL]	SBL –20 dB to SBL +10 dB (0.5 dB per step)	0 dB
	Surround back right speaker level ^{c)} [SBR LEVEL]	SBR –20 dB to SBR +10 dB (0.5 dB per step)	0 dB
	Subwoofer level ^{c)} [SW LEVEL]	SW –20 dB to SW +10 dB (0.5 dB per step)	0 dB
	Dynamic range compressor ^{a)} [D. RANGE]	COMP. MAX, COMP. STD, COMP. AUTO, COMP. OFF	COMP. AUTO

Menu [Display]	Parameters [Display]	Settings	Initial setting
SPEAKER [SPEAKER] (page 51)	Speaker pattern ^{a)} [SP PATTERN]	3/4.1, 3/4, 3/3.1, 3/3, 2/4.1, 2/4, 3/2.1, 3/2, 2/3.1, 2/3, 2/2.1, 2/2, 3/0.1, 3/0, 2/0.1, 2/0	3/4.1
	Front speakers ^{a)} [FRT SP]	LARGE, SMALL	LARGE
	Center speaker ^{a)} [CNT SP]	LARGE, SMALL	LARGE
	Surround speakers ^{a)} [SUR SP]	LARGE, SMALL	LARGE
	Surround back speaker assign ^{a)d)} [SB ASSIGN]	SPK B, BI-AMP, OFF	OFF
	Front left speaker distance ^{a)c)} [FL DIST.]	FL 3'3" to FL 32'9" (1 inch step)	FL 9'10"
	Front right speaker distance ^{a)c)} [FR DIST.]	FR 3'3" to FR 32'9" (1 inch step)	FR 9'10"
	Center speaker distance ^{a)c)} [CNT DIST.]	CNT 3'3" to CNT 32'9" (1 inch step)	CNT 9'10"
	Surround left speaker distance ^{a)c)} [SL DIST.]	SL 3'3" to SL 32'9" (1 inch step)	SL 9'10"
	Surround right speaker distance ^{a)c)} [SR DIST.]	SR 3'3" to SR 32'9" (1 inch step)	SR 9'10"
	Surround back speaker distance ^{a)c)} [SB DIST.]	SB 3'3" to SB 32'9" (1 inch step)	SB 9'10"
	Surround back left speaker distance ^{a)c)} [SBL DIST.]	SBL 3'3" to SBL 32'9" (1 inch step)	SBL 9'10"
	Surround back right speaker distance ^{a)c)} [SBR DIST.]	SBR 3'3" to SBR 32'9" (1 inch step)	SBR 9'10"
	Subwoofer distance ^{a)c)} [SW DIST.]	SW 3'3" to SW 32'9" (1 inch step)	SW 9'10"
	Distance unit ^{a)} [DIST. UNIT]	FEET, METER	FEET
	Front speaker crossover frequency ^{a)e)} [FRT CROSS]	CROSS 40 Hz to CROSS 200 Hz (10 Hz step)	CROSS 120 Hz
	Center speaker crossover frequency ^{a)e)} [CNT CROSS]	CROSS 40 Hz to CROSS 200 Hz (10 Hz step)	CROSS 120 Hz
	Surround speaker crossover frequency ^{a)e)} [SUR CROSS]	CROSS 40 Hz to CROSS 200 Hz (10 Hz step)	CROSS 120 Hz

Menu [Display]	Parameters [Display]	Settings	Initial setting
SURROUND [SURROUND] (page 54)	Sound field selection [S.F. SELECT]	For details, see “Enjoying Surround Sound” (page 60).	A.F.D. AUTO
	Enhanced surround mode [E.SUR MODE]	PLII [®] , PLIIx [®] , NEO6 CIN, NEO6 MUS, NEURAL-THX	PLIIx
	Effect level ^{a)} [EFFECT]	EFCT. 50%, EFCT. 80%, EFCT. 100%, EFCT. 150%	EFCT. 100%
EQ [EQ] (page 55)	Front speakers bass level [BASS]	BASS –10 dB to BASS +10 dB (1dB per step)	BASS 0 dB
	Front speakers treble level [TREBLE]	TREBLE –10 dB to TREBLE +10 dB (1dB per step)	TREBLE 0 dB
TUNER [TUNER] (page 55)	FM station receiving mode ^{a)} [FM MODE]	STEREO, MONO	STEREO
	Naming preset stations ^{a)} [NAME IN]	For details, see “Naming preset stations” (page 71).	
	Parental lock ^{a)g)} [PARENTAL]	LOCK OFF, LOCK ON	LOCK OFF
	Lock code edit ^{a)g)} [CODE EDIT]	For details, see “To change the lock code” (page 78).	
	SIRIUS antenna aiming mode ^{a)g)} [SR ANT AIM]	For details, see “Checking receiving conditions (SIRIUS Antenna Aiming)” (page 73).	
	SIRIUS radio ID ^{a)g)} [SIRIUS ID]	For details, see “Checking the SIRIUS ID” (page 73).	
AUDIO [AUDIO] (page 56)	Synchronizes audio with video output ^{a)} [A/V SYNC]	0 ms to 300 ms (10 ms per step)	0 ms
	Digital broadcast language selection ^{a)} [DUAL MONO]	MAIN/SUB, MAIN, SUB	MAIN
	Digital audio input decoding priority ^{a)} [DEC. PRIO.]	DEC. AUTO, DEC. PCM	DEC. AUTO
	Digital audio input assignment ^{a)} [A. ASSIGN]	For details, see “Enjoying the sound/ images from other inputs” (page 94).	
VIDEO [VIDEO] (page 57)	Video input assignment ^{a)} [V. ASSIGN]	For details, see “Enjoying the sound/ images from other inputs” (page 94).	

Menu [Display]	Parameters [Display]	Settings	Initial setting
HDMI [HDMI] (page 58)	Control for HDMI ^{a)} [CTRL:HDMI]	CTRL ON, CTRL OFF	CTRL OFF
	Setting HDMI audio input ^{a)} [AUDIO OUT]	AMP, TV+AMP	AMP
	Subwoofer level for HDMI ^{a)h)} [SW LEVEL]	SW AUTO, SW 0 dB, SW +10 dB	SW AUTO
SYSTEM [SYSTEM] (page 59)	Naming inputs [NAME IN]	For details, see “Naming inputs” (page 42).	
	Brightness of the display ^{a)} [DIMMER]	70% DOWN, 40% DOWN, 0% DOWN	0% DOWN
S-AIR [S-AIR] (page 59)	S-AIR ID ^{a)i)} [S-AIR ID]	ID: A, ID: B, ID: C	ID: A
	Pairing ^{a)i)} [PAIRING]	START, CONDITION	START
	S-AIR mode ^{a)i)} [S-AIR MODE]	PARTY, SEPARATE	PARTY
	RF Change ^{a)i)} [RF CHANGE]	RF AUTO, RF ON, RF OFF	RF AUTO
	S-AIR Standby ^{a)i)} [S-AIR STBY]	STBY ON, STBY OFF	STBY OFF

a) For details, see the page in the parentheses.

b) ■■■ represent a speaker channel (FL, FR, CNT, SL, SR, SB, SBL, SBR, SW).

c) Depends on the speaker pattern setting, some parameters may not be available.

d) You can only select this parameter if “SP PATTERN” is not set to a setting with surround back speakers (page 51).

e) You cannot select this setting if your speaker is set to “LARGE”.

f) Depends on the speaker pattern setting, some settings may not be available.

g) This parameter is only available if the SiriusConnect Home tuner is connected to the SIRIUS jack on the receiver.

h) This parameter is only available when HDMI input signals is detected.

i) This parameter is only available if the S-AIR transmitter (not supplied) is inserted to the EZW-T100 slot on the receiver.

Adjusting the level

(LEVEL menu)

You can use the LEVEL menu to adjust the balance and level of each speaker. These settings are applied to all sound fields. Select “LEVEL” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

LEVEL menu parameters

■ TEST TONE (Test tone)

Lets you adjust the speaker levels and balance while listening to the test tone from your listening position.

- OFF

The test tone is turned off.

- FIX ■■■■*

The test tone is output from the speaker you have selected.

- AUTO ■■■■*

The test tone is output from each speaker in sequence.

* ■■■ represent a speaker channel.

■ P. NOISE (Phase noise)

- OFF

The phase noise is turned off.

- FL/SR, SL/FL, SB/SL, SBL/SL, SBR/SBL, SR/SB, SR/SBR, SR/SL, FR/SR, FR/SL, FL/FR, CNT/FR, FL/CNT

Lets you output the test tone sequentially from adjacent speakers.

Some items may not be displayed, depending on the setting of the speaker pattern.

■ P. AUDIO (Phase Audio)

- OFF

- FL/SR, SL/FL, SB/SL, SBL/SL, SBR/SBL, SR/SB, SR/SBR, SR/SL, FR/SR, FR/SL, FL/FR, CNT/FR, FL/CNT

Lets you output front 2 channel source sound (instead of the test tone) sequentially from adjacent speakers.

Some items may not be displayed, depending on the setting of the speaker pattern.

■ FL LEVEL (Front left speaker level)

■ FR LEVEL (Front right speaker level)

■ CNT LEVEL (Center speaker level)

■ SL LEVEL (Surround left speaker level)

■ SR LEVEL (Surround right speaker level)

■ SB LEVEL (Surround back speaker level)

■ SBL LEVEL (Surround back left speaker level)

■ SBR LEVEL (Surround back right speaker level)

■ SW LEVEL (Subwoofer level)

Note

Depends on the speaker pattern setting, some parameters may not be available.

■ D. RANGE (Dynamic range compressor)

Lets you compress the dynamic range of the sound track. This may be useful when you want to watch movies at low volumes late at night. Dynamic range compression is possible with Dolby Digital sources only.

- **COMP. MAX**

The dynamic range is compressed dramatically.

- **COMP. STD**

The dynamic range is compressed as intended by the recording engineer.

- **COMP. AUTO**

The dynamic range is compressed automatically.

- **COMP. OFF**

The dynamic range is not compressed.

Tip

Dynamic range compressor lets you compress the dynamic range of the soundtrack based on the dynamic range information included in the Dolby Digital signal.

“COMP. STD” is the standard setting, but it only enacts light compression. Therefore, we recommend using the “COMP. MAX” setting. This greatly compresses the dynamic range and lets you view movies late at night at low volumes. Unlike analog limiters, the levels are predetermined and provide a very natural compression.

Settings for the speakers (SPEAKER menu)

You can use the SPEAKER menu to set the size and distance of the speakers connected to this receiver.

Select “SPEAKER” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

SPEAKER menu parameters

■ SP PATTERN (Speaker pattern)

Lets you set the number of the speakers connected to this receiver. It should be synchronize with the subwoofer, front speakers, center speaker, surround speakers and surround back speakers settings. For details, see “Selecting a speaker pattern” (page 20).

■ FRT SP (Front speakers)

- **LARGE**

If you connect large speakers that will effectively reproduce bass frequencies, select “LARGE”. Normally, select “LARGE”. However, if you have selected a speaker pattern without subwoofer, the front speakers are automatically set to “LARGE”.

- **SMALL**

If the sound is distorted, or you feel a lack of surround effects when using multi channel surround sound, select “SMALL” to activate the bass redirection circuitry and output the front channel bass frequencies from the subwoofer. When the front speakers are set to “SMALL”, the center and surround speakers are also automatically set to “SMALL”.

■ CNT SP (Center speaker)

- **LARGE**

If you connect a large speaker that will effectively reproduce bass frequencies, select “LARGE”. Normally, select “LARGE”. However, if the front speakers are set to “SMALL”, you cannot set the center speaker to “LARGE”.

- **SMALL**

If the sound is distorted, or you feel a lack of surround effects when using multi channel surround sound, select “SMALL” to activate the bass redirection circuitry and output the center channel bass frequencies from the front speakers (if set to “LARGE”) or subwoofer.

■ SUR SP (Surround speakers)

The surround back speakers will be set to the same setting.

- **LARGE**

If you connect large speakers that will effectively reproduce bass frequencies, select “LARGE”. Normally, select “LARGE”. However, if the front speakers are set to “SMALL”, you cannot set the surround speakers to “LARGE”.

- **SMALL**

If the sound is distorted, or you feel a lack of surround effects when using multi channel surround sound, select “SMALL” to activate the bass redirection circuitry and output the surround channel bass frequencies from the subwoofer or other speaker that is set to “LARGE”.

Tip

The “LARGE” and “SMALL” settings for each speaker determine whether the internal sound processor will cut the bass signal from that channel. When the bass is cut from a channel, the bass redirection circuitry sends the corresponding bass frequencies to the subwoofer or other “LARGE” speakers.

However, since bass sounds have a certain amount of directionality, it is best not to cut them, if possible. Therefore, even when using small speakers, you can set them to “LARGE” if you want to output the bass frequencies from that speaker. On the other hand, if you are using a large speaker, but prefer not to have bass frequencies output from that speaker, set it to “SMALL”.

If the overall sound level is lower than you prefer, set all speakers to “LARGE”. If there is not enough bass, you can use the equalizer to boost the bass levels. For details, see page 55.

■ SB ASSIGN (Surround back speaker assign)

- **SPK B**

If you connect an additional front speaker system to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals, select “SPK B”.

- **BI-AMP**

If you connect front speakers to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals using a bi-amplifier connection, select “BI-AMP”.

- **OFF**

If you connect surround back speakers to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals, select “OFF”.

Note

Set “SB ASSIGN” to “OFF”, then connect the surround back speakers to this receiver when you want to change the connection from a bi-amplifier connection or speakers front B connection to a surround back speakers connection. Re-set up the speakers after you connect the surround back speakers. See “8: Calibrating the appropriate settings automatically (AUTO CALIBRATION)” (page 33).


■ FL DIST. (Front left speaker distance)

■ FR DIST. (Front right speaker distance)


Lets you set the distance from your listening position to the front speakers (A).

If both front speakers are not placed an equal distance from your listening position, set the distance to the closest speaker.

With only one surround back speaker

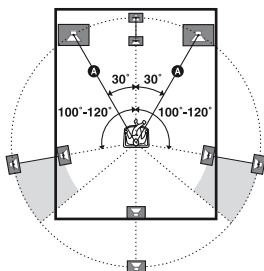

With two surround back speakers (The angle B should be the same)

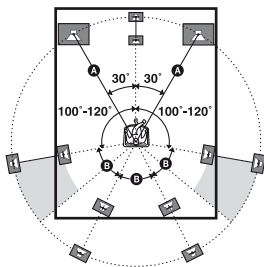

■ CNT DIST. (Center speaker distance)

Lets you set the distance from your listening position to the center speaker.

■ SL DIST. (Surround left speaker distance)

■ SR DIST. (Surround right speaker distance)

Lets you set the distance from your listening position to the surround speakers.

■ SB DIST. (Surround back speaker distance)

■ SBL DIST. (Surround back left speaker distance)

■ SBR DIST. (Surround back right speaker distance)

Lets you set the distance from your listening position to the surround back speakers.

■ SW DIST. (Subwoofer distance)

Lets you set the distance from your listening position to the subwoofer.

Note

Depends on the speaker pattern setting. Some parameters may not be available.

Tip


The distance between the center speaker and the listening position [B] cannot be more than 5 feet closer than the one between the listening position and the front speaker [A]. Place the speakers so that the difference in the length of [B] in the following diagram is no more than 5 feet closer than the length of [A].

Example: Adjust the distance [B] to 15 feet or more when the distance [A] is 20 feet.

Also, the distance between the surround speakers/surround back speakers and the listening position [C] cannot be more than 15 feet closer than the distance between the listening position and the front speakers [A]. Place the speakers so that the difference in the length of [C] in the following diagram is no more than 15 feet closer than the length of [A].

Example: Adjust the distance [C] to 5 feet or more when the distance [A] is 20 feet.

This is important because incorrect speaker placement is not conducive to the enjoyment of surround sound. Please note that placing the speakers closer than the required will cause a delay in the output of the sound from that speaker. In other words, the speaker will sound like it is farther away. Adjusting these parameter while listening to the sound often results in much better surround sound. Give it a try!

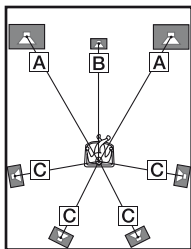

■ DIST. UNIT (Distance unit)

Lets you select the unit of measure for setting distances.

- FEET

The distance is displayed in feet.

- METER

The distance is displayed in meters.

■ FRT CROSS (Front speaker crossover frequency)

Lets you set the bass crossover frequency of the front speakers that have been set to “SMALL” in the SPEAKER menu.

■ CNT CROSS (Center speaker crossover frequency)

Lets you set the bass crossover frequency of the center speaker that have been set to “SMALL” in the SPEAKER menu.

■ SUR CROSS (Surround speaker crossover frequency)

Lets you set the bass crossover frequency of the surround speakers that have been set to “SMALL” in the SPEAKER menu.

Settings for the surround sound

(SURROUND menu)

You can use the SURROUND menu to select the sound field you want for your listening pleasure.

Select “SURROUND” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

SURROUND menu parameters

■ S.F. SELECT (Sound field selection)

Lets you select the sound field you want. For details, see “Enjoying Surround Sound” (page 60).

Note

The receiver lets you apply the last selected sound field to an input whenever it is selected (Sound Field Link). For example, if you select “HALL” for the DVD input, then change to a different input and then return to DVD, “HALL” will automatically be applied again.

■ E.SUR MODE (Enhanced surround mode)

Lets you select the surround mode you want. For details, see “Selecting enhanced surround mode” (page 62).

■ EFFECT (Effect level)

Lets you adjust the “presence” of the surround effect for the Cinema Studio EX A/B/C sound fields.

Adjusting the equalizer (EQ menu)

You can use the EQ menu to adjust the tonal quality (bass/treble level) of the front speakers.

Select “EQ” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

EQ menu parameters

■ BASS (Front speakers bass level)*

■ TREBLE (Front speakers treble level)*

* You can also adjust the front speaker bass and treble level with TONE MODE and TONE +/- on the receiver (page 7).

Note

This function does not work in the following cases.

- Dolby TrueHD signals with a sampling frequency of more than 96 kHz are being received.
- PCM signals with a sampling frequency of more than 96 kHz are being received.

Settings for the tuner (TUNER menu)

You can use the TUNER menu to set the FM station receiving mode, name preset stations and check SIRIUS Satellite Radio status.

Select “TUNER” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

TUNER menu parameters

■ FM MODE (FM station receiving mode)

• STEREO

This receiver will decode the signal as stereo signal when the radio station is broadcast in stereo.

• MONO

This receiver will decode the signal as mono signal regardless of the broadcast signal.

■ NAME IN (Naming preset stations)

Lets you set the name of preset stations. For details, see “Naming preset stations” (page 71).

■ PARENTAL (Parental lock)

Lets you restrict access to certain channels using your own lock code. For details, see “Restricting access to specific channels (Parental Lock)” (page 77).

■ CODE EDIT (Lock code edit)

Lets you change the lock code. For details, see “To change the lock code” (page 78).

■ SR ANT AIM (SIRIUS antenna aiming mode)

This parameter helps you to aim the SIRIUS antenna for optimal signal reception. For details, see “Checking receiving conditions (SIRIUS Antenna Aiming)” (page 73).

■ SIRIUS ID (SIRIUS radio ID)

Lets you check the SIRIUS Radio ID. For details, see “Checking the Sirius Radio ID” (page 73).

Settings for the audio (AUDIO menu)

You can use the AUDIO menu to make settings for the audio to suit your preference. Select “AUDIO” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

AUDIO menu parameters

■ A/V SYNC (Synchronizes audio with video output)

Lets you delay the output of audio to minimize the time gap between audio output and visual display. You can adjust from 0 ms to 300 ms in 10 ms steps.

Notes

- This parameter is useful when you use a large LCD or plasma monitor or a projector.
- This parameter is not valid when ANALOG DIRECT is selected (page 66).

■ DUAL MONO (Digital broadcast language selection)

Lets you select the language you want to listen to during digital broadcast. This feature only functions for Dolby Digital sources.

- MAIN/SUB
 - Sound of the main language will be output through the front left speaker and sound of the sub language will be output through the front right speaker simultaneously.
- MAIN
 - Sound of the main language will be output.
- SUB
 - Sound of the sub language will be output.

■ DEC. PRIO. (Digital audio input decoding priority)

Lets you specify the input mode for the digital signal input to the HDMI IN jacks.

- DEC. AUTO

Automatically switches the input mode between DTS, Dolby Digital, or PCM.

- DEC. PCM

PCM signals are output from the connected player. To prevent interruption when playback starts, set to “DEC. PCM”. When signals other than PCM signals are received, set this item to “DEC. AUTO”.

Note

Even when “DEC. PRIO.” is set to “DEC. PCM”, the sound may be interrupted at the very beginning of the first track depending on the CD being played back.

■ A. ASSIGN (Digital audio input assignment)

Lets you assign the digital audio input to other input source. For details, see “Enjoying the sound/images from other inputs” (page 94).

Settings for the video (VIDEO menu)

You can use the VIDEO menu to assign the video input to other input source.

Select “VIDEO” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

VIDEO menu parameters

■ V. ASSIGN (Video input assignment)

Lets you assign the video input to other input source. For details, see “Enjoying the sound/images from other inputs” (page 94).

Settings for the HDMI

(HDMI menu)

You can use the HDMI menu to make various adjustments for HDMI settings.

Select “HDMI” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

HDMI menu parameters

■ CTRL:HDMI (Control for HDMI)

Lets you turn the Control for HDMI function on or off. For details, see ““BRAVIA” Sync Features” (page 81).

■ AUDIO OUT (Setting HDMI audio input)

Lets you set the HDMI audio output from the playback component connected to the receiver via an HDMI connection.

- AMP

The HDMI audio signals from the playback component are only output to the speakers connected to the receiver. Multi channel sound can be played back as it is.

Note

Audio signals are not output from the TV’s speakers when “AUDIO OUT” is set to “AMP”.

- TV+AMP

The sound is output from TV’s speaker and the speakers connected to the receiver.

Notes

- The sound quality of the playback component depends on the TV’s sound quality, such as the number of channels, and the sampling frequency, etc. When the TV has stereo speakers, the sound output from the receiver is also stereo as that of the TV, even if you play back multi channel software.
- When you connect the receiver to an image display component (projector, etc.), sound may not be output from the receiver. In this case, select “AMP”.

■ SW LEVEL (Subwoofer level for HDMI)

Lets you set the level of the subwoofer to 0 dB or +10 dB when PCM signals are input via an HDMI connection. You can set the level for each HDMI input independently.

- SW AUTO

Automatically sets the level to 0 dB or +10 dB depending on the frequency.

- SW 0 dB

- SW +10 dB

Note

This parameter is only available when HDMI input signals are detected.

Settings for the system (SYSTEM menu)

You can use the SYSTEM menu to name inputs and change the brightness of the display.

Select “SYSTEM” in the amplifier menus. For details on adjusting the parameters, see “Navigating through menus” (page 45) and “Overview of the menus” (page 46).

SYSTEM menu parameters

■ NAME IN (Naming inputs)

Lets you set the name of inputs. For details, see “Naming inputs” (page 42).

■ DIMMER (Brightness of the display)

Lets you adjust the brightness in 3 steps.

Settings for the S-AIR (S-AIR menu)

For details on S-AIR, see “S-AIR Operations” (page 85).

Enjoying a pre-programmed sound field

When connecting Blu-ray disc players and other next generation HD players

This receiver supports the following audio formats.


Audio format	Maximum number of channels	Connection of the playback component and the receiver	
		COAXIAL/OPTICAL	HDMI
Dolby Digital	5.1ch	○	○
Dolby Digital EX	6.1ch	○	○
Dolby Digital Plus ^{a)}	7.1ch	×	○
Dolby TrueHD ^{a)}	7.1ch	×	○
DTS	5.1ch	○	○
DTS-ES	6.1ch	○	○
DTS 96/24	5.1ch	○	○
DTS-HD High Resolution Audio ^{a)}	7.1ch	×	○
DTS-HD Master Audio ^{a) b)}	7.1ch	×	○
Multi channel Linear PCM ^{a)}	7.1ch	×	○

^{a)} Audio signals are output in another format if the playback component does not correspond to the format. For details, refer to the operating instructions of the playback component.

^{b)} Signals with a sampling frequency of more than 96 kHz are played back at 96 kHz or 88.2 kHz.

Selecting Auto Format Direct (A.F.D.) mode

The Auto Format Direct (A.F.D.) mode allows you to listen to higher fidelity sound and select the decoding mode for listening to a 2 channel stereo sound as multi channel sound.

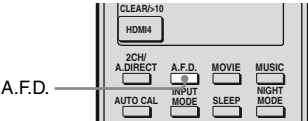

Press A.F.D. repeatedly to select the sound field you want.


For details, see “Types of A.F.D. mode” (page 61).

Types of A.F.D. mode

A.F.D. mode [Display]	Multi channel audio after decoding	Effect
A.F.D. Auto [A.F.D. AUTO]	(Detecting automatically)	Presents the sound as it was recorded/encoded without adding any surround effects. However, this receiver will generate a low frequency signal for output to the subwoofer when there is no LFE signals.
Enhanced surround mode [E.SURROUND]	(Depends on selected enhanced surround mode)	For details, see “Selecting enhanced surround mode” (page 62).
Multi Stereo [MULTI ST.]	(Multi Stereo)	Outputs 2 channel left/right signals from all speakers. However, sound may not be output from certain speakers depending on the speaker settings.

Selecting enhanced surround mode

The enhanced surround mode allows you to listen to higher fidelity sound and select the decoding mode for listening to a 2 channel stereo sound as multi channel sound.

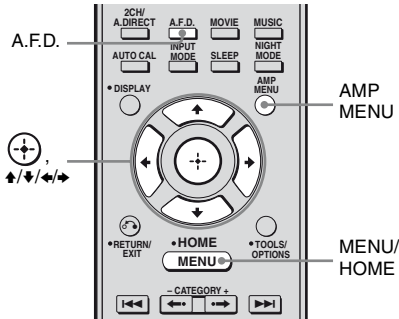

- 1** Press AMP MENU.
- 2** Press \uparrow/\downarrow repeatedly to select “SURROUND”, then press \leftarrow or \rightarrow .
- 3** Press \uparrow/\downarrow repeatedly to select “E.SUR MODE” then press \leftarrow or \rightarrow .
- 4** Press \uparrow/\downarrow repeatedly to select the enhanced surround mode you want, then press \leftarrow .
- 5** Press MENU/HOME or AMP MENU to exit the menu.
- 6** Press A.F.D. repeatedly to select “E.SURROUND”.

The enhanced surround mode you have selected in “E.SUR MODE” menu will be applied.

Types of enhanced surround mode

Enhanced surround mode [Display]	Multi channel audio after decoding	Effect
Pro Logic II* [PLII]	5 channel	Performs Dolby Pro Logic II decoding.
Pro Logic IIx* [PLIIx]	7 channel	Performs Dolby Pro Logic IIx decoding.
Neo:6 Cinema [NEO6 CIN]	7 channel	Performs DTS Neo:6 Cinema mode decoding.
Neo:6 Music [NEO6 MUS]	7 channel	Performs DTS Neo:6 Music mode decoding. This setting is ideal for normal stereo sources such as CDs.
Neural-THX [NEURAL-THX]	7 channel	Next generation of Neural-THX® Surround. In addition to stereo enhancement processing and pure discrete 5.1 surround sound, now capable of full 360° 7.1 surround sound playback from Neural-THX® surround encoded content.

* Depends on the speaker pattern setting, some enhanced surround mode may not be available.

If you connect a subwoofer

This receiver will generate a low frequency signal for output to the subwoofer when there is no LFE signal, which is a low-pass sound effect output from a subwoofer to a 2 channel signal. However, the low frequency signal is not generated for “NEO6 CIN” or “NEO6 MUS” when all speakers are set to “LARGE”. In order to take full advantage of the Dolby Digital bass redirection circuitry, we recommend setting the subwoofer’s cut off frequency as high as possible.

Notes


- This function does not work in the following cases.
 - PCM signals with a sampling frequency of more than 96 kHz are being received.
 - DTS 96/24 signals are being received.
 - DTS-HD signals with a sampling frequency of more than 48 kHz are being received.
 - Dolby TrueHD signals with a sampling frequency of more than 48 kHz are being received.
- The beginning of the sound stream may be dropped out when Neural-THX processing is turned on or off.

Tips

- You can identify the encoding format of DVD software, etc., by looking at the logo on the package.
- Dolby Pro Logic IIx decoding is effective, when a multi-channel signal is input.

Selecting movie/music mode

You can take advantage of surround sound simply by selecting one of the receiver’s pre-programmed sound fields. They bring the exciting and powerful sound of movie theaters and concert halls into your home.

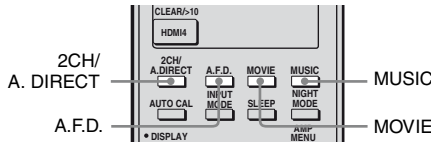

Press MOVIE repeatedly to select a sound field for movies or press MUSIC repeatedly to select a sound field for music.

For details, see “Types of movie/music mode” (page 64).

Types of movie/music mode

Sound field for	Sound field [Display]	Effect
Movie	Cinema Studio EX A D C S [C.ST.EX A]	Reproduces the sound characteristics of the Sony Pictures Entertainment "Cary Grant Theater" cinema production studio. This is a standard mode, great for watching almost any type of movie.
	Cinema Studio EX B D C S [C.ST.EX B]	Reproduces the sound characteristics of the Sony Pictures Entertainment "Kim Novak Theater" cinema production studio. This mode is ideal for watching science-fiction or action movies with lots of sound effects.
	Cinema Studio EX C D C S [C.ST.EX C]	Reproduces the sound characteristics of the Sony Pictures Entertainment scoring stage. This mode is ideal for watching musicals or films where orchestra music is featured in the soundtrack.
	V.Multi Dimension D C S [V.MULTI DIM.]	Creates many virtual speakers from a single pair of actual surround speakers.
Music	Hall [HALL]	Reproduces the acoustics of a classical concert hall.
	Jazz Club [JAZZ]	Reproduces the acoustics of a jazz club.
	Live concert [CONCERT]	Reproduces the acoustics of a 300-seat live house.
	Stadium [STADIUM]	Reproduces the feeling of a large open-air stadium.
	Sports [SPORTS]	Reproduces the feeling of sports broadcasting.
	Portable Audio Enhancer [PORTABLE]	Reproduces a clear enhanced sound image from your portable audio device. This mode is ideal for MP3 and other compressed music.
Headphone*	Headphone 2CH [HP 2CH]	This mode is selected automatically if you use headphones when 2CH STEREO mode (page 66)/A.F.D. mode (page 61) is selected. Standard 2 channel stereo sources completely bypass the sound field processing and multi channel surround formats are downmixed to 2 channels except LFE signals.
	Headphone Direct [HP DIRECT]	Outputs the analog signals without processing by the equalizer, sound field, etc.

* You can only select this sound field if the headphones are connected to the receiver.

Notes

- The sound fields for music and movies do not work in the following cases.
 - PCM signals with a sampling frequency of more than 48 kHz are being received.
 - DTS 96/24 signals are being received.
 - DTS-HD signals with a sampling frequency of more than 48 kHz are being received.
 - Dolby TrueHD signals with a sampling frequency of more than 48 kHz are being received.
- The effects provided by the virtual speakers may cause increased noise in the playback signal.
- When listening with sound fields that employ the virtual speakers, you will not be able to hear any sound coming directly from the surround speakers.
- When one of the sound fields for music is selected, no sound is output from the subwoofer if all the speakers are set to “LARGE” in the SPEAKER menu. However, the sound will be output from the subwoofer if the digital input signal contains LFE signals, or if the front or surround speakers are set to “SMALL,” the sound field for movie is selected, or “PORTABLE” is selected.

Tip

Sound fields with **DCS** marks use DCS technology. For details on Digital Cinema Sound (DCS), see “Glossary” (page 108).

To turn off the surround effect for movie/music mode

Press 2CH/A.DIRECT repeatedly to select “2CH ST.” or press A.F.D. repeatedly to select “A.F.D. AUTO”.

Enjoying the surround effect at low volume levels

(NIGHT MODE)

This function allows you to retain a theater like environment at low volume levels. This function can be used with other sound fields. When watching a movie late at night, you will be able to hear the dialog clearly even at a low volume level.



Press NIGHT MODE.


The NIGHT MODE function is activated. The NIGHT MODE is set to on and off as you press NIGHT MODE.

Note

- This function does not work in the following cases.
- Dolby TrueHD signals with a sampling frequency of more than 96 kHz are being received.
 - PCM signals with a sampling frequency of more than 96 kHz are being received.

Using only the front speakers (2CH STEREO)

In this mode, the receiver outputs the sound from the front left/right speakers only. There is no sound from the subwoofer. Standard 2 channel stereo sources completely bypass the sound field processing and multi channel surround formats are downmixed to 2 channel except LFE signals.

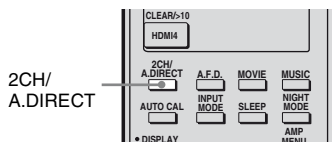


Press 2CH/A.DIRECT repeatedly to select “2CH ST.”.

Note

No sound is output from the subwoofer in the 2CH STEREO mode. To listen to 2 channel stereo sources using the front left/right speakers and a subwoofer, select “A.F.D. AUTO” (page 61).

Listening to the sound without any adjustment (ANALOG DIRECT)

You can switch the audio of the selected input to 2 channel analog input. This function enables you to enjoy high quality analog sources. When using this function, only the volume and front speaker balance can be adjusted.

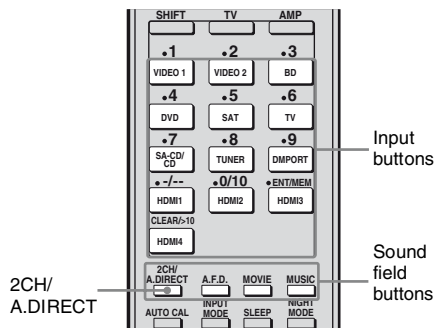

- 1 Press one of the input buttons to select the input you want to listen to in analog audio.**

You can also use the INPUT SELECTOR on the receiver.

- 2 Press 2CH/A.DIRECT repeatedly to select “A.DIRECT”.**

The analog audio is output.

To cancel ANALOG DIRECT

Press 2CH/A.DIRECT again.


You can also press any sound field buttons.

Notes

- When headphones are connected, “HP DIRECT” appears on the display.
- You cannot select ANALOG DIRECT when you select DVD, DMPORT and HDMI 1–4 as input.

Resetting sound fields to the initial settings

Be sure to use the buttons on the receiver for this operation.

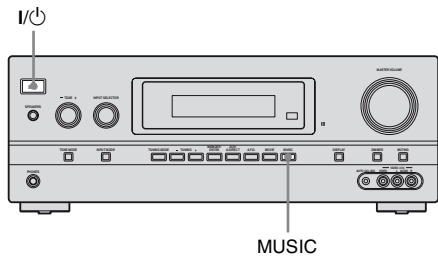

- 1 Press I/⏻ to turn off the receiver.
- 2 While holding down MUSIC, press I/⏻.
“S.F. CLEAR” appears on the display and all sound fields are reset to their initial setting.

Tuner Operations

Listening to FM/AM radio


You can listen to FM and AM broadcasts through the built-in tuner. Before operation, make sure you have connected the FM and AM antennas to the receiver (page 31).

Tip
The tuning scale for direct tuning differs depending on the area code as shown in the following table. For details on area codes, see page 4.

Area code	FM	AM
U, CA	100 kHz	10 kHz*

* The AM tuning scale can be changed (page 69).

Tuner Operations

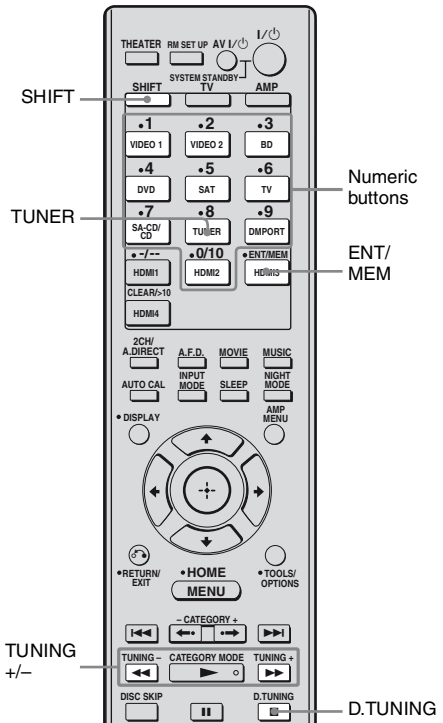

Tuning into a station automatically (Automatic Tuning)

- 1 Press TUNER repeatedly to select the FM or AM band.**
- 2 Press TUNING + or TUNING –.**
Press TUNING + to scan from low to high; press TUNING – to scan from high to low.
The receiver stops scanning whenever a station is received.

Using the controls on the receiver

- 1 Turn INPUT SELECTOR to select the FM or AM band.
- 2 Press TUNING MODE repeatedly to select “AUTO”.
- 3 Press TUNING + or TUNING –.

In case of poor FM stereo reception

If the FM stereo reception is poor and “ST” flashes on the display, select monaural audio so that the sound will be less distorted.

- To select monaural audio, set “FM MODE” in TUNER menu to “MONO” (page 55).
- To return to stereo mode, set “FM MODE” in TUNER menu to “STEREO” (page 55).

Tuning into a station directly (Direct Tuning)

You can enter the frequency of a station directly by using the numeric buttons.

- 1 Press TUNER repeatedly to select the FM or AM band.**
You can also use INPUT SELECTOR on the receiver.
- 2 Press D.TUNING.**
- 3 Press SHIFT.**
- 4 Press the numeric buttons to enter the frequency.**
Example 1: FM 102.50 MHz
Select 1 ➔ 0 ➔ 2 ➔ 5
Example 2: AM 1,350 kHz
Select 1 ➔ 3 ➔ 5 ➔ 0
- 5 Press ENT/MEM.**

You can also use MEMORY/ENTER on the receiver.

Tip

If you have tuned in an AM station, adjust the direction of the AM loop antenna for optimum reception.


If you cannot tune in a station

Make sure you have entered the right frequency. If not, repeat steps 2 to 5. If you still cannot tune in a station, the frequency is not used in your area.

Changing the AM tuning scale

(Models of area code U, CA only)

You can change the AM tuning scale to either 9 kHz or 10 kHz using the buttons on the receiver.

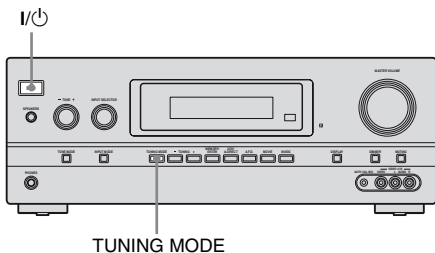

- 1** Press I/⏻ to turn off the receiver.
- 2** While holding down TUNING MODE, press I/⏻.
- 3** Change the current AM tuning scale to 9 kHz (or 10 kHz).


To reset the scale to 10 kHz (or 9 kHz), repeat the procedure above.

Note

All preset stations will be erased when you change the tuning scale.

Presetting FM/AM radio stations

You can preset up to 30 FM stations and 30 AM stations. Then you can easily tune in the stations you often listen to.

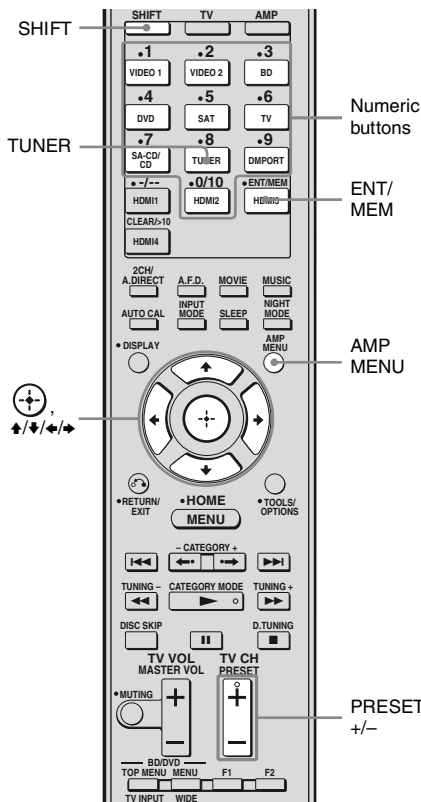

Tuner Operations

- 1** Press TUNER repeatedly to select the FM or AM band.

You can also use INPUT SELECTOR on the receiver.

continued

2 Tune in the station that you want to preset using Automatic Tuning (page 68) or Direct Tuning (page 68).

Switch the FM reception mode, if necessary (page 68).

3 Press SHIFT.

4 Press ENT/MEM.

You can also use MEMORY/ENTER on the receiver.

“MEM” lights up for a few seconds.

Perform steps 5 and 6 before “MEM” goes out.

5 Press the numeric buttons to select a preset number.

You can also press PRESET + or PRESET – to select a preset number.

If “MEM” goes out before you select the preset number, start again from step 3.

6 Press ENT/MEM.

You can also use MEMORY/ENTER on the receiver.

“MEM” lights off.

The station is stored as the selected preset number.


7 Repeat steps 1 to 6 to preset another station.

Tuning to preset stations

1 Press TUNER repeatedly to select the FM or AM band.

2 Press PRESET + or PRESET – repeatedly to select the preset station you want.

Each time you press the button, you can select a preset station as follows:



You can also press SHIFT and then press the numeric buttons to select the preset station you want. Then, press ENT/MEM to enter the selection.

Using the controls on the receiver

- 1** Turn INPUT SELECTOR to select the FM or AM band.
- 2** Press TUNING MODE repeatedly to select “PRESET”.
- 3** Press TUNING + or TUNING – to select the preset station you want.

Naming preset stations

- 1 Press TUNER repeatedly to select the FM or AM band.**
You can also use INPUT SELECTOR on the receiver.
- 2 Tune in the preset station you want to create an index name for (page 70).**
- 3 Press AMP MENU.**
- 4 Press \uparrow/\downarrow repeatedly to select “TUNER”.**
- 5 Press \oplus or \rightarrow to enter the menu.**
- 6 Press \uparrow/\downarrow repeatedly to select “NAME IN”.**
- 7 Press \oplus or \rightarrow to enter the parameter.**
The cursor flashes and you can select a character.
- 8 Press \uparrow/\downarrow to select a character, then press \leftarrow/\rightarrow to move the cursor to the next position.**

If you made a mistake

Press \leftarrow/\rightarrow until the character you want to change flashes, then press \uparrow/\downarrow to select the correct character.

Tips

- You can select the character type as follows by pressing \uparrow/\downarrow .
Alphabet (upper case) \rightarrow Numbers \rightarrow Symbols
- To enter a blank space, press \rightarrow without selecting a character.

- 9 Press \oplus .**

The name you entered is registered.

Listening to Satellite Radio

To listen to Satellite Radio, you'll need to connect a SIRIUS Satellite Radio tuner (sold separately) to your Sirius-Ready receiver. SIRIUS Satellite Radio is available to residents of the US (except Alaska and Hawaii) and Canada.

Satellite Radio delivers a variety of commercial-free music from categories ranging from Pop, Rock, Country, R&B, Dance, Jazz, Classical and many more plus coverage of all the top professional and college sports including play by play games from select leagues and teams. Additional programming includes expert sports talk, uncensored entertainment, comedy, family programming, local traffic and weather and news from your most trusted sources.

Once you've purchased a SIRIUS tuner you'll need to activate it and subscribe to begin enjoying the service. Easy to follow installation and setup instructions are provided with the SIRIUS tuner. There are a variety of programming packages available, including the option of adding “The Best of XM” programming to the SIRIUS service. The “Best of XM” service is not available to SIRIUS Canada subscribers at this time. Please check with SIRIUS Canada for any updates using the numbers and web address below.


Family friendly packages are also available to restrict channels featuring content that may be inappropriate for children.

To subscribe to SIRIUS, U.S. and Canadian customers can call 1-888-539-SIRI (1-888-539-7474) or visit sirius.com (US) or siriuscanada.ca (Canada).

SIRIUS and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All other marks and logos are the property of their respective owners. All rights reserved. SIRIUS subscription sold separately. Taxes and a one-time activation fee may apply. SIRIUS tuner required (sold separately) to receive the SIRIUS service. All programming and fees subject to change. It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate or otherwise make available any technology or software incorporated in receivers compatible with the SIRIUS Satellite Radio System. **Service not available in Alaska or Hawaii.**


Connecting the SIRIUS Satellite Radio

Connect the SiriusConnect Home tuner. When you use the SiriusConnect Home tuner with this receiver, be sure to connect the AC power adaptor supplied with the tuner to a wall outlet.

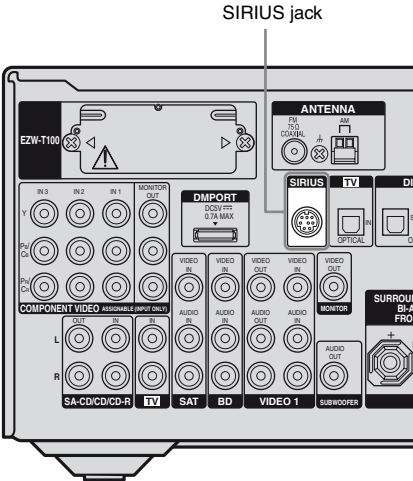

Note
Keep the SiriusConnect Home tuner, antenna, and AC power adaptor away from the speaker cords and the power cord to avoid picking up noise.

Preparing to listen to the SIRIUS Satellite Radio

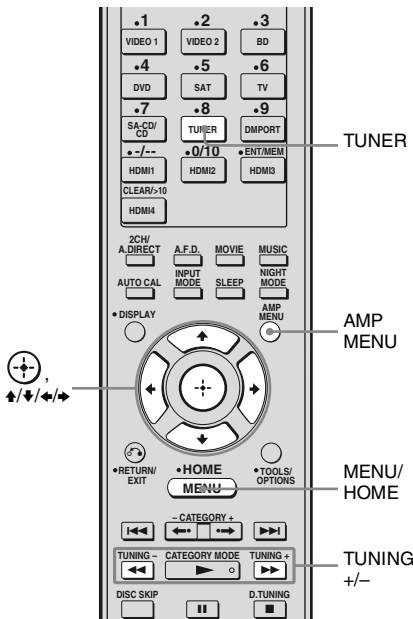

Checking the Sirius Radio ID

- 1** Press TUNER repeatedly to select “SIRIUS”.
- 2** Press AMP MENU.
- 3** Press \uparrow/\downarrow repeatedly to select “TUNER”.
- 4** Press \oplus or \rightarrow to enter the menu.
- 5** Press \uparrow/\downarrow repeatedly to select “SIRIUS ID”.
- 6** Check the SIRIUS ID on the display and write it in the space provided here.

SIRIUS ID: _____

Using the controls on the receiver

- 1** Turn INPUT SELECTOR to select “SIRIUS”.
- 2** Press TUNING MODE repeatedly to select “AUTO”, and then press TUNING + or TUNING – to select channel 0.
- 3** Check the SIRIUS ID on the display and write it in the space provided here.

SIRIUS ID: _____

Checking receiving conditions (SIRIUS Antenna Aiming)

- 1** Press TUNER repeatedly to select “SIRIUS”.
You can also use INPUT SELECTOR on the receiver.
- 2** Press AMP MENU.
- 3** Press \uparrow/\downarrow repeatedly to select “TUNER”.
- 4** Press \oplus or \rightarrow to enter the menu.
- 5** Press \uparrow/\downarrow repeatedly to select “SR ANT AIM”.
- 6** Press \oplus or \rightarrow to enter the parameter.
- 7** While checking the parameter, aim your antenna to where the best reception will be received.
For details on the parameter, see “SIRIUS Signal strength” below.

SIRIUS Signal strength

Signal strength	Signal type	
	Satellite	Terrestrial
EXC (excellent)	S : 3	T : 3
GOOD	S : 2	T : 2
WEAK	S : 1	T : 1
NONE	S : 0	T : 0

When you have finished

Press MENU/HOME or AMP MENU.

Receiving SIRIUS Satellite Radio broadcasts


1 Press TUNER repeatedly to select “SIRIUS”.

You can also use INPUT SELECTOR on the receiver.

2 Press TUNING + or TUNING – to select a channel.

You can also press TUNING MODE on the receiver to select “AUTO”, and then press TUNING + or TUNING – to select a channel.

Selecting a channel of the SIRIUS Satellite Radio

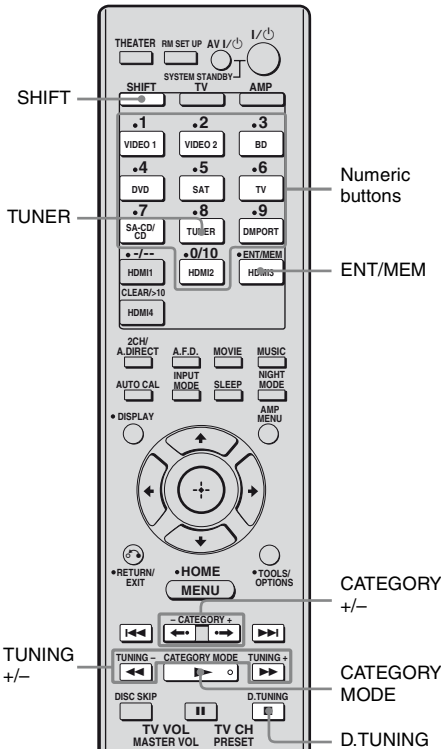

Selecting channels from a category (CATEGORY TUNING)

You can select a channel from one category or all the categories by changing the category mode.

1 Press TUNER repeatedly to select “SIRIUS”.

You can also use INPUT SELECTOR on the receiver.

2 Press CATEGORY MODE repeatedly to select the “ONE CAT”.

- ALL CAT: You can select a channel from all the categories. The initial setting is “ALL CAT”.
- ONE CAT: You can select a channel from one category. “CAT” is displayed on the display when you set to “ONE CAT” mode.

3 Press CATEGORY + or CATEGORY – to select the category you want.

The category is selected and the channel with the lowest number in the specified category is selected.

4 Press TUNING + or TUNING – to select the channel.

You can also press TUNING MODE on the receiver to select “AUTO”, and then press TUNING + or TUNING – to select a channel.

Notes

- When you select a channel in the “ONE CAT” mode, the channel you selected may not be the one in the category you want. This is because one channel may belong to more than one category.
- If you press CATEGORY + or CATEGORY – in the “ALL CAT” mode, the first channel of the next or previous category is selected (CATEGORY SKIP).

Selecting channels by inputting the channel number directly (DIRECT TUNING)

1 Press TUNER repeatedly to select “SIRIUS”.

You can also use INPUT SELECTOR on the receiver.

2 Press D.TUNING.

3 Press SHIFT.


4 Press the numeric buttons to enter the channel number.

5 Press ENT/MEM.

You can also use MEMORY/ENTER on the receiver.

The selected channel is tune in.

Displaying the SIRIUS Satellite Radio information on the front panel display

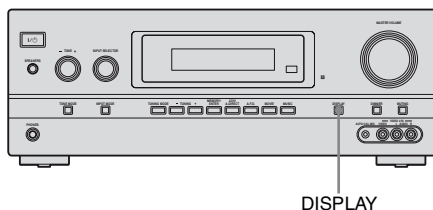


Press DISPLAY on the receiver repeatedly.

Each time you press DISPLAY while tuning in the channel, the display changes cyclically as follows:

Channel name → Channel number →
 Category name → Artist name/Feature →
 Song/Program title → Composer name →
 Signal strength → Sound field type

Presetting SIRIUS Satellite Radio channels

You can select the channels you want directly by presetting them using the preset numbers. You can preset up to 30 SIRIUS Satellite Radio channels.

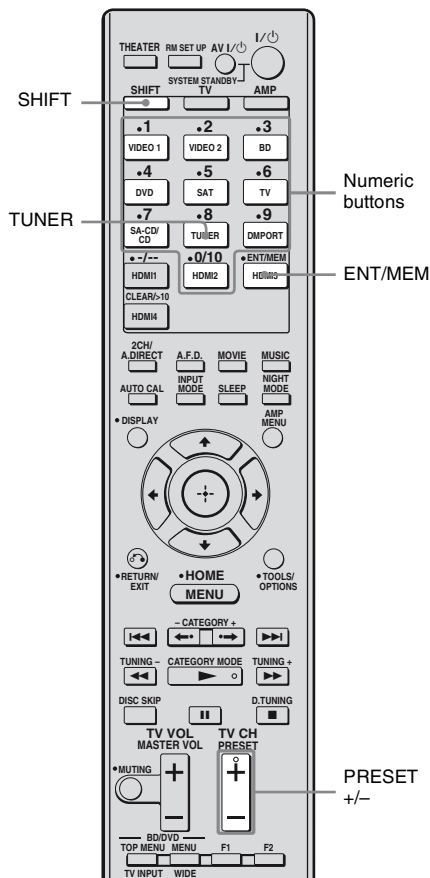

Presetting channels using the preset numbers

- 1 Press TUNER repeatedly to select “SIRIUS”.**
You can also use INPUT SELECTOR on the receiver.
- 2 Select a channel you want to preset using Category Tuning (page 74) or Direct Tuning (page 75).**
- 3 Press SHIFT.**
- 4 Press ENT/MEM.**
You can also use MEMORY/ENTER on the receiver.
- 5 Press the numeric buttons to select a preset number you want to use as the preset channel.**
You can also select the number by pressing PRESET + or PRESET -. You can also press TUNING + or TUNING - on the receiver.
Preset channels from 1 to 30 are available, and channel 184 is preset for all the preset channels when you purchase the receiver.
- 6 Press ENT/MEM.**
You can also use MEMORY/ENTER on the receiver.
“MEM” lights off.
The selected channel is registered as the preset channel you selected in step 2.
- 7 Repeat steps 2 to 6 to preset another channel.**
You can store channels from 1 to 30.

Selecting the channel by using the preset numbers

- 1 Press **TUNER** repeatedly to select “SIRIUS”.

You can also use **INPUT SELECTOR** on the receiver.

- 2 Press **PRESET +** or **PRESET -** repeatedly to select the preset channel you want.

You can also press **SHIFT** and then press the numeric buttons to select the preset channel you want. Then press **ENT/MEM** to enter the selection.

You can also press **TUNING MODE** on the receiver to select “PRESET”, and then press **TUNING +** or **TUNING -**.

You can select preset channels from 1 to 30.


Note

The channel information you have preset may be changed if Sirius XM Radio Inc. change their channel programming.

Restricting access to specific channels (Parental Lock) (SIRIUS only)

You can restrict access to certain channels using your own lock code. The lock code is set to “0000” as the default.

Change the lock code before you use this function for the first time. See “To change the lock code” (page 78).

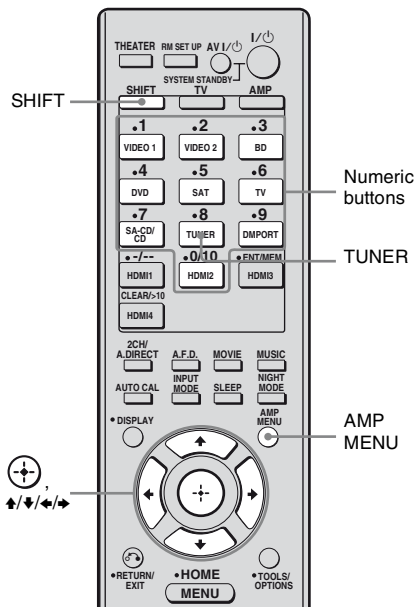

- 1 Press **TUNER** repeatedly to select “SIRIUS”.

You can also use **INPUT SELECTOR** on the receiver.

- 2 Select a channel you want to lock using **Category Tuning** (page 74) or **Direct Tuning** (page 75).

- 3 Press **AMP MENU**.

continued

4 Press **▲/▼** repeatedly to select **“TUNER”**.

5 Press **⊕** or **➡** to enter the menu.

6 Press **▲/▼** repeatedly to select **“PARENTAL”**.

7 Press **⊕** or **➡** to enter the parameter.

8 Press **▲/▼** repeatedly to select **“LOCK ON”** then press **⊕**.
“CODE ■” appears on the display.

9 Press **SHIFT**.

10 Enter your 4-digit lock code using the numeric buttons.
“LOCKED” appears on the display and the Parental Lock is set.
To delete the numbers you have entered, repeat the procedure above from step 3. Select “LOCK OFF” in step 8.

To change the lock code

- 1** Press **TUNER** repeatedly to select **“SIRIUS”**.
You can also use **INPUT SELECTOR** on the receiver.
- 2** Press **AMP MENU**.
- 3** Press **▲/▼** repeatedly to select **“TUNER”**.
- 4** Press **⊕** or **➡** to enter the menu.
- 5** Press **▲/▼** repeatedly to select **“CODE EDIT”**.
- 6** Press **⊕** or **➡** to enter the parameter.
“CODE ■” appears on the display.
- 7** Press **SHIFT**.
- 8** Enter your 4-digit lock code using the numeric buttons.
“NEW ■” appears on the display.

9 Enter a new 4-digit lock code using the numeric buttons.
“CONF. ■” appears on the display.


10 Reenter the new lock code with the numeric buttons.
“CHANGED” appears on the display.

To listen to the locked channels

- 1** Press **TUNER** repeatedly to select **“SIRIUS”**.
You can also use **INPUT SELECTOR** on the receiver.
- 2** Select a locked channel you want to listen to using **Direct Tuning** (page 75).
“LOCKED CH” appears on the display.
- 3** Press **SHIFT**.
- 4** Enter your 4-digit lock code using the numeric buttons.
The channel is tuned in.

To cancel the Parental Lock

- 1** Press **TUNER** repeatedly to select **“SIRIUS”**.
You can also use **INPUT SELECTOR** on the receiver.
- 2** Select a channel you want to unlock using **Direct Tuning** (page 75).
“LOCKED CH” appears on the display.
- 3** Press **SHIFT**.
- 4** Enter your 4-digit lock code using the numeric buttons.
The channel is tuned in.
- 5** Press **AMP MENU**.
- 6** Press **▲/▼** repeatedly to select **“TUNER”**.
- 7** Press **⊕** or **➡** to enter the menu.
- 8** Press **▲/▼** repeatedly to select **“PARENTAL”**.
- 9** Press **⊕** or **➡** to enter the parameter.

10 Press ▲/▼ repeatedly to select “LOCK OFF”, then press .
“CODE ■” appears on the display.

11 Press SHIFT.

12 Enter your 4-digit lock code using the numeric buttons.
“UNLOCKED” appears on the display.

Notes

- When you select a channel using Category Tuning, locked channels are skipped.
- When the receiver is reset to the factory settings, the lock code returns to the default (0000), but the Parental Lock settings are not removed.
- You cannot preset locked channels. If you set the Parental Lock for a preset channel, the preset information for that channel returns to the default.
- You cannot set the Parental Lock for channel 0 or channel 184.

SIRIUS Satellite Radio message list

Message appears	Explanation	Remedies
ANTENNA	The antenna is not connected properly.	Check the connection between the SiriusConnect Home tuner and the antenna.
ACQUIRING	The receiving condition is not good.	Try moving the antenna to another location. For details about the antenna location, refer to the instructions supplied with the SiriusConnect Home tuner.
CALL 888, 539-SIRI	You have not subscribed for the selected channel.	—
SR TUNER	The SiriusConnect Home tuner is not connected properly.	Check all the connections, and then turn the system on again. Also make sure if the AC adaptor supplied with the SiriusConnect Home tuner is connected to a wall socket.
INVALID CHANNEL	You have entered an invalid channel number.	The channel to be tuned-in is void due to the change by the broadcast service, or the receiving condition is not good.
LOCKED CH	The selected channel is locked.	—
SUB UPDT	The subscription information has been updated.	—
UPDATING	Channel information is being updated.	—
FW UPDT	The SiriusConnect Home tuner firmware is being updated.	—
----	There is no text information in the channel.	This is not an error. The text information may not be displayed depending on the system condition, for example, right after the system has received a channel.

“BRAVIA” Sync Features

What is “BRAVIA” Sync?

“BRAVIA” Sync is compatible with Sony TV, Blu-ray Disc/DVD player, AV amplifier, etc., that is equipped with the Control for HDMI function.

By connecting Sony components that are compatible with the “BRAVIA” Sync with an HDMI cable (not supplied), operation is simplified as follows:

- **One-Touch Play:** When you play back a component such as a DVD/Blu-ray disc player, the receiver and the TV will switch to the appropriate HDMI input automatically. In case the receiver or/and the TV is in standby mode, they will be turned on automatically.
- **System Audio Control:** While watching TV, you can select to output the sound from the TV speaker or the speakers connected to the receiver.
- **System Power Off:** When you turn off the TV, the receiver and connected components are also turned off simultaneously.

Control for HDMI is a mutual control function standard used by HDMI CEC (Consumer Electronics Control) for HDMI (High-Definition Multimedia Interface).

The Control for HDMI function does not work in the following cases:

- When you connect the receiver to a component which does not correspond with Sony Control for HDMI function.
- When you connect the receiver and components using other than HDMI connection.

We recommend that you connect the receiver to products featuring “BRAVIA” Sync.

Note

Depending on the connected component, the Control for HDMI function may not work. Refer to the operating instructions of the component.

Preparing for the “BRAVIA” Sync

To use the “BRAVIA” Sync, turn the Control for HDMI function on for both the receiver and the connected component. The receiver is compatible with the “Control for HDMI-Easy Setting” function.

When your TV is compatible with the “Control for HDMI-Easy Setting” function

When you connect a Sony TV with the “Control for HDMI-Easy Setting” function, the Control for HDMI function of the receiver can be turned on simultaneously by turning the Control for HDMI function of the TV on.

- 1 Make sure that the receiver, TV, and playback components are connected using an HDMI cable (not supplied). (The respective components must be compatible with the Control for HDMI function.)

- 2 Turn on the receiver, TV and playback components.


- 3 Turn the Control for HDMI function of the TV on.

The Control for HDMI function of the receiver and all the connected components are simultaneously turned on. During setup, “SCANNING” flashes in the display and once setting is completed, “COMPLETE” will appear. Wait until the setup is complete.

For details on setting the TV, refer to the operating instructions supplied with the TV.

When your TV is not compatible with the “Control for HDMI-Easy Setting” function

Turn the Control for HDMI function of the receiver and the connected component on individually.

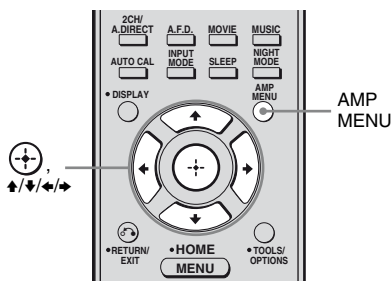

- 1 Perform the steps given in “When your TV is compatible with the “Control for HDMI-Easy Setting” function” (page 82).
- 2 Press AMP MENU.
- 3 Press \uparrow/\downarrow repeatedly to select “HDMI”.
- 4 Press \odot or \rightarrow to enter the menu.
- 5 Press \uparrow/\downarrow repeatedly to select “CTRL:HDMI”.
- 6 Press \odot or \rightarrow to enter the parameter.
- 7 Press \uparrow/\downarrow repeatedly to select “CTRL ON”.
Control for HDMI function is activated.
- 8 Select the HDMI input of the receiver and TV to match the HDMI input of the connected component, so that the image from the connected component is displayed.
- 9 Set the Control for HDMI function for the connected component to on.
If the Control for HDMI function for the connected component is already set to on, you do not need to change the setting.

- 10** Repeat steps 8 and 9 for other components that you want to use the Control for HDMI function.

For details on setting the TV and connected components, refer to the operating instructions of the respective components.

Notes

- When you unplug the HDMI cable or change the connection, perform the steps given in “When your TV is compatible with the “Control for HDMI-Easy Setting” function” (page 82) or “When your TV is not compatible with the “Control for HDMI-Easy Setting” function” (page 82).
- You cannot perform One-Touch Play and System Audio Control during the Control for HDMI-Easy Setting operation.
- Before you do the Control for HDMI-Easy Setting from the TV, be sure to turn on the TV, connected components and receiver.
- If the playback components cannot function after you have made the settings for Control for HDMI-Easy Setting, check the Control for HDMI setting on your TV.
- If the connected components do not support Control for HDMI-Easy Setting, you need to set the Control for HDMI function for the connected components to on before you perform the Control for HDMI-Easy Setting from the TV.

Watching a DVD/Blu-ray disc

(One-Touch Play)

You can enjoy sound and image from the components connected to the receiver via HDMI connections by a simple operation.

Play back a connected component.

The receiver and the TV will switch to the appropriate HDMI input automatically. In case the receiver or/and the TV is in standby mode, they will be turned on automatically.

Watching a DVD/Blu-ray disc by simple operation

You can also select a connected component, such as a DVD/Blu-ray disc player using the TV menu. In this case, the receiver and the TV switch to the appropriate HDMI input.

Note

Depending on the TV, the start of the content may not be output.

Enjoying the TV sound from the speakers connected to the receiver (System Audio Control)

You can enjoy the TV sound from the speakers connected to the receiver by a simple operation.

You can operate System Audio Control function using the TV menu. For details, refer to the operating instructions of the TV. When System Audio Control function is turned on, the receiver will turn on and switches to the appropriate input automatically.

TV sound is output from the speakers connected to the receiver, and the volume of the TV is minimized simultaneously.

You can also use the System Audio Control function as follows.

- If you turn on the receiver while the TV is turned on, the System Audio Control function will automatically be set to on and the TV sound will output from the speakers connected to the receiver. However, if you turn off the receiver, the sound will output from the TV speakers.
- You can adjust the receiver's volume when you adjust the TV volume.


Notes

- If System Audio Control does not function according to your TV setting, refer to the operating instructions of the TV.
- When "CTRL:HDMI" is set to "CTRL ON", the "AUDIO OUT" settings in the HDMI menu will set automatically depending on the System Audio Control settings.
- When you connect a TV that does not have System Audio Control function, the System Audio Control function does not work.
- If the TV is turned on before turning on the receiver, the TV sound will not be output for a moment.
- When you switch to an input other than HDMI or TV, the System Audio Control function will automatically be set to off.

Turning off the receiver with the TV (System Power Off)

When you turn the TV off by using the POWER button on the TV's remote, the receiver and the connected components turn off automatically.

You can also use the receiver's remote to turn off the TV.

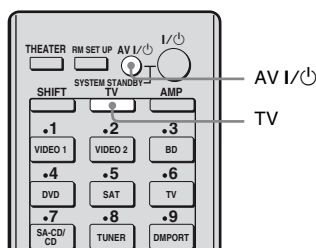

Press TV, then press AV I/O.

The TV, receiver and the components connected via HDMI are turned off.

Notes

- Set the TV Standby Synchro to "ON" before using the System Power Off function. For details, refer to the operating instructions of the TV.
- Depending on the status, the connected components may not be turned off. For details, refer to the operating instructions of the connected components.

About S-AIR products


This receiver is compatible with the S-AIR function (page 111), which allows wireless sound transmission between S-AIR products. When you purchase the S-AIR product, you need to establish sound transmission (page 87).

There are two types of S-AIR product.

- S-AIR main unit (this receiver):
The S-AIR main unit is for transmitting sound.
You can use up to 3 S-AIR main units. (The number of usable S-AIR main unit depends on the use environment.)
- S-AIR sub unit (not supplied): The S-AIR sub unit is for receiving sound.
 - Surround amplifier: You can enjoy surround and surround back speaker sound wirelessly. For details, refer to the operating instructions supplied with the surround amplifier.
 - S-AIR receiver: You can enjoy system sound in another room.

These S-AIR products can be purchased as an option (the S-AIR product lineup differs depending on the area).

Notes or instructions for the surround amplifier or S-AIR receiver in this operating instructions refer only to when the surround amplifier or S-AIR receiver is used.

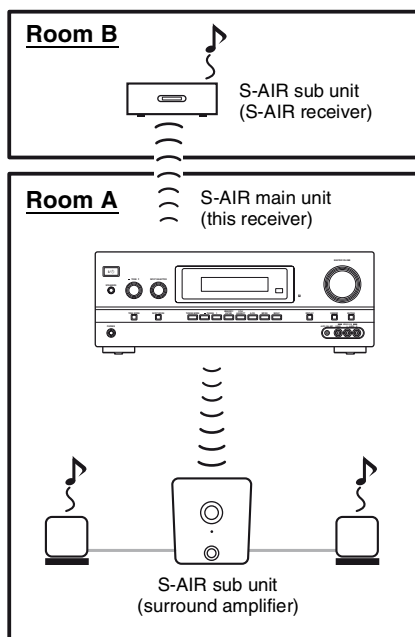

Setting up an S-AIR product

Before using an S-AIR product, be sure to perform the following settings to establish the sound transmission.

Inserting the wireless transmitter/transceiver


To make use of the S-AIR function, you need to insert the wireless transmitter (not supplied) into the S-AIR main unit and the wireless transceiver (not supplied) into the S-AIR sub unit.

Notes

- Before inserting the wireless transmitter/transceiver, be sure to disconnect the AC power cord (mains lead).
- Do not touch the terminals of the wireless transmitter/transceiver.

To insert the wireless transmitter into the S-AIR main unit


- 1 Remove the screws and detach the slot cover.

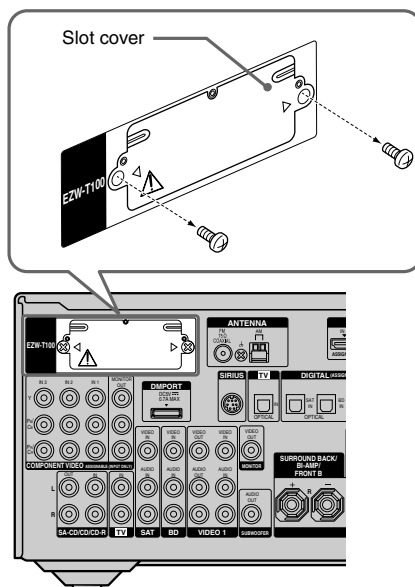

Notes

- Remove the screws from the slot cover bearing the caution mark. Do not remove other screws.
- The slot cover is no longer necessary. However, keep it after detaching.

- 2 Insert the wireless transmitter.

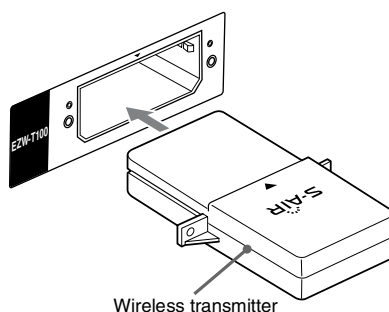


Wireless transmitter

Notes

- Insert the wireless transmitter with the S-AIR logo facing up.
- Insert the wireless transmitter so that the ▼ marks are aligned.
- Do not insert other than the wireless transmitter into the EZW-T100 slot.

- 3 Use the screws that you removed from step 1 to fasten the wireless transmitter.

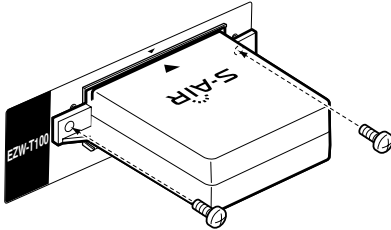

Note


Do not use other screws to fasten the wireless transmitter.

To insert the wireless transceiver into the S-AIR sub unit

For details on installing the wireless transceiver into surround amplifier and S-AIR receiver, refer to the operating instructions supplied with the surround amplifier and S-AIR receiver.

Establishing sound transmission between the S-AIR main unit and S-AIR sub unit (ID setting)

When you match the ID of the S-AIR main unit and the S-AIR sub unit, you can establish sound transmission. You can use multiple S-AIR main unit by setting a different ID for each unit.

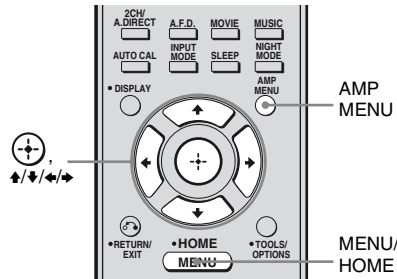

To set the ID of the S-AIR main unit

- 1 Press AMP MENU.
- 2 Press ▲/▼ repeatedly to select "S-AIR".
- 3 Press or ➡ to enter the menu.
- 4 Press ▲/▼ repeatedly to select "S-AIR ID".
- 5 Press or ➡ to enter the parameter.
- 6 Press ▲/▼ repeatedly to select the ID (A, B or C) you want, then press .

To exit the menu


Press MENU/HOME or AMP MENU.

To set the ID of the S-AIR sub unit

Be sure to match the ID on S-AIR sub unit you want to the S-AIR main unit.

For details on setting the ID of the surround amplifier and S-AIR receiver, refer to the operating instructions supplied with the surround amplifier and S-AIR receiver.

Sound transmission is established as follows (example):

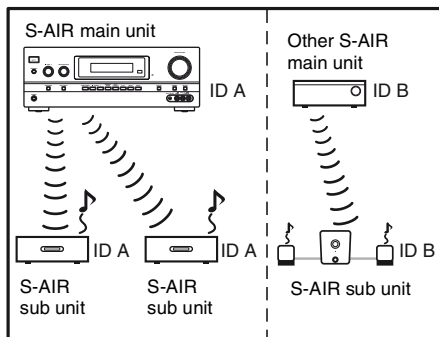

Notes

- Sources with copyright protection may not be playable on S-AIR sub unit.
- When sound transmission is established
 - sound can only be output from the S-AIR receiver if you connect the components to this receiver via the analog jacks. The sound cannot be output if the components are connected to the COAXIAL, OPTICAL or HDMI jacks on this receiver.
 - the headphones function on the surround amplifier is not available.

Pairing the S-AIR main unit with a specific S-AIR sub unit (Pairing operation)


To establish sound transmission, you need to set the same ID for your S-AIR main unit and S-AIR sub unit.

However, if your neighbors have S-AIR products and their IDs are the same as yours, your neighbors could receive the sound of your S-AIR main unit or vice versa.

To prevent this, you can pair the S-AIR main unit with a specific S-AIR sub unit by performing the pairing operation.


■ Before pairing

Sound transmission is established by the ID (example).

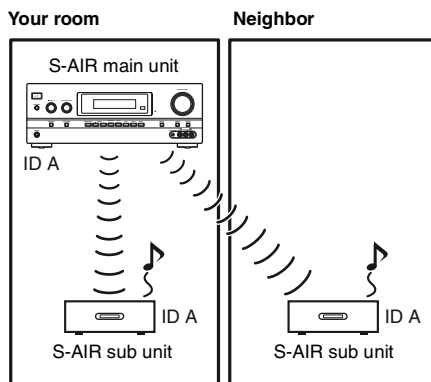

■ After pairing

Sound transmission is established between the paired S-AIR main unit and S-AIR sub unit(s) only.

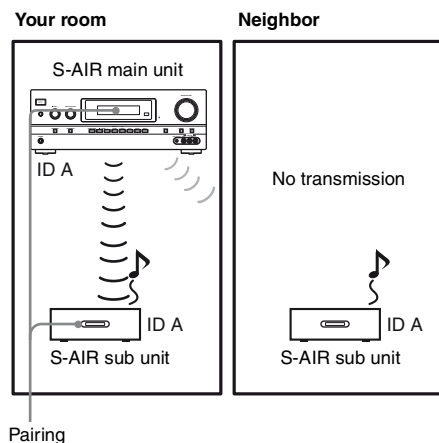

1 Place the S-AIR sub unit that you want to pair near the S-AIR main unit.

2 Match the IDs of the S-AIR main unit and the S-AIR sub unit.

- To set the ID of the S-AIR main unit, see “To set the ID of the S-AIR main unit” (page 87).
- To set the ID of the S-AIR sub unit, refer to the operating instructions supplied with the S-AIR sub unit.

3 Press AMP MENU.

4 Press \uparrow/\downarrow repeatedly to select “S-AIR”.

5 Press \odot or \rightarrow to enter the menu.

6 Press \uparrow/\downarrow repeatedly to select “PAIRING”.

7 Press \odot or \rightarrow to enter the parameter.

8 Press \uparrow/\downarrow repeatedly to select the setting you want, then press \odot .

- **START:** The S-AIR main unit starts pairing. “SEARCHING” flashes on the display.
- **CONDITION:** You can check the current ID. When the pairing setting is not made, “NO PAIRING” appears on the display.

9 Start pairing of the S-AIR sub unit.

■ For the surround amplifier

Refer to the operating instructions supplied with the surround amplifier.

■ For the S-AIR receiver

Refer to the operating instructions supplied with the S-AIR receiver.

10 Pairing completed.

“COMPLETE” appears on the display.

To exit the menu

Press MENU/HOME or AMP MENU.

Note

Perform the pairing within several minutes after step 8. Otherwise, the pairing is canceled automatically and “INCOMPLETE” appears on the display.

To cancel pairing

Reset the ID of the S-AIR main unit.


For details, see “To set the ID of the S-AIR main unit” (page 87). You can select the same ID as before.

Enjoying the system's sound in another room

(For the S-AIR receiver only (not supplied))

You can enjoy the system's sound in another room by using the S-AIR receiver. The S-AIR receiver can be placed in another room for enjoying the system's sound there.

For details of the S-AIR receiver, refer to the operating instructions supplied with the S-AIR receiver.

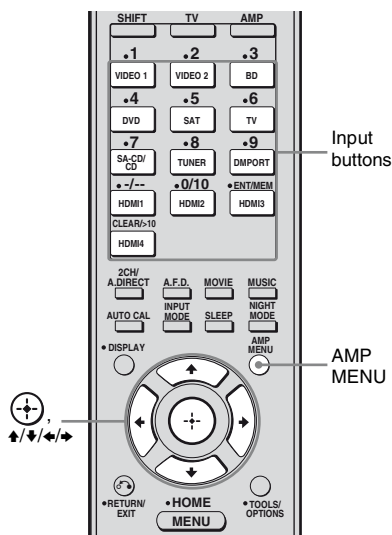

1 Set the ID of the S-AIR receiver to match the ID of the S-AIR main unit.

- To set the ID of the S-AIR main unit, see “To set the ID of the S-AIR main unit” (page 87).
- To set the ID of the S-AIR receiver, refer to the operating instructions supplied with the S-AIR receiver.

Notes

- When you are using another S-AIR sub unit, such as a surround amplifier, do not change the ID of the S-AIR main unit. Set the ID of the S-AIR receiver to match the ID of the S-AIR main unit.
- When you pair the S-AIR main unit and another S-AIR sub unit, such as a surround amplifier, you also need to pair the S-AIR main unit and the S-AIR receiver. For details, see “Pairing the S-AIR main unit with a specific S-AIR sub unit (Pairing operation)” (page 88).

2 Press AMP MENU.

3 Press \uparrow/\downarrow repeatedly to select “S-AIR”.

4 Press \odot or \rightarrow to enter the menu.

5 Press \uparrow/\downarrow repeatedly to select “S-AIR MODE”.

6 Press \odot or \rightarrow to enter the parameter.

7 Press \uparrow/\downarrow repeatedly to select the setting you want.

- PARTY: The S-AIR receiver outputs sound according to the input selected on the S-AIR main unit. However, if DVD and HDMI 1–4 is selected on S-AIR main unit, S-AIR receiver remains as the last selected input.
- SEPARATE: You can select the input you want for the S-AIR receiver while the input of the S-AIR main unit remain unchanged.

Note

When TUNER (FM/AM band) is selected on the S-AIR main unit, you can only select the same band for the tuner on the S-AIR receiver. However, you can select input other than TUNER on the S-AIR receiver.


8

Note

The sound of the S-AIR receiver may be cut off by operation of the S-AIR main unit.

Changing the channel for better sound transmission

If you use multiple wireless systems which sharing the 2.4 GHz band, such as wireless LAN or Bluetooth, the transmission of S-AIR products or other wireless systems may be unstable. In this case, the transmission may be improved by changing the following “RF CHANGE” setting.

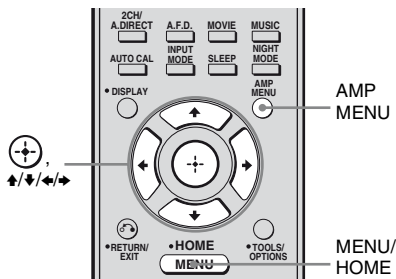

- 1** Press AMP MENU.
- 2** Press \uparrow/\downarrow repeatedly to select "S-AIR".
- 3** Press \oplus or \rightarrow to enter the menu.
- 4** Press \uparrow/\downarrow repeatedly to select "RF CHANGE".
- 5** Press \oplus or \rightarrow to enter the parameter.

6 Press **▲/▼** repeatedly to select the setting you want, then press **⊕**.

- RF AUTO: Normally select this. The system changes “RF CHANGE” to “RF ON” or “RF OFF” automatically.
- RF ON: The system transmits sound by searching the better channel for transmitting.
- RF OFF: The system transmits sound by fixing the channel for transmitting.

To exit the menu

Press MENU/HOME or AMP MENU


Notes

- When the wireless transmitter is not inserted in the S-AIR main unit, you cannot set “RF CHANGE”.
- In most cases, you will not need to change this setting.
- If “RF CHANGE” is set to “RF OFF,” transmission between the S-AIR main unit and S-AIR sub unit can be performed using one of the following channels.
 - S-AIR ID A: equivalent channel for IEEE 802.11b/g channel 1
 - S-AIR ID B: equivalent channel for IEEE 802.11b/g channel 6
 - S-AIR ID C: equivalent channel for IEEE 802.11b/g channel 11
- The transmission may be improved by changing the transmission channel (frequency) of the other wireless system(s). For details, refer to the operating instructions of the other wireless system(s).

Enjoying the S-AIR receiver while the S-AIR main unit is in standby mode

(For the S-AIR receiver only (not supplied))

You can enjoy the S-AIR receiver while the S-AIR main unit is in standby mode by setting “S-AIR STBY” to “STBY ON”.

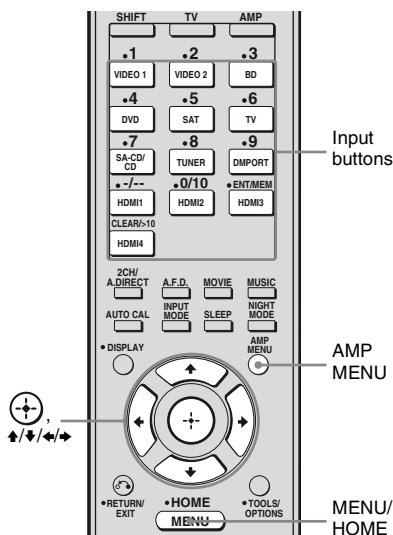

- 1 Press **AMP MENU**.
- 2 Press **▲/▼** repeatedly to select “S-AIR”.
- 3 Press **⊕** or **➡** to enter the menu.
- 4 Press **▲/▼** repeatedly to select “S-AIR STBY”.
- 5 Press **⊕** or **➡** to enter the parameter.

6 Press **▲/▼** repeatedly to select the setting you want.

- **STBY OFF:** You cannot enjoy the S-AIR receiver while the S-AIR main unit is in standby mode.
- **STBY ON:** You can enjoy the S-AIR receiver while the S-AIR main unit is in standby mode or turned on.

To exit the menu

Press **MENU/HOME** or **AMP MENU**.

Notes

- When you set “S-AIR STBY” to “STBY ON”, the power consumption increases during the standby mode.
- When the wireless transmitter is not inserted in the S-AIR main unit, you cannot set “S-AIR STBY”.
- When the wireless transmitter is removed from the S-AIR main unit, “S-AIR STBY” is set to “STBY OFF” automatically.
- If you have selected **TUNER** (FM/AM band) on the S-AIR main unit before you turn it off and “S-AIR STBY” is set to “STBY ON”, you can only select the same band for the tuner on the S-AIR receiver. However, you can select input other than **TUNER** on the S-AIR receiver.
- The sound of the S-AIR receiver may be cut off by operation of the S-AIR main unit.

Other Operations

Switching between digital and analog audio (INPUT MODE)

When you connect components to both digital and analog input jacks on the receiver, you can fix the audio input mode to either of them, or switch from one to the other, depending on the type of material you intend to watch.

1 Turn **INPUT SELECTOR** on the receiver to select the input.

You can also use the input buttons on the remote.

2 Press **INPUT MODE** repeatedly on the receiver to select the audio input mode.

The selected audio input mode appears on the display.

Audio input modes

■ **AUTO**

Gives priority to digital audio signals when there are both digital and analog connections. If there are no digital audio signals, analog audio signals are selected.

■ **ANALOG**

Specifies the analog audio signals input to the **AUDIO IN (L/R)** jacks.

Notes

- Some audio input modes may not be set up depending on the input.
- When the **ANALOG DIRECT** function is selected, audio input is set to “ANALOG” automatically and you cannot select other modes.
- When **SIRIUS**, **HDMI 1–4** or **DMPORT** input is selected, “-----” appears on the display, and you cannot select other modes. Select an input mode other than the **SIRIUS**, **HDMI 1–4** and **DMPORT** input, then set the audio input mode.

Enjoying the sound/ images from other inputs

You can reassign audio and/or video signals to another input when they are not currently being used.

For example, connect the OPTICAL OUT jack of the DVD player to the OPTICAL BD IN jack of this receiver when you want to input the digital optical audio signals from the DVD player.

Connect the component video jack of the DVD player to the COMPONENT VIDEO IN 1 jack of this receiver when you want to input the video signals from the DVD player.

Assign audio and/or video signals to the DVD input jack using “A. ASSIGN” and/or “V. ASSIGN” in the AUDIO and/or VIDEO menu respectively.

- 1 Press AMP MENU.**
- 2 Press \uparrow/\downarrow repeatedly to select “AUDIO” or “VIDEO”.**
- 3 Press \odot or \rightarrow to enter the menu.**
- 4 Press \uparrow/\downarrow repeatedly to select “A. ASSIGN” or “V. ASSIGN”.**
- 5 Press \odot or \rightarrow to enter the parameter.**
- 6 Press \uparrow/\downarrow repeatedly to select the input name you want to assign (for example, “DVD”).**
- 7 Press \odot or \rightarrow to enter your selection.**
- 8 Press \uparrow/\downarrow repeatedly to select the input jack you want to assign to the input which you selected in step 6.**

To return to the previous display

Press .

Input name		VIDEO1	VIDEO2	BD	DVD	SAT	SA-CD/ CD
Assignable video input jacks	COMPONENT1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> *	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	COMPONENT2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> *	<input type="radio"/>	<input type="radio"/>
	COMPONENT3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> *	<input type="radio"/>
	HDMI1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	HDMI2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	HDMI3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	HDMI4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	COMPOSITE	<input type="radio"/> *	<input type="radio"/> *	<input type="radio"/>	—	<input type="radio"/>	—
	NONE	—	—	—	<input type="radio"/>	—	<input type="radio"/> *
Assignable audio input jacks	SAT OPT	<input type="radio"/>	<input type="radio"/>	—	<input type="radio"/>	<input type="radio"/> *	<input type="radio"/>
	BD OPT	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> *	<input type="radio"/>	—	<input type="radio"/>
	DVD COAX	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> *	<input type="radio"/>	<input type="radio"/>
	ANALOG	<input type="radio"/> *	<input type="radio"/> *	<input type="radio"/>	—	<input type="radio"/>	<input type="radio"/> *

* Initial setting

Notes

- You cannot assign optical signals from an input source to the optical input jacks on the receiver, and you cannot assign coaxial signals from the input source to the coaxial input jacks on the receiver.
- When you assign the digital audio input, the INPUT MODE setting may change automatically (page 93).
- You cannot reassign more than one HDMI input to the same input.
- You cannot reassign more than one digital audio input to the same input.
- You cannot reassign more than one component video input to the same input.

Enjoying the DIGITAL MEDIA PORT (DMPORT)

The DIGITAL MEDIA PORT (DMPORT) allows you to enjoy sound from a network system such as a portable audio source or computer.

By connecting a DIGITAL MEDIA PORT adapter (not supplied), you can enjoy sound from the connected component on the receiver.


For details, refer to the operating instructions supplied with the DIGITAL MEDIA PORT adapter.

Notes

- Do not connect an adapter other than the DIGITAL MEDIA PORT adapter.
- Before connecting cords, be sure to disconnect the AC power cord.
- Do not connect or disconnect the DIGITAL MEDIA PORT adapter while the receiver is turned on.
- Depending on the DIGITAL MEDIA PORT adapter, video output may not be possible.
- The DIGITAL MEDIA PORT adapters are available for purchase depending on the area.


Connecting the DIGITAL MEDIA PORT adapter

You can listen to the sound and view the images from the component connected through the DIGITAL MEDIA PORT adapter to the DMPORT jack on the receiver.

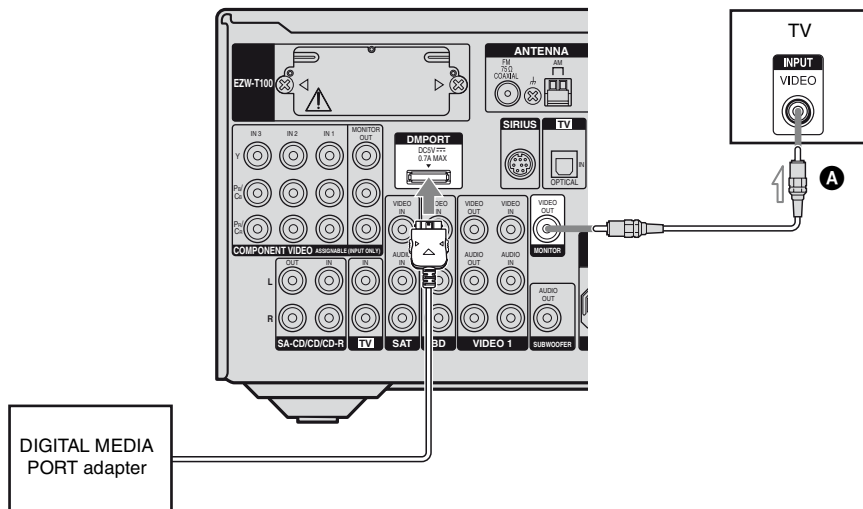

A Video cord (not supplied)

To detach the DIGITAL MEDIA PORT adapter from DMPORT jack

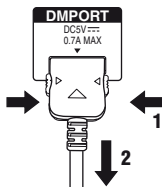

Press and hold both sides of the connector and then pull out the connector.

Notes

- When connecting the DIGITAL MEDIA PORT adapter, be sure the connector is inserted with the arrow mark facing towards the arrow mark on the DMPORT jack.
- Be sure to make DMPORT connections firmly, insert the connector straight in.
- As the connector of the DIGITAL MEDIA PORT adapter is fragile, be sure to handle with care when placing or moving the receiver.

Listening/watching a connected component through DMPORT connection

1 Press DMPORT.

You can also use the INPUT SELECTOR on the receiver to select “DMPORT”.

2 Start playback of the connected component.

The sound is played back on the receiver and the image appears on the TV.

For details, refer to the operating instructions supplied with the DIGITAL MEDIA PORT adapter.

Notes

- Depending on the type of DIGITAL MEDIA PORT adapter, you can operate the connected component by using the remote. For details on remote button operation, see page 12.
- Be sure you have connected the MONITOR OUT jack of the receiver to the TV (page 97).

Tip

When listening to MP3 or other compressed music using a portable audio source, you can enhance the sound. Press MUSIC repeatedly to select “PORTABLE” (page 64).

Changing the display

You can check the sound field, etc., by changing the information on the display. Be sure to use the buttons on the receiver for this operation.

Press DISPLAY repeatedly.

Each time you press the button, the display changes cyclically as follows:

All inputs except the FM and AM band

Index name of the input* → Selected input → Sound field currently applied → Volume level → Stream info

FM and AM band

Preset station name* → Frequency → Sound field currently applied

SIRIUS Satellite Radio

Channel name → Channel number → Category name → Artist name/Feature → Song/program title → Composer name → Signal strength → Sound field type

* Index name appears only when you have assigned one to the input or preset station (page 42, 71).
Index name does not appear when only blank spaces have been entered, or it is the same as the input name.

Note

Character or marks may not be displayed for some languages.

Using the Sleep Timer

You can set the receiver to turn off automatically at a specified time.

Press SLEEP repeatedly while the power is on.

“SLEEP” lights up in the display.

Each time you press SLEEP, the display changes cyclically as follows:

0-30-00 → 1-00-00 → 1-30-00 → 2-00-00
→ OFF

Tip

To check the remaining time before the receiver turns off, press SLEEP. The remaining time appears on the display. If you press SLEEP again, the sleep timer will be canceled.

Recording using the receiver

You can record from a video/audio component using the receiver. Refer to the operating instructions supplied with your recording component.

Recording onto a CD-R

You can record onto a CD-R using the receiver. See the operating instructions supplied with your CD recorder.

1 Press one of the input buttons to select the playback component.

You can also use INPUT SELECTOR on the receiver.

2 Prepare the playback component for playing.

For example, tune to the radio station you want to record (page 67).

3 Prepare the recording component.

Insert a blank CD-R into the CD recorder and adjust the recording level.

4 Start recording on the recording component, then start playback on the playback component.

Note

Sound adjustments do not affect the signal output from the SA-CD/CD/CD-R OUT jacks.

Recording onto a recording media

1 Press one of the input buttons to select the playback component.

You can also use INPUT SELECTOR on the receiver.

2 Prepare the playback component for playing.

For example, insert the video tape you want to copy into the VCR.

3 Prepare the recording component.

Insert a blank video tape, etc. into the recording component (VIDEO 1) for recording.

4 Start recording on the recording component, then start playback on the playback component.


Note

Some sources contain copy guards to prevent recording. In this case, you may not be able to record from the source.

Using a bi-amplifier connection

If you are not using surround back speakers, you can connect the front speakers to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals using a bi-amplifier connection.


To connect speakers

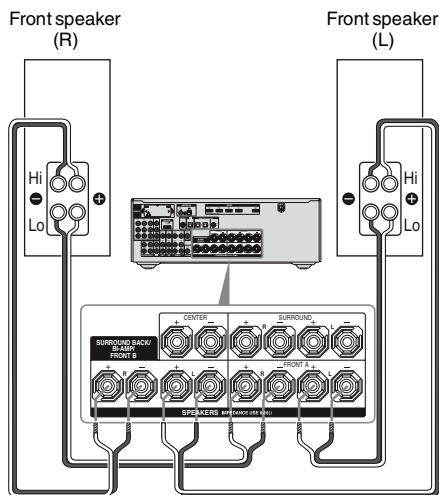

Connect the jacks on the Lo (or Hi) side of the front speakers to the SPEAKERS FRONT A terminals, and connect the jacks on the Hi (or Lo) side of the front speakers to the SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals.

Make sure that metal fittings of Hi/Lo attached to the speakers have been removed from the speakers. Not doing so may cause a malfunction of the receiver.

To set up speakers

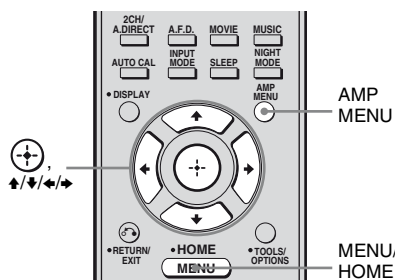

To exit the menu

Press MENU/HOME or AMP MENU.

Notes

- Set “SB ASSIGN” to “BI-AMP” before you perform auto calibration.
- If you set “SB ASSIGN” to “BI-AMP”, the speaker level and distance settings of the surround back speakers become invalid, and those of the front speakers are used.
- If you set “SP PATTERN” to a setting with surround back speakers, you cannot set “SB ASSIGN” to “BI-AMP”.

- 1 Press AMP MENU.
- 2 Press ↑/↓ repeatedly to select “SPEAKER”.
- 3 Press ⊕ or → to enter the menu.
- 4 Press ↑/↓ repeatedly to select “SP PATTERN”.
- 5 Press ⊕ or → to enter the parameter.
- 6 Press ↑/↓ select the appropriate speaker pattern so that there are no surround back speakers.
- 7 Press ⊕ or ←.
- 8 Press ↑/↓ repeatedly to select “SB ASSIGN”.
- 9 Press ⊕ or → to enter the parameter.
- 10 Press ↑/↓ repeatedly to select “BI-AMP”.

The same signals output from the SPEAKERS FRONT A terminals can be output from the SPEAKERS SURROUND BACK/BI-AMP/FRONT B terminals.

Using the Remote

Operating each component using the remote

You can control Sony or non-Sony components you are using with the remote supplied with the receiver.

The remote is initially set to control Sony components.

When you change the settings of the remote according to the components you are using, you can control non-Sony and other Sony components that the remote is initially unable control (page 104).

Operating the components connected to the receiver

- 1 Press the input button that matches the connected component that you want to operate.**
- 2 Press the appropriated buttons to use the function listed in the table below.**

Note

You may not be able to operate some functions for the components you are using.

Table of buttons used to control each component (Main remote commander)

Component	TV	VCR	DVD player, DVD/VHS combo	Blu-ray Disc Player	HDD Recorder	PSX	VideoCD player, LD player	Digital CATV terminal (UC)	DSS (UC)	Tape deck A/B	DAT deck	CD player, MD deck	DIGITAL MEDIA PORT device
Button													
AV I/⏮	○	○	○	○	○	○	○	○	○	–	○	○	–
Numeric buttons	○	○	○	○	○	○	○	○	○	○	○	○	○
TV INPUT, WIDE	○	–	–	–	–	–	–	–	–	–	–	–	–
-/--, CLEAR/>10	○	○	○	○	○	○	○	○	○	○	–	○	–
ENT/MEM	○	○	○	○	○	○	○ ^{*1}	○	○	○	○	○	–
DISPLAY	○	○	○	○	○	○	○	○	○	–	–	○	–
RETURN/EXIT	○	–	○	○	○	○	○	○	○	–	–	–	○
TOOLS/OPTIONS	○	–	○	○	○	○	–	○	○	–	–	–	–
⬆/⬇/⬅/➡, MENU, HOME	○	○	○	○	○	○	–	○	○	–	–	–	○
⏮, ⏭	○	○	○	○	○	○	○	○	–	○ ^{*3}	○	○	○
⏮, ⏭	○	–	○	○	○	○	–	○	–	–	–	–	○
⏮/TUNING –, ⏭/TUNING +	○	○	○	○	○	○	○	○	–	○	○	○	○
DISC SKIP	–	–	○	○	–	–	○ ^{*2}	–	–	–	–	○	–
▶, ⏮, ■	○	○	○	○	○	○	○	○	–	○	○	○	○
MUTING, MASTER VOL +/-, TV VOL +/-	○	–	–	–	–	–	–	–	–	–	–	–	–
PRESET +/-, TV CH +/-	○	○	○	○	○	–	○ ^{*1}	○	○	–	–	–	–
BD/DVD TOP MENU, BD/DVD MENU	–	–	○	○	–	○	–	–	–	–	–	–	–
F1, F2	–	–	○	○	–	–	–	–	–	–	–	–	–

^{*1} LD player only.

^{*2} VIDEO CD only.

^{*3} DECK B only.

Programming the remote

You can program the remote to control non-Sony components by changing the code. Once the control signals have been memorized, you can use those components as part of your system.

Furthermore, you can also program the remote for Sony components that the remote is unable to control. Note that the remote can only control components that accept infrared wireless control signals.

1 Press AV I/⏻ while pressing RM SET UP.

The RM SET UP button slowly flashes.

2 Press the input button for the component you want to control.

For example, if you are going to control a CD player, press SA-CD/CD.

The RM SET UP and the SHIFT button indicator light up.

3 Press the numeric buttons to enter the numeric code (or one of the codes if more than one code exists) corresponding to the component and the maker of the component you want to control (except TV).

See the tables on page 105–108 for information on the numeric code(s) corresponding to the component and the maker of the component (the first digit and the last two digits of the numeric code correspond to the category and the maker's code respectively).

4 Press ENT/MEM.

Once the numeric code has been verified, the RM SET UP indicator slowly flashes twice and the remote automatically exits the programming mode.

5 Repeat steps 1 to 4 to control other components.

Notes

- The indicator turns off while a valid button is pressed.
- In step 2, if you want to change to other input, press SHIFT and then press the new input buttons you want.
- In step 2, if you press TUNER, you can only program the button to control a tuner (page 105).
- For the numeric codes, only the last three numbers entered are valid.

To program the remote to control a TV

1 Press AV I/⏻ while pressing RM SET UP.

The RM SET UP indicator slowly flashes.

2 Press TV.

The RM SET UP and the SHIFT button indicator light up.

3 Press the numeric buttons to enter the numeric code (or one of the codes if more than one code exists) for TV. For details, see page 106.

4 Press ENT/MEM.

Once the numeric code has been verified, the RM SET UP indicator slowly flashes twice and the remote automatically exits the programming mode.

To cancel programming

Press RM SET UP during any step. The RM SET UP indicator flashes 5 times in quick succession. The remote automatically exits the programming mode.

To activate the input after programming

Press the programmed button to activate the input you want.

If programming is unsuccessful, check the following:

- If the indicator does not light up in step 1, the batteries are weak. Replace both batteries.
- If the indicator flashes 5 times in quick succession while entering the numeric code, an error has occurred. Start again from step 1.

To clear the memory of the remote

To clear all programmes, do the following to reset the remote to factory settings.

While holding down MASTER VOL –, press and hold I/⏻ and then press AV I/⏻.

The indicator flashes 3 times, then goes off.

The numeric codes corresponding to the component and the maker of the component

Use the numeric codes in the tables below to control non-Sony components and also Sony components that the remote is normally unable to control. Since the remote signal that a component accepts differs depending on the model and year of the component, more than one numeric code may be assigned to a component. If you fail to program your remote using one of the codes, try using other codes.

Notes

- The numeric codes are based on the latest information available for each brand. There is a chance, however, that your component will not respond to some or all of the codes.
- All of the input buttons on this remote may not be available when used with your particular component.

To control a tuner

Maker	Code(s)
SONY	002, 005

To control a CD player

Maker	Code(s)
SONY	101, 102, 103
DENON	104, 123
JVC	105, 106, 107
KENWOOD	108, 109, 110
MAGNAVOX	111, 116
MARANTZ	116
ONKYO	112, 113, 114
PANASONIC	115
PHILIPS	116
PIONEER	117
TECHNICS	115, 118, 119
YAMAHA	120, 121, 122

To control a DAT deck

Maker	Code(s)
SONY	203
PIONEER	219

To control a tape deck

Maker	Code(s)
SONY	201, 202
DENON	204, 205
KENWOOD	206, 207, 208, 209
NAKAMICHI	210
PANASONIC	216
PHILIPS	211, 212
PIONEER	213, 214
TECHNICS	215, 216
YAMAHA	217, 218

To control an MD deck

Maker	Code(s)
SONY	301
DENON	302
JVC	303
KENWOOD	304

To control an HDD recorder

Maker	Code(s)
SONY	307, 308, 309

To control a Blu-ray disc player/recorder

Maker	Code(s)
SONY	310, 311, 312

To control a PSX

Maker	Code(s)
SONY	313, 314, 315

To control a DVD player

Maker	Code(s)
SONY	401, 402, 403
BROKSONIC	424
DENON	405
HITACHI	416
JVC	415, 423
MITSUBISHI	419
ORITRON	417
PANASONIC	406, 408, 425
PHILIPS	407
PIONEER	409, 410
RCA	414
SAMSUNG	416, 422
TOSHIBA	404, 421
ZENITH	418, 420

To control a DVD recorder

Maker	Code(s)
SONY	401, 402, 403

To control a DVD/VHS COMBO

Maker	Code(s)
SONY	411

To control a DVD/HDD COMBO

Maker	Code(s)
SONY	401, 402, 403

To control a TV

Maker	Code(s)
SONY	501, 502
AIWA	501, 536, 539
AKAI	503
AOC	503
CENTURION	566
CORONADO	517
CURTIS-MATHES	503, 551, 566, 567
DAYTRON	517, 566
DAEWOO	504, 505, 506, 507, 515, 544
FISHER	508, 545
FUNAI	548
FUJITSU	528
GOLDSTAR/LG	503, 512, 515, 517, 534, 544, 556, 568
GRUNDIG	511, 533, 534
HITACHI	503, 513, 514, 515, 517, 519, 544, 557, 571
ITT/NOKIA	521, 522
J.C.PENNY	503, 510, 566
JVC	516, 552
KMC	517
MAGNAVOX	503, 515, 517, 518, 544, 566
MARANTZ	527
MITSUBISHI/MGA	503, 519, 527, 544, 566, 568
NEC	503, 517, 520, 540, 544, 554, 566
NORDMENDE	530, 558
NOKIA	521, 522, 573, 575
PANASONIC	509, 524, 553, 559, 572

Maker	Code(s)
PHILIPS	515, 518, 557, 570, 571
PHILCO	503, 504, 514, 517, 518
PIONEER	509, 525, 526, 540, 551, 555
PORTLAND	503
QUASAR	509, 535
RADIO SHACK	503, 510, 527, 565, 567
RCA/PROSCAN	503, 510, 523, 529, 544
SAMSUNG	503, 515, 517, 531, 532, 534, 544, 556, 557, 562, 563, 566, 569
SAMPO	566
SABA	530, 537, 547, 549, 558
SANYO	508, 545, 546, 560, 567
SCOTT	503, 566
SEARS	503, 508, 510, 517, 518, 551
SHARP	517, 535, 550, 561, 565
SYLVANIA	503, 518, 566
THOMSON	530, 537, 547, 549
TOSHIBA	535, 539, 540, 541, 551
TELEFUNKEN	530, 537, 538, 547, 549, 558
TEKNIKA	517, 518, 567
WARDS	503, 517, 566
YORK	566
ZENITH	542, 543, 567
GE	503, 509, 510, 544
LOEWE	515, 534, 556

To control an LD player

Maker	Code(s)
SONY	601, 602, 603
PIONEER	606

To control a video CD player

Maker	Code(s)
SONY	605

To control a VCR

Maker	Code(s)
SONY	701, 702, 703, 704, 705, 706
AIWA*	710, 750, 757, 758
AKAI	707, 708, 709, 759
BLAUPUNKT	740
EMERSON	711, 712, 713, 714, 715, 716, 750
FISHER	717, 718, 719, 720
GENERAL ELECTRIC (GE)	721, 722, 730
GOLDSTAR/LG	723, 753
GRUNDIG	724
HITACHI	722, 725, 729, 741
ITT/NOKIA	717
JVC	726, 727, 728, 736
MAGNAVOX	730, 731, 738
mitsubishi/MGA	732, 733, 734, 735
NEC	736
PANASONIC	729, 730, 737, 738, 739, 740
PHILIPS	729, 730, 731
PIONEER	729
RCA/PROSCAN	722, 729, 730, 731, 741, 747
SAMSUNG	742, 743, 744, 745
SANYO	717, 720, 746
SHARP	748, 749
TELEFUNKEN	751, 752
TOSHIBA	747, 756
ZENITH	754

* If an AIWA VCR does not work even though you enter the code for AIWA, enter the code for Sony instead.

To control a satellite tuner (box)

Maker	Code(s)
SONY	801, 802, 803, 804, 824, 825, 865
AMSTRAD	845, 846
BskyB	862
GENERAL ELECTRIC (GE)	866
GRUNDIG	859, 860
HUMAX	846, 847
THOMSON	857, 861, 864, 876
PACE	848, 849, 850, 852, 862, 863, 864
PANASONIC	818, 855
PHILIPS	856, 857, 858, 859, 860, 864, 874
NOKIA	851, 853, 854, 864
RCA/PROSCAN	866, 871
BITA/HITACHI	868
HUGHES	867
JVC/Echostar/Dish Network	873
MITSUBISHI	872
SAMSUNG	875
TOSHIBA	869, 870

To control a cable box

Maker	Code(s)
SONY	821, 822, 823
HAMLIN/REGAL	836, 837, 838, 839, 840
JERROLD/G.I./MOTOROLA	806, 807, 808, 809, 810, 811, 812, 813, 814, 819
JERROLD	830, 831
OAK	841, 842, 843
PANASONIC	816, 826, 832, 833, 834, 835
PHILIPS	830, 831
PIONEER	828, 829
RCA	805
SCIENTIFIC ATLANTA	815, 816, 817, 844
TOCOM/PHILIPS	830, 831
ZENITH	826, 827

Additional Information

Glossary

■ Cinema Studio EX

A surround sound mode that can be regarded as the compilation of Digital Cinema Sound technology, delivers the sound of a dubbing theater using three technologies: "Virtual Multi Dimensions," "Screen Depth Matching," and "Cinema Studio Reverberation."

"Virtual Multi Dimensions," the virtual speaker technology, creates a virtual multi-surround environment with actual speakers up to 7.1 channels, and brings the surround sound experience of a theater with the latest facilities into your home.

"Screen Depth Matching" reproduces treble attenuation, fullness, and depth of sound usually created in a theater using sound emission from behind the screen. This is then added to the front and center channels.

"Cinema Studio Reverberation" reproduces the sound characteristics of state-of-the-art dubbing theaters and recording studios, including Sony Pictures Entertainment's dubbing studios. There are three modes, A/B/C, available according to the studio type.

■ Component video

A format for transmitting video signal information consisting of three separate signals: luminance Y, chrominance Pb, and chrominance Pr. High quality pictures, such as DVD video or HDTV pictures, are transmitted more faithfully. The three jacks are color-coded green, blue and red.

■ Composite video

A standard format for transmitting video signal information. The luminance signal Y and chrominance signal C are combined and transmitted together.

■ Deep Color

Video signals for which the color depth of signals passing through an HDMI jack have been raised.

The number of colors that could be expressed by 1 pixel was 24 bits (16,777,216 colors) with the current HDMI jack. However, the number of colors which can be expressed by 1 pixel will be 36 bits, etc., when the receiver corresponds to Deep Color.

Since the gradation of the depth of a color can be expressed more finely with more bits, continuous color changes can be more smoothly expressed.

■ Digital Cinema Sound (DCS)

A unique sound reproduction technology for home theater developed by Sony, in cooperation with Sony Pictures Entertainment, for enjoying the exciting and powerful sound of movie theaters at home. With this “Digital Cinema Sound” developed by integrating a DSP (Digital Signal Processor) and measured data, the ideal sound field intended by filmmakers can be experienced at home.

■ Dolby Digital

Digital audio encoding/decoding technology developed by Dolby Laboratories, Inc. It consists of front (left/right), center, surround (left/right) and subwoofer channels. It is a designated audio standard for DVD video and also known as 5.1 channel surround. Since surround information is recorded and reproduced in stereo, more realistic sound with fuller presence is delivered than with Dolby surround.

■ Dolby Digital Plus

Dolby Digital Plus provides the flexibility and efficiency to deliver more channels of compelling surround sound for high-definition video media. Its superior coding efficiencies enable up to 7.1ch of high-quality multichannel audio without negatively impacting bit budgets allocated for video performance or additional feature sets.

■ Dolby Digital Surround EX

Acoustic technology developed by Dolby Laboratories, Inc. Surround back information is matrixed into regular left and right surround channels so that the sound can be reproduced in 6.1 channel. Active scenes, especially, are recreated with a more dynamic and realistic sound field.

■ Dolby Pro Logic II

This technology converts 2 channel stereo recorded audio into 5.1 channel for playback. There is a MOVIE mode for movies and MUSIC mode for stereo sources such as music. Old movies encoded in the traditional stereo format can be enhanced with 5.1 channel surround sound.

The GAME mode is suitable for video games.

■ Dolby Pro Logic IIx

Technology for 7.1 channel (or 6.1 channel) playback. Along with audio encoded in Dolby Digital Surround EX, 5.1 channel Dolby Digital encoded audio can be reproduced in 7.1 channel (or 6.1 channel). Furthermore, existing stereo recorded content can also be reproduced in 7.1 channel (or 6.1 channel).

■ Dolby Surround (Dolby Pro Logic)

Audio processing technology developed by Dolby Laboratories, Inc. Center and mono surround information is matrixed into two stereo channels. When reproduced, audio is decoded and output in 4 channel surround sound. This is the most common audio processing method for DVD video.

■ Dolby TrueHD

Dolby TrueHD is Dolby's lossless audio technology developed for high-definition optical discs. Dolby TrueHD audio is bit-for-bit identical to the original studio masters and provides supreme-quality audio up to 8 channel at 96 kHz/24 bit and up to 6ch at 192 kHz/24 bit. Together with high-definition video, it offers an unprecedented home theater experience.

■ DTS 96/24

A high sound quality digital signal format. It records audio at a sampling frequency and bit rate of 96 kHz/24bit which is the highest possible for DVD video. The number of playback channels varies depending on the software.

■ DTS Digital Surround

Digital audio encoding/decoding technology for theaters developed by DTS, Inc. It compresses audio less than Dolby Digital, delivering a higher quality sound reproduction.

■ DTS-ES

Format for 6.1 channel playback with surround back information. There are two modes, “Discrete 6.1” which records all channels independently, and “Matrix 6.1” which matrixes surround back channel into surround left and surround right channels. It is ideal for playback of motion picture soundtracks.

■ DTS-HD

Audio format which extends the conventional DTS Digital Surround format.

This format consists of a core and an extension, and the core part has DTS Digital Surround compatibility. There are two kinds of DTS-HD, DTS-HD High Resolution Audio and DTS-HD Master Audio. DTS-HD High Resolution Audio has a maximum transmission rate of 6 Mbps, with lossy compression (Lossy), and DTS-HD High Resolution Audio corresponds to a maximum sampling frequency of 96 kHz, and a maximum of 7.1 channel. DTS-HD Master Audio has a maximum transmission rate of 24.5 Mbps, and uses lossless compression (Lossless), and DTS-HD Master Audio corresponds to a maximum sampling frequency of 192 kHz, and a maximum of 7.1 channel.

■ DTS Neo:6

This technology converts 2 channel stereo recorded audio for 6.1 channel playback. There are two modes to select according to the playback source or your preference, CINEMA for movies, and MUSIC for stereo sources such as music.

■ HDMI (High-Definition Multimedia Interface)

HDMI (High-Definition Multimedia Interface) is an interface that supports both video and audio on a single digital connection, allowing you to enjoy high quality digital picture and sound. The HDMI specification supports HDCP (High-bandwidth Digital Contents Protection), a copy protection technology that incorporates coding technology for digital video signals.

■ Neutral THX

Neural-THX Surround is taking surround sound to the next level. This revolutionary new technology delivers the rich envelopment and discrete image detail of surround sound in a format that is fully compatible with stereo. Neural-THX Surround reduces the bandwidth needed for broadcasters to deliver true, multi-channel surround presentations, and enables 7.1-channel support for gaming and movies. By unmasking the audio details, typically lost by other playback systems, audiences will experience the deep ambience and subtle details of movies, music and games. And with this technology being used by sound designers during content creation, as well as embedded into playback devices, Neural-THX Surround promises a listening experience that is true to the original mix.

Neural-THX Surround has been chosen as the official surround sound broadcast format for XM Satellite Radio’s “XM HD Surround”, as well as other leading FM/HD radio stations worldwide.

■ S-AIR (Sony Audio Interactive Radio frequency)

Recent times have seen the rapid spread of DVD media, Digital Broadcasting, and other high quality media.

To ensure that the subtle nuances of these high quality media are transmitted with no deterioration, Sony has developed a technology called “S-AIR” for the radio transmission of digital audio signals with no compression, and has incorporated this technology into the EZW-RT10/EZW-T100. This technology transfers digital audio signals with no compression using the 2.4 GHz band range of ISM band (Industrial, Scientific, and Medical band), such as wireless LANs and Bluetooth applications.

■ Sampling frequency

To convert analog audio to digital, analog data should be quantified. This process is called sampling, and the number of times per second the analog data is quantified is called the sampling frequency. A standard music CD stores data quantified at 44,100 times per second, which is expressed as a sampling frequency of 44.1 kHz. Generally speaking, a higher sampling frequency means better sound quality.

■ x.v.Colour

x.v.Colour is a more familiar term for the xvYCC standard proposed by Sony, and is a trademark of Sony. xvYCC is an international standard for color space in video.

This standard can express a wider colour range than the currently used broadcast standard.

Precautions

On safety

Should any solid object or liquid fall into the cabinet, unplug the receiver and have it checked by qualified personnel before operating it any further.

On power sources

- Before operating the receiver, check that the operating voltage is identical with your local power supply.
The operating voltage is indicated on the nameplate on the back of the receiver.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- If you are not going to use the receiver for a long time, be sure to disconnect the receiver from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- The AC power cord (mains lead) must be changed only at a qualified service shop.

On heat buildup

Although the receiver heats up during operation, this is not a malfunction. If you continuously use this receiver at a large volume, the cabinet temperature of the top, side and bottom rises considerably. To avoid burning yourself, do not touch the cabinet.

On placement

- Place the receiver in a location with adequate ventilation to prevent heat buildup and prolong the life of the receiver.
- Do not place the receiver near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not place anything on top of the cabinet that might block the ventilation holes and cause malfunctions.
- Do not place the receiver near equipment such as a TV, VCR, or tape deck. (If the receiver is being used in combination with a TV, VCR, or tape deck, and is placed too close to that equipment, noise may result, and picture quality may suffer. This is especially likely when using an indoor antenna (aerial). Therefore, we recommend using an outdoor antenna (aerial).)
- Use caution when placing the receiver on surfaces that have been specially treated (with wax, oil, polish, etc.) as staining or discoloration of the surface may result.

On operation

Before connecting other components, be sure to turn off and unplug the receiver.

On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzine.

If you have any questions or problems concerning your receiver, please consult your nearest Sony dealer.

About S-AIR function

- As the S-AIR function transmits sound by radio waves, sound may skip when radio waves are obstructed. This is a characteristic of radio waves and is not malfunction.
- As the S-AIR function transmits sound by radio waves, equipment that generates electromagnetic energy, such as a microwave oven, may interfere with sound transmission.
- As the S-AIR function uses the radio waves that share the same frequency as other wireless systems, such as wireless LAN or Bluetooth, interference or poor transmission may result. In this case, take the following steps:
 - Do not install the system near other wireless systems.
 - Do not use the system and the other wireless systems at the same time.
- The transmission distance differs depending on the usage environment. Find a location where transmission between the S-AIR main unit and sub unit is most effective, and install the S-AIR main unit and sub unit there.

Troubleshooting

If you experience any of the following difficulties while using the receiver, use this troubleshooting guide to help you remedy the problem.

Audio

There is no sound, no matter which component is selected, or only a very low-level sound is heard.

- Check that the speakers and components are connected correctly and securely.
- Check that all speaker cords are connected correctly.
- Check that both the receiver and all components are turned on.
- Check that MASTER VOLUME is not set to “VOL MIN”.
- Check that the SPEAKERS is not set to off (page 33).
- Check that headphones are not connected.
- Press MUTE on the remote to cancel the muting function.
- Check that you have selected the correct component with the input buttons (page 41).
- When only a very low-level sound is heard, check to see if NIGHT MODE is activated (page 65).
- The protective device on the receiver has been activated. Turn off the receiver, eliminate the short-circuit problem, and turn on the power again.

There is no sound from a specific component.

- Check that the component is connected correctly to the audio input jacks for that component.
- Check that the cord(s) used for the connection is (are) fully inserted into the jacks on both the receiver and the component.

There is no sound from one of the front speakers.

- Connect a pair of headphones to the PHONES jack to verify that sound is output from the headphones. If only one channel is output from the headphones, the component may not be connected to the receiver correctly. Check that all the cords are fully inserted into the jacks on both the receiver and the component. If both channels are output from the headphones, the front speaker may not be connected to the receiver correctly. Check the connection of the front speaker which is not outputting any sound.
- Make sure you have connected to both the L and R jacks of an analog component, and not only to either the L or R jack. Use an audio cord (not supplied).

There is no sound from analog 2 channel sources.

- Check that the INPUT MODE is not set to “AUTO” (page 93) and the DIGITAL connection is not made for the selected input.
- Check that the INPUT MODE is not set to “AUTO” (page 93) and the “A. ASSIGN” function is not used to reassign the audio input of another source to the selected input (page 94).

There is no sound from digital sources (from COAXIAL or OPTICAL input jack).

- Check that the INPUT MODE is not set to “ANALOG” (page 93).
- Check that the ANALOG DIRECT function is not selected.

The left and right sounds are unbalanced or reversed.

- Check that the speakers and components are connected correctly and securely.
- Adjust the level parameters using the LEVEL menu.

There is severe hum or noise.

- Check that the speakers and components are connected securely.
- Check that the connecting cords are away from a transformer or motor, and at least 3 meters away from a TV set or fluorescent light.
- Move your audio components away from the TV.
- The plugs and jacks are dirty. Wipe them with a cloth slightly moistened with alcohol.

There is no sound, or only a very low-level sound is heard from the center/surround/surround back speakers.

- Select a CINEMA STUDIO EX mode (page 64).
- Adjust the speaker level (page 40).
- Check “SP PATTERN” setting (page 51).

There is no sound from the subwoofer.

- Check that the subwoofer is connected correctly and securely.
- Make sure you have turned on your subwoofer.
- Depending on the selected sound field, no sound output from the subwoofer.
- When all speakers are set to “LARGE” and “NEO6 CIN” or “NEO6 MUS” is selected, there is no sound from the subwoofer.
- Check “SP PATTERN” setting (page 51).

The surround effect cannot be obtained.

- Make sure the sound field function is on (press MOVIE or MUSIC).
- Sound fields do not function for signals with a sampling frequency of more than 48 kHz.

Dolby Digital or DTS multi channel sound is not reproduced.

- Check that the DVD, etc. you are playing is recorded in Dolby Digital or DTS format.
- When connecting the DVD player, etc., to the digital input jacks of this receiver, check the audio setting (the settings for the audio output) of the connected component.

Recording cannot be carried out.

- Check that the components are connected correctly.
- Select the source component using the input buttons (page 41).

There is no sound from the component connected to the DIGITAL MEDIA PORT adapter.

- Adjust the volume of this receiver.
 - The DIGITAL MEDIA PORT adapter and/or component is not connected correctly. Turn off the receiver, then reconnect the DIGITAL MEDIA PORT adapter and/or component.
 - Check the DIGITAL MEDIA PORT adapter and/or component device to make sure it supports this receiver.
-

Video

There is no picture or an unclear picture appears on the TV screen or monitor.

- Select the appropriate input using the input buttons.
- Set your TV to the appropriate input mode.
- Move your audio components away from the TV.
- Depending on the DIGITAL MEDIA PORT adapter, video output may not be possible.

The image of the COMPONENT VIDEO OUT is corrupted.

- Video input signals other than 480p component are not received when signals are output from the VIDEO jack. Input 480i component video signals.

Recording cannot be carried out.


- Check that the components are connected correctly.
- Select the source component using the input buttons (page 41).

Tuner

The FM reception is poor.

- Use a 75-ohm coaxial cable (not supplied) to connect the receiver to an outdoor FM antenna (aerial) as shown below. If you connect the receiver to an outdoor antenna (aerial), ground it against lightning. To prevent a gas explosion, do not connect the ground (earth) wire to a gas pipe.

Outdoor FM antenna (aerial)

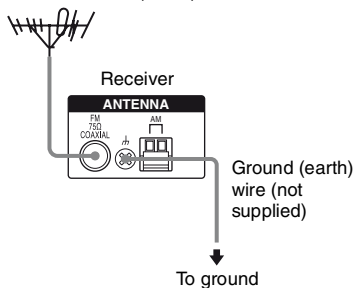

Radio stations cannot be tuned in.

- Check that the antennas (aerials) are connected securely. Adjust the antennas (aerials) and connect an external antenna (aerial), if necessary.
- The signal strength of the stations is too weak (when tuning in with automatic tuning). Use direct tuning.
- Make sure you set the tuning interval correctly (when tuning in AM stations with direct tuning).
- No stations have been preset or the preset stations have been cleared (when tuning by scanning preset stations). Preset the stations (page 69).
- Press DISPLAY repeatedly on the receiver so that the frequency appears on the display.
- Keep the satellite radio antenna (aerial) away from the speaker cords and the power cord to avoid picking up noise.

HDMI

The source sound input to the HDMI jack is not output from the receiver or the TV speaker.

- Check the HDMI connection (page 25).
- You cannot listen to the Super Audio CD by connecting HDMI.
- Depending on the playback component, you may need to set up the component. Refer to the operating instructions supplied with each component.
- Be sure to use a connecting cable for the HDMI jack corresponding to high speed (an HDMI version 1.3, category 2 cable) when you view images or listen to sound during a Deep Color transmission.

The source image input to the HDMI jack is not output from the TV.

- Check the HDMI connection (page 25).
- Depending on the playback component, you may need to set up the component. Refer to the operating instructions supplied with each component.
- Be sure to use a connecting cable for the HDMI jack corresponding to high speed (an HDMI version 1.3, category 2 cable) when you view images or listen to sound during a Deep Color transmission.

The Control for HDMI function does not work.

- Check the HDMI connection (page 25).
- Make sure “CTRL:HDMI” is set to “CTRL ON” in the HDMI menu.
- Make sure the connected component is compatible with the Control for HDMI function.
- Check the Control for HDMI settings on the connected component. Refer to the operating instructions of the connected component.
- Repeat the procedures of “Preparing for the “BRAVIA” Sync” if you change the HDMI connection, connect/disconnect the AC power cord, or when there is a power failure (page 82).

No sound is output from the receiver and TV speaker while using the System Audio Control function.

- Make sure the TV is compatible with the System Audio Control function.
 - If the TV does not have System Audio Control function, set the “AUDIO OUT” settings in HDMI menu to
 - “TV+AMP” if you want to listen to the sound from the TV speaker and receiver.
 - “AMP” if you want to listen to the sound from the receiver.
 - If you cannot listen to the sound of a component connected to the receiver
 - Change the input of the receiver to HDMI when you want to watch a program on a component connected via HDMI connection to the receiver.
 - Change the TV channel when you want to watch a TV broadcast.
 - Select the component or input you want to watch when you watch a program on the component connected to the TV. Refer to the operating instructions of the TV on this operation.
-

S-AIR function

S-AIR connection is not established (sound transmission is not established), e.g., the indicator of the S-AIR sub unit turns off, flashes, or turns red.

- If you use another S-AIR main unit, place it more than 26 1/4 feet (8 m) away from this S-AIR main unit.
- Confirm the S-AIR IDs of the S-AIR main unit and S-AIR sub unit (page 87).
- Another S-AIR sub unit is paired to the S-AIR main unit. Pair the desired S-AIR sub unit with the S-AIR main unit (page 88).
- The S-AIR main unit is paired to another S-AIR sub unit. Cancel pairing.
- Place the S-AIR main unit and S-AIR sub unit separately from other wireless devices.
- Avoid using any other wireless devices.
- The S-AIR sub unit is turned off. Make sure the AC power cord (mains lead) is connected and turn on the S-AIR sub unit.

No sound is heard from the S-AIR receiver.

- Check that the components are connected to analog jack of this receiver.

No sound is heard from the S-AIR product.

- If you use another S-AIR main unit, place it more than 26 1/4 feet (8 m) away from this S-AIR main unit.
- Confirm the S-AIR IDs of the S-AIR main unit and S-AIR sub unit (page 87).
- Confirm the pairing setting (page 88).
- Place the S-AIR main unit and S-AIR sub unit closer to each other.
- Avoid use of equipment that generates electromagnetic energy, such as a microwave oven.
- Place the S-AIR main unit and S-AIR sub unit separately from other wireless devices.
- Avoid using any other wireless devices.
- Change the “RF CHANGE” setting (page 91).
- Change the S-AIR ID settings of the S-AIR main unit and S-AIR sub unit.
- Turn off the system and S-AIR sub unit, then turn on them.
- Check that headphones are not connected to the S-AIR sub unit.

There is noise or the sound skips.

- If you use another S-AIR main unit, place it more than 26 1/4 feet (8 m) away from this S-AIR main unit.
- Place the S-AIR main unit and S-AIR sub unit closer to each other.
- Avoid use of equipment that generates electromagnetic energy, such as a microwave oven.
- Place the S-AIR main unit and S-AIR sub unit separately from other wireless devices.
- Avoid using any other wireless devices.
- Change the “RF CHANGE” setting (page 91).
- Change the S-AIR ID settings of the S-AIR main unit and S-AIR sub unit.

Remote commander

The remote does not function.

- Point the remote at the remote sensor on the receiver.
- Remove any obstacles in the path between the remote and the receiver.
- Replace all the batteries in the remote with new ones, if they are weak.
- Make sure you select the correct input on the remote.
- When you operate a programmed non-Sony component, the remote may not function properly depending on the model and the maker of the component.

Error messages

If there is a malfunction, the display shows a message. You can check the condition of the system by the message. See the following table to solve the problem. If any problem persists, consult your nearest Sony dealer.

If an error message appears while you perform Auto Calibration, see “When error codes appear” (page 37) to solve the problem. For other messages, see “SIRIUS Satellite Radio message list” (page 80).

PROTECTOR

Irregular current is output to the speakers, or the upper panel of the receiver is covered with something. The receiver will automatically turn off after a few seconds. Check the speaker connection and turn on the power again.

If you are unable to remedy the problem using the troubleshooting guide

Clearing the receiver’s memory may remedy the problem (page 32). However, note that all memorized settings will be reset to their factory settings and you will have to readjust all settings on the receiver.

If the problem persist

Consult your nearest Sony dealer. Note that if service personnel changes some parts during repair, these parts may be retained.

In the event of a problem with S-AIR function, have a Sony dealer check the entire system together (S-AIR main unit and S-AIR sub unit).

Reference sections for clearing the receiver’s memory

To clear	See
All memorized settings	page 32
Customized sound fields	page 67

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 8 ohm loads, both channels driven, from 20 Hz – 20,000 Hz; rated 100 watts per channel minimum RMS power, with no more than 0.09% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

- Power Output¹⁾
 - Minimum RMS Output Power (8 ohms, 20 Hz – 20 kHz, THD 0.09%)
 - 100 W + 100 W
 - Stereo Mode Output Power (8 ohms, 1 kHz, THD 1%)
 - 110 W + 110 W
 - Surround Mode Output Power²⁾ (8 ohms, 1 kHz, THD 10%)
 - 150 W per channel

¹⁾Measured under the following conditions:
120 V AC, 60 Hz

²⁾Reference power output for front, center, surround and surround back speakers. Depending on the sound field settings and the source, there may be no sound output.

- Frequency response
 - Analog
 - 10 Hz – 70 kHz, +0.5/–2 dB (with sound field and equalizer bypassed)
- Input
 - Analog
 - Sensitivity: 500 mV/50 kohms
 - S/N³⁾: 96 dB (A, 500 mV⁴⁾)
 - Digital (Coaxial)
 - Impedance: 75 ohms
 - S/N: 100 dB (A, 20 kHz LPF)
 - Digital (Optical)
 - S/N: 100 dB (A, 20 kHz LPF)

- Output (analog)
 - AUDIO OUT
 - Voltage: 500 mV/10 kohms
 - SUBWOOFER
 - Voltage: 2 V/1 kohm
- Equalizer
 - Gain levels
 - ±10 dB, 1 dB step
- ³⁾INPUT SHORT (with sound field and equalizer bypassed).
- ⁴⁾Weighted network, input level.

FM tuner section

- Tuning range
 - 87.5 MHz – 108.0 MHz
- Antenna (aerial)
 - FM wire antenna (aerial)
- Antenna (aerial) terminals
 - 75 ohms, unbalanced
- Intermediate frequency
 - 10.7 MHz

AM tuner section

- Tuning range
 - With 10-kHz tuning scale:
 - 530 kHz – 1,710 kHz
 - With 9-kHz tuning scale:
 - 531 kHz – 1,710 kHz
- Antenna (aerial)
 - Loop antenna
- Intermediate frequency
 - 450 kHz

Video section

- Inputs/Outputs
 - Video:
 - 1 Vp-p, 75 ohms
- COMPONENT VIDEO:
 - Y: 1 Vp-p, 75 ohms
 - PB/CB: 0.7 Vp-p, 75 ohms
 - PR/CR: 0.7 Vp-p, 75 ohms
 - 80 MHz HD Pass Through

General

Power requirements 120 V AC, 60 Hz
Power output (DIGITAL MEDIA PORT)
DC OUT: 5V, 0.7 A MAX

Power consumption

Area code	Power consumption
U, CA	240 W

Power consumption (during standby mode)
0.9 W
(When “CTRL:HDMI” in
HDMI menu is set to
“CTRL OFF” and “S-AIR
STBY” in S-AIR menu is
set to “STBY OFF”)

Dimensions (width/height/depth) (Approx.)
17 × 6 1/4 × 12 3/4 inches
(430 × 157.5 × 322 mm)
including projecting parts
and controls

Mass (Approx.) 18 lb 5 oz (8.3 kg)

Supplied accessories

- Operating instructions (this manual)
- Quick Setup Guide (1)
- FM wire antenna (aerial) (1)
- AM loop antenna (aerial) (1)
- Remote commander (RM-AAP043) (1)
- R6 (size-AA) batteries (2)
- Optimizer microphone (ECM-AC2) (1)

For details on the area code of the component you are using, see page 4.

Design and specifications are subject to change without notice.

Halogenated flame retardants are not used in the certain printed wiring boards.

Index

Numerics

2CH STEREO 66

5.1 channel 17

7.1 channel 17

A

AUTO CALIBRATION 33

AUTO FORMAT DIRECT
(A.F.D.) 61

B

BI-AMP 52

Bi-amplifier connection 100

Blu-ray disc player

connecting 28

playback 44

C

Camcorder

connecting 30

CD player

connecting 23

playback 43

CD recorder

connecting 23

D

DIGITAL MEDIA PORT

connecting 97

input 41

Dolby Digital 109

Dolby Digital EX 60

DTS 110

DVD player

connecting 27

playback 44

DVD recorder

connecting 30

E

Error messages 118

H

HDMI

connecting 25

I

Initial setup 32

INPUT MODE 93

M

Menu

AUDIO 56

AUTO CAL 38

EQ 55

HDMI 58

LEVEL 50

S-AIR 59

SPEAKER 51

SURROUND 54

SYSTEM 59

TUNER 55

VIDEO 57

Muting 42

N

Naming 39, 42, 71

NIGHT MODE 65

O

One-Touch Play 83

P

PAIRING 88

Parental Lock 77

Phase Audio 50

Phase Noise 50

R

Recording

onto a CD-R 99

onto a recording media

100

Remote commander 12

S

S-AIR 85

Satellite tuner/Set-top box

connecting 29

Selecting

component 41

sound field 64

speaker system 33

SIRIUS Satellite Radio 71

Sleep Timer 99

Sound fields

resetting 67

selecting 64

Speakers

connecting 18

installing 17

Super Audio CD player

connecting 23

playback 43

System Audio Control 84

System Power Off 84

T

Test Tone 50

Tuner

connecting 31

Tuning

automatically 68

directly 68

to preset stations 70

TV

connecting 21

V

VCR

connecting 30

Video game

connecting 30



* 4 1 3 1 7 2 3 1 1 * (1)